

INTEL



Core Plus

PWM | ARGB CPU AIR COOLER



Socket : LGA 1200 / 115X / 775

Socket : FM1 / FM2 / AM4 / AM3+ / AM3 / AM2+ / AM2

User's Manual

Manual del usuario

Bedienungsanleitung

Manuel d'utilisation

Manuale dell'utente

Podręcznik użytkownika

Руководство пользователя

Manual de utilizador

使用説明書/使用说明书








ユーザーズマニュアル

нұсқаулары

Talimatlar

INTEL

INTEL

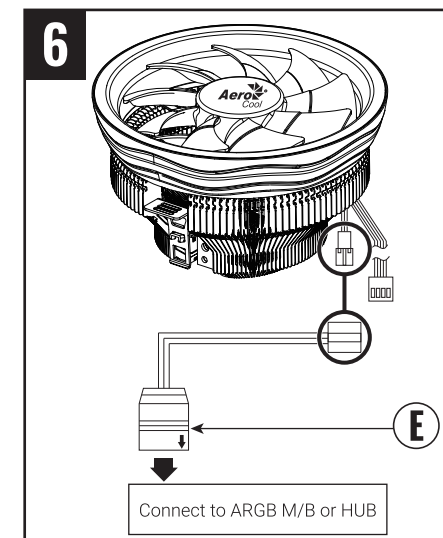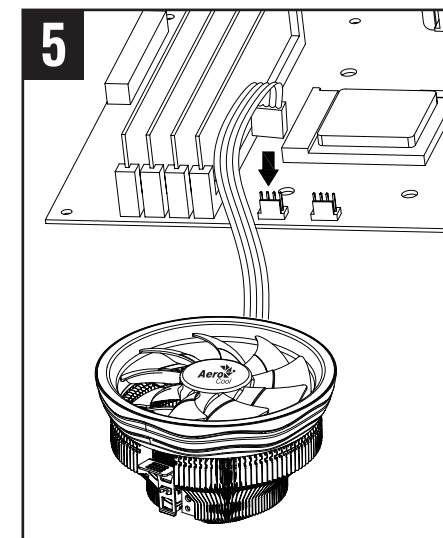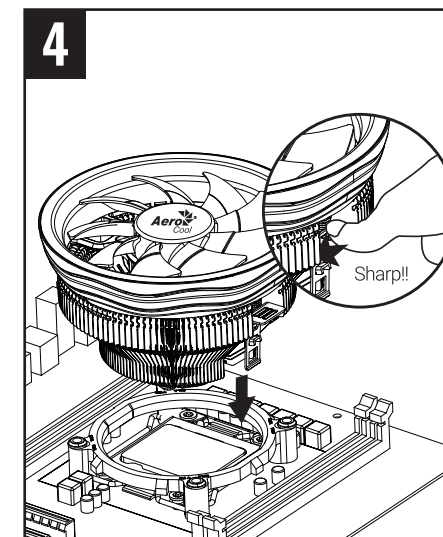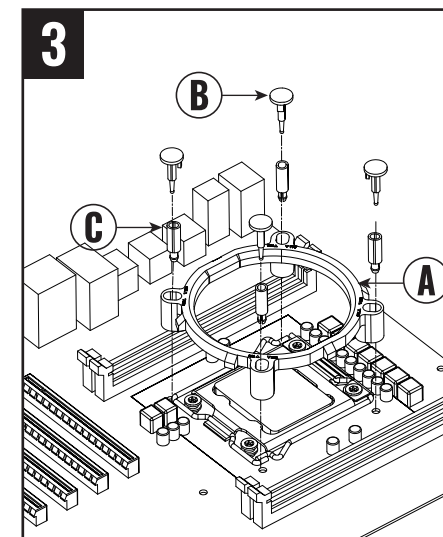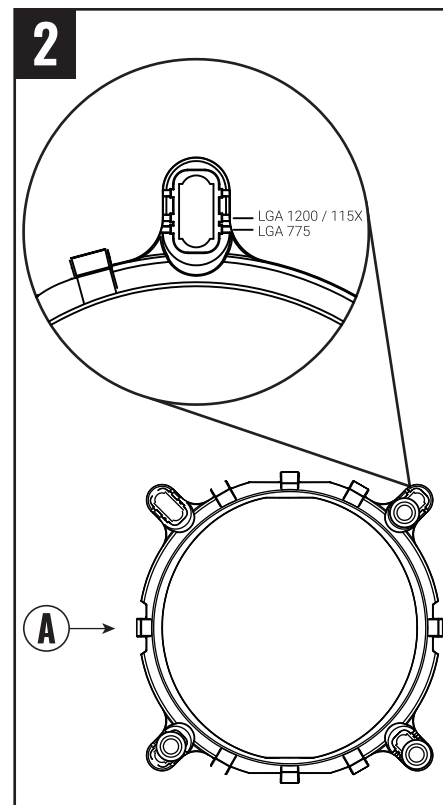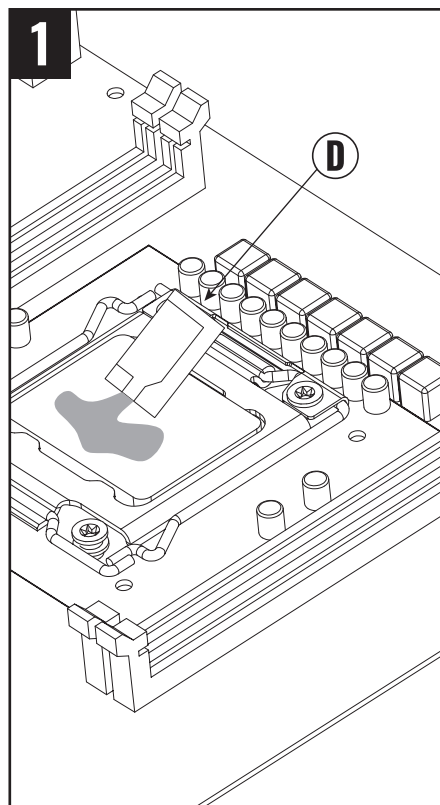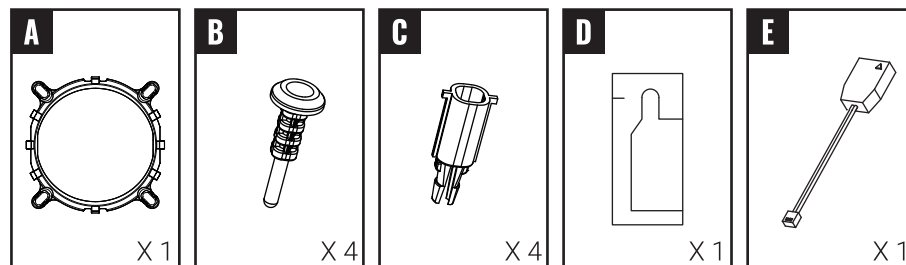

AMD

AMD

AMD



Core Plus

PWM | ARGB CPU AIR COOLER



Socket : LGA 1200 / 115X / 775

Socket : FM1 / FM2 / AM4 / AM3+ / AM3 / AM2+ / AM2

User's Manual

Manual del usuario

Bedienungsanleitung

Manuel d'utilisation

Manuale dell'utente

Podręcznik użytkownika

Руководство пользователя

Manual de utilizador

使用説明書/使用说明书

ユーザーズマニュアル

нұсқаулары

Talimatlar

