

[Skip to content](#)

## **Manuals+**

User Manuals Simplified.



# **Cell2 4 LED R65 Lighthouse Recovery Emergency Flashing User Manual**

[Home](#) » [Cell2](#) » Cell2 4 LED R65 Lighthouse Recovery Emergency Flashing User Manual

**Contents** [hide](#)

[1 Cell2 4 LED R65 Lighthouse Recovery Emergency Flashing](#)

[2 WIRING](#)

[3 FLASH PATTERN](#)

[4 Documents / Resources](#)

[5 Related Posts](#)



## **Cell2 4 LED R65 Lighthouse Recovery Emergency Flashing**



### **4-LED R65 LIGHTHEAD**

12-24 VDC

### **WIRING**

- RED: To +VDC (fuse@ 1A)
- BLACK: To Chassis Ground
- WHITE: To +VDC for steady-burn
- YELLOW: For Synchronization:

Connect YELLOW wires of all heads together for synchronization (All heads should be set at the same Flash Pattern)

#### **For Simultaneous or Alternating Flash:**

1. Apply +VDC to RED and YELLOW wires simultaneously to enter Grouping mode; lighthead will display short (single or double) flashes:
  - Double flash = Group2
2. Remove YELLOW wire from +VDC then momentarily apply it to +VDC to change Groups:
  - Heads in the same Group flash together.
  - Group1 Heads alternate with Group2 heads.

3. Power-off to save and exit setting.

#### For Flash Pattern:

momentarily apply +VDC to YELLOW wire:

- once for next pattern
- quick three times to reset to FP#1

## FLASH PATTERN

1. Single (2Hz)
2. Double (R65)
3. Triple (2Hz)
4. Quad (2Hz)
5. All Steady

**NOTE:** This unit may not be factory-set at Flash Pattern #1

## Documents / Resources



[Cell2 4 LED R65 Lighthead Recovery Emergency Flashing](#) [pdf] User Manual

4 LED R65 Lighthead Recovery Emergency Flashing, 4 LED, R65 Lighthead Recovery Emergency Flashing, Recovery Emergency Flashing, Emergency Flashing, Flashing

## Manuals+,

- [home](#)
- [privacy](#)