



# Cell2 B16-REVO LED Rotating Beacon User Manual

[Home](#) » [Cell2](#) » Cell2 B16-REVO LED Rotating Beacon User Manual 

## Contents

- [1 Cell2 B16-REVO LED Rotating Beacon](#)
- [2 3 Bolt Mount](#)
- [3 Magnetic Mount](#)
- [4 DIN Mount](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)




**Cell2 B16-REVO LED Rotating Beacon**




**WARNING:** Burn Hazard. Hot Surface Inside. Allow to cool before opening for servicing.

### 3 Bolt Mount

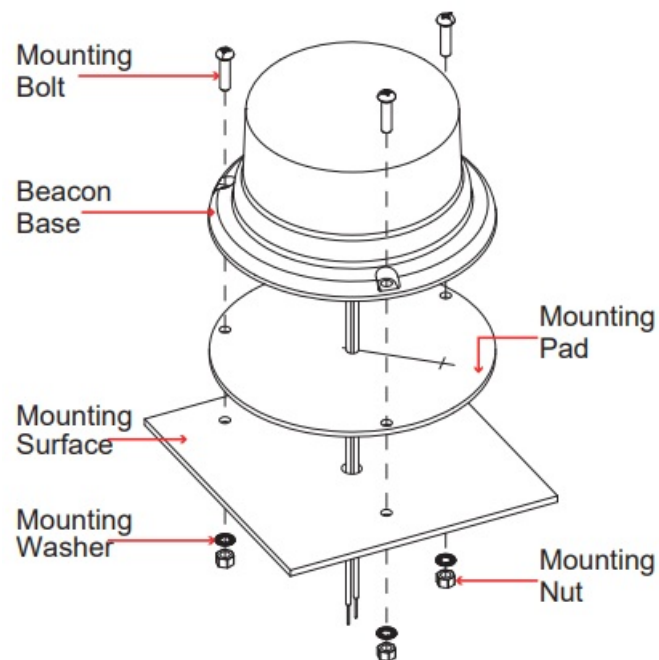

1. Drill holes on the mounting surface for the wire-exit and mounting bolts.
2. Secure the beacon onto the mounting surface with mounting bolts.


### Magnetic Mount

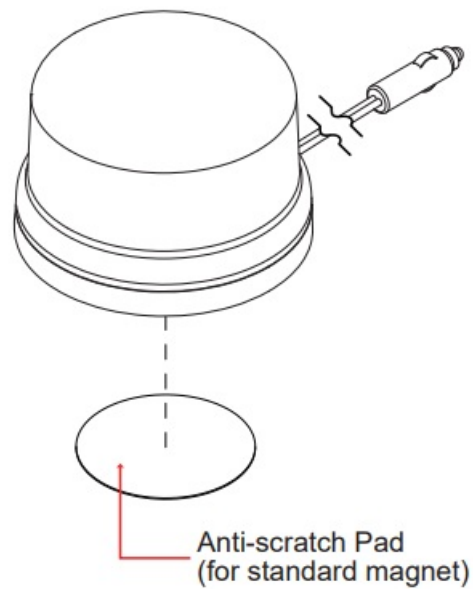

#### **WARNING:**

It is not recommended to use magnetically mounted warning devices on outside of vehicle in motion. Usage is at the sole risk and responsibility of the user. (For moving vehicles, please use Power Mags)

#### **DIN Mount**

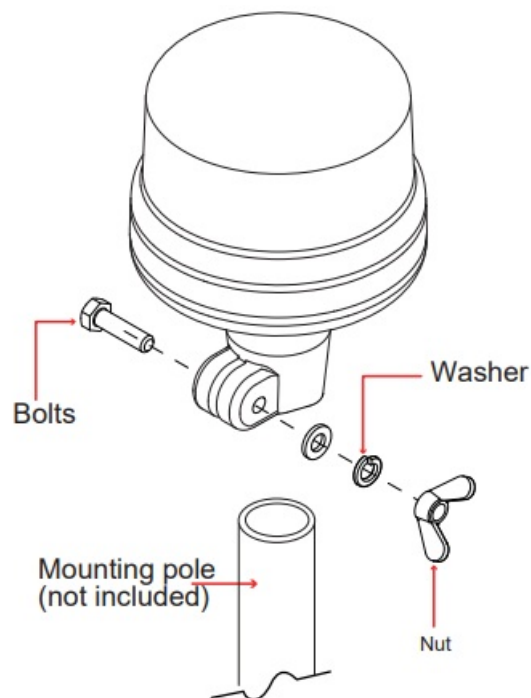

#### **WIRING**

- RED: To +VDC
- BLACK: To Chassis Ground (-)
- FLASH PATTERNS: Rotator [R65]

#### **Documents / Resources**



## [Cell2 B16-REVO LED Rotating Beacon](#) [pdf] User Manual

B16-REVO LED Rotating Beacon, B16-REVO, LED Rotating Beacon, Rotating Beacon, Beacon