



Cell2 SQ4 – RC 4 LED LightHead User Manual

[Home](#) » [Cell2](#) » Cell2 SQ4 – RC 4 LED LightHead User Manual 

Contents

- [1 Cell2 SQ4 – RC 4 LED LightHead](#)
- [2 WIRING](#)
- [3 FLASH PATTERN](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



Cell2 SQ4 – RC 4 LED LightHead



4-LED LIGHTHEAD 224 VDC

WIRING

- **RED:** To +VDC (fuse @ 3A)
- **BLACK:** To Chassis Ground
- **WHITE:** For steady burn, apply +VDC
- **YELLOW:** For Synchronization:

Connect YELLOW wires of all heads together for synchronization (all heads must be set at the same pattern)

For Simultaneous or Alternating Flash:


1. Apply +VDC to RED and YELLOW wires Simultaneously to enter Grouping: lighthead will display short (single or double) flashes: Single flash Group1 Double flash Group2
2. Momentarily apply +VDC to YELLOW wire to change Groups: Heads in the same Group flash together. Group1 Heads alternate with Group2 Heads. Double flash Group2

For Flash Patterns:

Momentarily apply +VDC to YELLOW wire:

- once for next pattern
- quickly three times for pattern 0

FLASH PATTERN

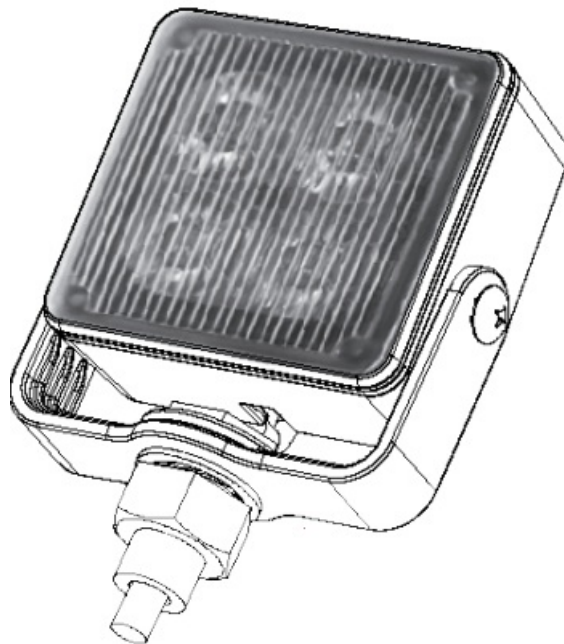


- Random
- Single (split)
- Double (split)
- Quad (split)
- Quint (split)
- Mega (split)
- Ultra (split)
- Single-Quad (split)
- Single H/L (split)

- Single (all)
- Double (all)
- Quad (all)
- Quint(all)
- Mega (all)
- Ultra (all)
- Single-Quad (all)
- Single H/L (all)
- Steady (ca)
- Steady 4 (all)

Note: This unit is not factory set at pattern 0

Documents / Resources

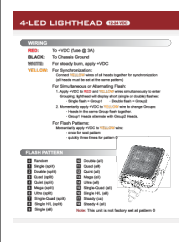

[Cell2 SQ4 - RC 4 LED LightHead \[pdf\] User Manual](#)
 SQ4 - RC 4 LED LightHead, SQ4 - RC, 4 LED LightHead, LightHead