



Cello TR186-GR Digital 4 Slice Toaster with Touch Control and Timer Owner’s Manual

[Home](#) » [Cello](#) » Cello TR186-GR Digital 4 Slice Toaster with Touch Control and Timer Owner’s Manual 

Contents

- 1 Cello TR186-GR Digital 4 Slice Toaster with Touch Control and Timer
- 2 Product Information
- 3 Product Usage Instructions
- 4 Documents / Resources
 - 4.1 References
- 5 Related Posts



Cello TR186-GR Digital 4 Slice Toaster with Touch Control and Timer



Product Information

Specifications:

- **Model:** CELLO-TR186-GR

- **Description:** Digital 4 Slice Toaster with Touch Control and Timer
- **EAN:** 5060750403617
- **Colour:** Sage Green
- **Power:** 50Hz, 220 – 240V, 1600-1900W
- **Product Dimensions:** 32.5cm x 27.8cm x 19cm
- **Giftbox Dimensions:** 35cm x 30cm x 22cm
- **Export Carton Dimensions:** 64.5cm x 36.3cm x 24cm
- **Product Weight:** 2.4kg
- **Gross Weight (Giftbox):** 3.6kg
- **Gross Weight (Export Carton):** 7.9kg

Product Usage Instructions

1. Toast Timer Feature

Utilize the illuminated digital countdown timer to know precisely when your toast is ready. Keep your kitchen clean with the easy-to-clean removable crumb tray.

2. Browning Levels Adjustment

Easily adjust the browning levels to achieve your preferred toast shade, whether you like it golden brown or well-done.

3. Multi-Functionality

The toaster features automatic, self-adjusting toasting slots that allow you to toast a variety of bread types, from bagels to thick or thin slices, all at the touch of a button.

FAQ (Frequently Asked Questions)

• Q: Can I toast frozen bread slices in this toaster?

A: Yes, you can toast frozen bread slices in this toaster. Adjust the browning level according to your preference.

• Q: How do I clean the toaster?

A: To clean the toaster, ensure it is unplugged and cool. Remove the crumb tray and dispose of any crumbs. Wipe the exterior with a damp cloth and dry thoroughly before use.

• Q: Can I cancel the toasting cycle midway?

A: Yes, you can cancel the toasting cycle at any time by pressing the cancel button or lifting the lever.

Digital 4 Slice Toaster with Touch Control and Timer

Feeding the family. This toaster can tackle all your favourite breads

- Thick, thin, small or large, and with a clever digital countdown display you'll know exactly when your hot toast and warm bagels are ready to serve.

TOAST TIMER

Know the exact moment your toast is ready with the illuminated digital countdown timer, and keep your kitchen worktop nice and tidy with an easy-clean removable crumb tray

YOUR TOAST, YOUR WAY


Whether you prefer your toast golden brown or a little more well-done, with multiple browning levels at your fingertips this is your toast, your way.

MULTI-FUNCTION

With automatic, self adjusting toasting slots you can now brown the perfect bagel or toast your favourite thick or thin slices at the touch of a button.

| | |
|------------------------------|--|
| EAN | 5060750403617 |
| Colour | Sage Green |
| Specification | <ul style="list-style-type: none"> • Wide slots • Digital Touch Panel • 'Toast Ready' Countdown timer • Bagel function, reheat and defrost • Detachable washable crumb tray • 7 level browning function • 1900W power • High lift • Anti-jam • Easy clean matt housing |
| What's in the box? | <ul style="list-style-type: none"> • 2 x detachable easy clean crumb tray • User guide |
| Power | 50Hz, 220 – 240V, 1600-1900W |
| Product Dimensions | 32.5cm x 27.8cm x 19cm |
| Giftbox Dimensions | 35cm x 30cm x 22cm |
| Export Carton Dimensions | 64.5cm x 36.3cm x 24cm |
| Product Weight | 2.4kg |
| Gross Weight (Giftbox) | 3.6kg |
| Gross Weight (Export Carton) | 7.9kg |

Documents / Resources

| | |
|---|---|
|  | <p>Cello TR186-GR Digital 4 Slice Toaster with Touch Control and Timer [pdf] Owner's Manual TR186-GR, TR186-GR Digital 4 Slice Toaster with Touch Control and Timer, TR186-GR, Digital 4 Slice Toaster with Touch Control and Timer, Slice Toaster with Touch Control and Timer, Toaster with Touch Control and Timer, with Touch Control and Timer, Touch Control and Timer, Control and Timer, and Timer, Timer</p> |
|---|---|

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.