



celly Multifunction Speaker User Manual

[Home](#) » [celly](#) » **celly Multifunction Speaker User Manual** 

Contents

[1 Celly® Multifunction Speaker User Manual](#)

[1.1 Notes on safety](#)

[1.2 Warnings](#)

[1.3 Reload](#)

[1.4 Loading devices](#)

[1.5 Pairing](#)

[1.6 Automatic reconnection](#)

[1.7 Multifunction buttons:](#)

[1.8 Cleaning](#)

[1.9 Storage](#)

[1.10 Technical specifications](#)

[2 Documents / Resources](#)

[2.1 References](#)

[3 Related Posts](#)

Celly® Multifunction Speaker User Manual

Model: SPEAKERBIKE

Rev00 – 23.01.2021



Read this user manual and especially the safety notes before using the product. Keep the user manual for future reference and include it when passing the product to a third party. Esprinet S.p.A. will not be held responsible in any way for injuries or damage caused to persons or property resulting from improper use of the product.

Notes on safety

Do not use the product if it is damaged.

Never touch the product with wet or damp hands.

Avoid listening at volumes that are too high, especially for prolonged periods while using the product; use at high volume could prevent listening to external noises or create distractions that are dangerous for safety. If you use the product at an excessive volume, it could permanently damage your hearing.

Listen at a moderate volume.

Also observe the laws and regulations of the country in which you use the product.

Do not use in humid environments or in the rain.

Do not insert metal objects such as keys or paper clips into the product openings.

To prevent malfunction or damage to the product, avoid accidental falls, do not crush, puncture or exert a high level of pressure on the product.

Keep away from moisture, water or other liquids. If the product comes into contact with water, moisture or other liquids, do not use it to avoid electric shock or damage.

Do not store or expose the product to heat sources, direct sunlight, radiators, stoves or other heat sources such as the car dashboard in summer.

Never use the product unsupervised. During operation, the housing may overheat. Do not cover the product during use.

Never use the product when changing from a cold to a warm environment. Condensation may occur and, in some cases, damage the product.

Allow the product to reach room temperature before connecting and using it again. It may take several hours.

Usage temperature: 0–40 ° C.

Do not attempt to modify, repair or disassemble the product.

Do not use a damaged product.

Never use aggressive detergents, alcohol or other chemical solutions for cleaning as they can damage the housing or even compromise the functionality of the product.

Disconnect all connected cables before starting cleaning. Do not immerse the product in water or other liquids.

There are no serviceable parts inside the product. Never open / disassemble it.

Always turn off the LED light when not in use. NEVER look directly into the LED light or point it into someone's eyes when it is on.

Keep the product out of the reach of children. Do not allow children or people with disabilities to use electrical products without supervision. Make sure children do not play with the plastic wrap. They could swallow it while playing and choke.

Warnings

1. The outlet must be installed close to the equipment and easily accessible. Keep out of reach of children. Do not open or damage the device. Keep away from water and heat.
2. Check the output of the USB charger you will be using and make sure it is safe before connecting it to the product. Do not use this product with a damaged adapter or a damaged cable.
3. This product may turn on or off under strong electromagnetic waves.
4. The light source of this product cannot be replaced, when the light source ends its life cycle, the whole product should be replaced.

Reload

For the first use, charge the device until it is fully charged. To recharge the product, use the micro USB charging cable included in the package. Insert the smaller end of the cable into the product's microUSB port.

Connect the larger end of the cable to a USB port (DC 5V, 1A) of a charging socket or a personal computer. The flashing red light indicates that the product is in the charging state, when the light remains on the device will be fully charged.

Loading devices

Make sure the product is sufficiently charged. Before charging your device, make sure that the technical characteristics (voltage and current) are compatible with the product.

Connect the device to the USB port of the product using the original cable that came with your device. Charging of the device will start.

Disconnect the device cable from the product and your smartphone after charging

Pairing

Place the speaker and the pairing device within 1 meter of each other. Turn on the product by pressing and holding the power button for about 3 seconds. Activate the WIRELESS function of the device you intend to pair. Search for the device from WIRELESS menu and select "SPEAKERBIKE" to start the connection. If prompted for a password, enter "0000".

It is also possible to insert a microSD card (Transflash) and play the songs contained inside.

Automatic reconnection

Once the product and the pairing device have been paired, they will automatically reconnect if they are within a short distance of each other and the wireless function of the pairing device is activated.

Multifunction buttons:

Function	Press the button	Timing
Power On / Off		3 seconds
Play / Pause		1 click
Most Recent Call		2 clicks
Volume -		1 click
Volume +		1 click
Maximum Torch Power		1 click
Minimum Torch Power		2 clicks
Intermittent Flashlight		3 clicks

Cleaning

Disconnect all cables before cleaning. If necessary, clean the product with a damp cloth and allow it to dry completely before use. Use a clean brush with soft, long bristles to remove dust from the connectors. Do not use solvents, corrosive or gaseous detergents. Make sure that no water or other liquids enter the housing.

Storage

Store the product in a clean and dry area. Keep it away from direct sunlight.



CUSTOMER'S INFORMATION FOR RIGHT WASTE OF THIS PRODUCT (Directive 2013/56/EU)

The crossed-out bin symbol shown on the equipment or on its packaging indicates that the product at the end of its useful life, including the non-removable battery, must be collected separately from other waste to allow for proper treatment and recycling. The safe use of this product is guaranteed in compliance with the following instructions, therefore it is necessary to keep them and follow them scrupulously throughout the life of the product. The product does not require technical maintenance, NEVER DISASSEMBLE IT. The battery inside is integrated and not replaceable. Do not try to remove the built-in Lithium Ion / Polymer battery yourself as it may cause overheating, fire and injury. The battery should only be removed by independent qualified professionals who are able to remove it safely and disposed of in accordance with applicable laws. The user must, therefore, give the equipment at the end of its life free of charge to the appropriate municipal centers for the separate collection of electrical and electronic waste, or return it to the retailer, on a one-by-one basis, or free of charge for appliances with smaller external dimensions.

to 25 cm. Adequate separate collection for the subsequent sending of the decommissioned equipment for recycling, treatment and environmentally compatible disposal helps to avoid possible negative effects on the environment and health and favors the reuse and / or recycling of the materials of which it is composed the equipment. Illegal disposal of equipment, batteries and accumulators by the user involves the application of the penalties provided for in the current legislation.

Technical specifications

Technology: Wireless

Input: DC 5V / 1A

Output: DC 5V / 1A

Listening time: 10h

Charging time: 3-5h

Battery: Lithium 3600 mAh

Wireless range: 10m
Software: AC6925E
Frequency: 2.408-2.480GHz
Maximum radiated power: <20mW
Maximum speaker power: 5W
Speaker diameter: 40mm
Frequency response: 20Hz-20KHz
LED light: 3W
LED life: 30.000-50.000 hours (not replaceable at the end of life)



This product complies with RoHS 2011/65 / EU – 2015/863 / EU. The product carries the CE mark and complies with the safety standards established by the European Union.

Hereby, Esprinet SpA declares that the product complies with Directive 2014/53 / EU. The full text of the EU declaration of conformity is available at the following Internet address: www.celly.com/exchange/CELLY-SPA/Dichiarazioni_di_conformita/SPEAKERBIKEBK/DOC_SPEAKERBIKEBK.pdf

Celly® is a registered trademark owned by CELLY S.p.A.

All registered trademarks are the property of their respective owners.

ESPRINET S.p.A., via Energy Park 20, 20871 Vimercate – MB (ITALY)

Made in China

Documents / Resources

	celly Multifunction Speaker [pdf] User Manual Multifunction Speaker, SPEAKERBIKE
---	--

References

- [Celly.com](http://www.celly.com)

[Manuals+](#)