



CENTSYS G-Speak Ultra Gsm-Based Intercom System User Guide

[Home](#) » [CENTSYS](#) » CENTSYS G-Speak Ultra Gsm-Based Intercom System User Guide 



G-SPEAK ULTRA))) G-Speak Ultra Gsm-Based Intercom System User Guide



Contents

- [1 Important Safety Instructions](#)
- [2 Technical Specifications](#)
- [3 Product Identification](#)
- [4 Device Layout and Wire Connections](#)
- [5 LCD Interface](#)
- [6 Configurations](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Important Safety Instructions

1. Do not install this product near DOSS sensor inside gate motor housing or near the remote receiver.
2. Do not install this product near any sensitive electrical components.
3. All installation, repair, and service work to this product must be done by a suitably-qualified person.
4. Do not in any way modify the components of the system.
5. Do not install the equipment in an explosive atmosphere: the presence of flammable gas or fumes is a serious danger to safety.
6. Do not leave packing materials (plastic, polystyrene, etc.) within reach of children as such materials are potential sources of danger.
7. Dispose of all waste products like packing materials, according to local regulations.
8. Centurion Systems (Pty) Ltd does not accept any liability caused by improper use of the product, or for use other than that for which the automated system was intended.
9. This product was designed and built strictly for the use indicated in this documentation. Any other use, not expressly indicated here, could compromise the service life/operation of the product and/or be a source of danger.
10. Anything not expressly specified in these instructions is not permitted.



This icon denotes variations and other aspects that should be considered during installation.



This icon indicates tips and other information that could be useful during the installation.

Technical Specifications

Supply Voltage Range	11-24V DC
Maximum Current Draw	300mA @ 12V DC
Input/output Current Rating	50mA (Open Collector)
Input Sense Voltage Range	0-24V DC (0-1.6V Low-input State, 5V-24V High-input State)
Network Provider	MTN – South Africa Only
Number of Configurable Input/ output Channels	4
Call Buttons on Calling Module	2
Call confirmation at Calling Module	Yes
Model Options	GSM 2G: 850/900/1800/1900MHz (EDGE) GSM 3G: 900/2100MHz (EDGE) 900/2100MHz (UMTS) GSM 3G PENTA: 800/850/900/1900/2100MHz (UMTS) GSM 4G/LTE-CAT1: 900/2100MHz

Product Identification

3.1. G-SPEAK ULTRA



FIGURE 1

1. Fascia	5. Terminal Blocks
2. External Antenna Cover	6. Navigation panel
3. Main Unit	7. LCD Screen
4. Mounting Plate	

Device Layout and Wire Connections

Optional: External Antenna

NOTE:

The Internal Antenna is selected by default.




LCD Interface

Table 2 below lists the information shown on the different screens found on the LCD interface. The left and right scroll buttons are used to toggle between the different screens.




Home Screen

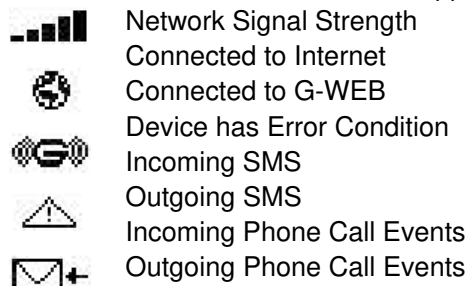 Network Name or Phone Number Applicable to Incoming / Outgoing SMS or Call.




IO Status Screen

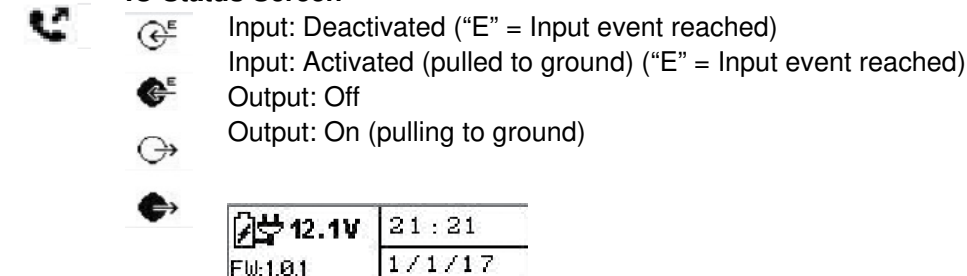 

Voltage/Firmware/Date & Time Screen

 - Supply Voltage
- Firmware Version
- Time
- Date



Phone Number Screen

 
Device SIM Phone Number.



Airtime Balance Screen



Press Enter to Refresh Airtime Balance from Network Provider.



GSM Antenna Selected Screen



 
Internal GSM Antenna Selected (default).



External GSM Antenna Selected (connect own Antenna to SMA connector).



Press Enter to change between Internal and External Antennas.



Gate Status Screen



Gate Closed



Gate Opening



Gate Open



Gate Status Warning



SIM Screen



SIM PIN OK



SIM PIN Incorrect

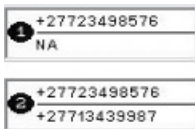 


SIM Error



IMEI Screen

Displays the device's IMEI number



Gate station Voice Numbers

Displays the primary and secondary Voice Numbers allocated to their respective buttons

Configurations

6.1. Removing the Mounting Plate and Fascia Cable entry

To access the terminal blocks of the G-SPEAK ULTRA, the back plate and fascia need to be removed. Follow the instructions below to do this.

6.1.1. Removing the Mounting Plate

Gently pull the two clips at the back backward to release the main G-SPEAK ULTRA unit, and lift the unit out of the mounting plate.


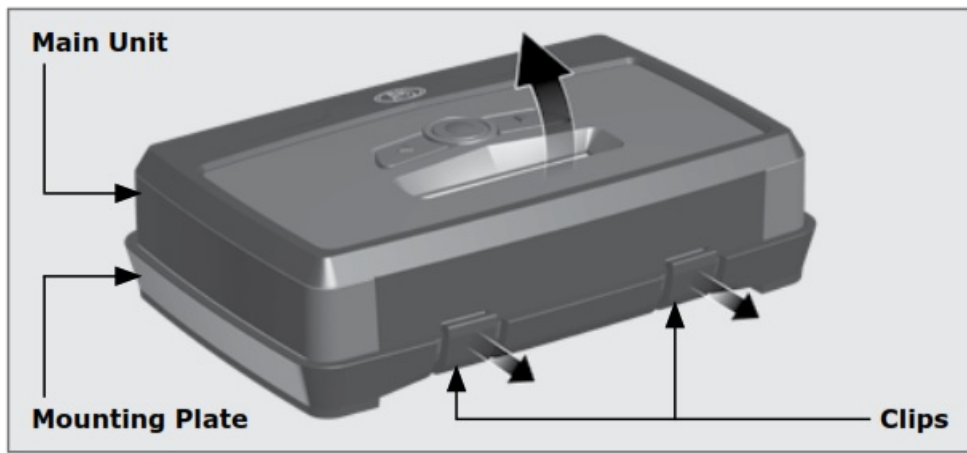 
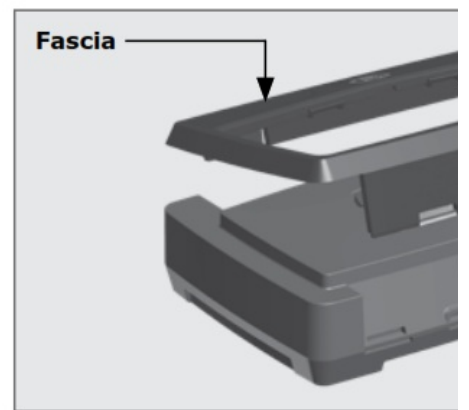 


FIGURE 3

6.1.2. Removing the Fascia

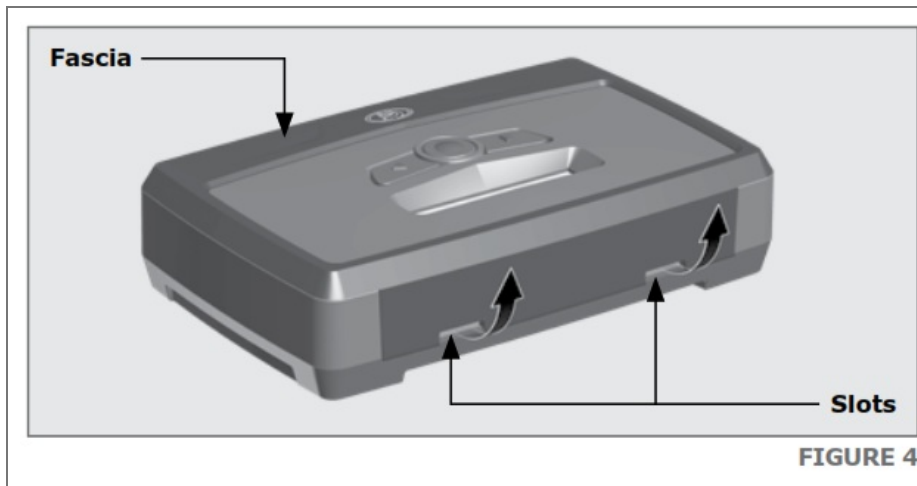 The fascia can be removed by inserting the tips of one's fingers into the slots (as shown in Figures 4 and 5), and pulling outward and upward. The fascia should pop off without effort.



Reverse the procedure under Section 6.1 to re-assemble the G-SPEAK ULTRA.

6.2. Calling Module

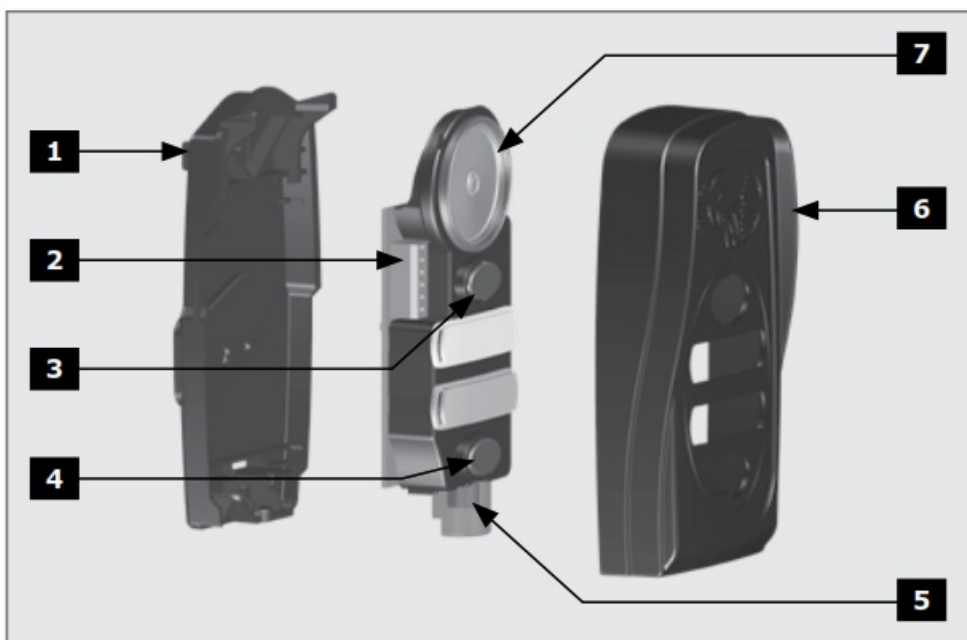 


FIGURE 6

1. Back Cover / Mounting Panel
2. Voice Communication Terminals
3. Call Button 1
4. Call Button 2

5. Microphone
6. Front Cover / Fascia
7. Speaker


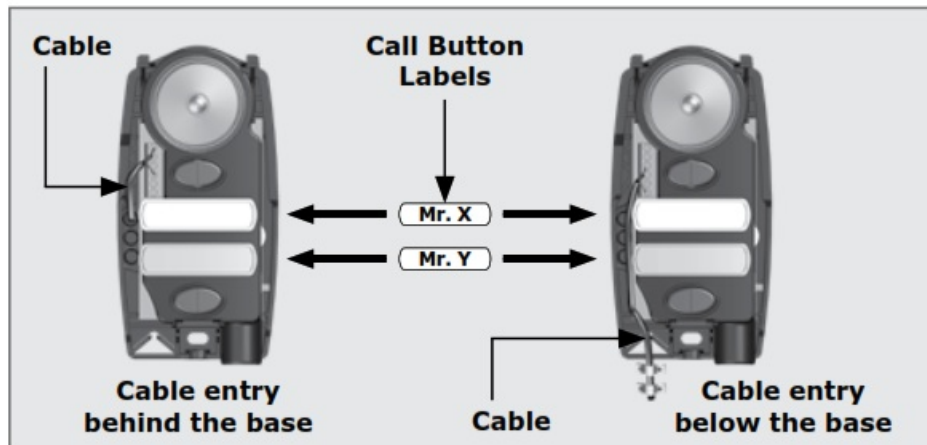 
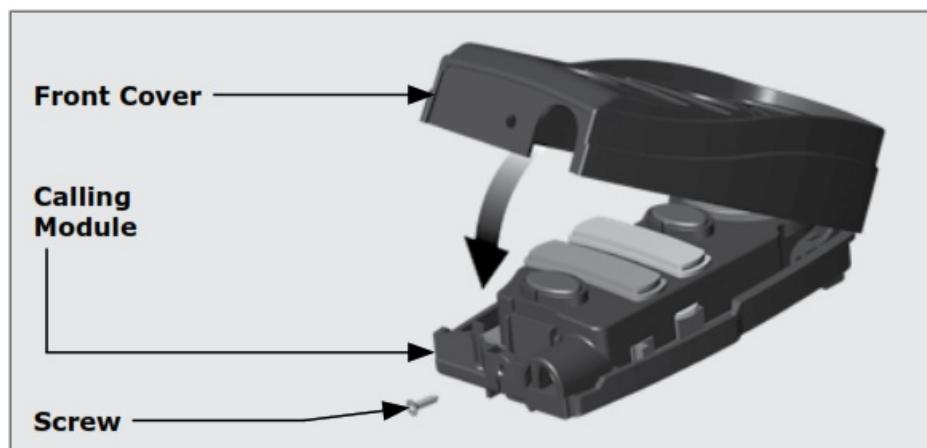 
**FIGURE 7**

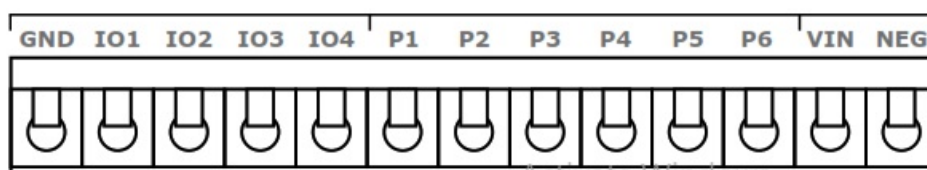 FIGURE 8



GND	Ground
IO1	Input / Output 1 (Default: Output)
IO2	Input / Output 2 (Default: Output)
IO3	Input / Output 3 (Default: Output)
IO4	Input / Output 4 / Gate Status Input (Default: Output)
P1	Data Communication Line
P2	Data Communication Line
P3	Data Communication Line
P4	Data Communication Line
P5	Data Communication Line
P6	Data Communication Line
VIN	Positive of Power Supply 12-24VDC
NEG	Negative of Power Supply

6.3. Wiring Diagrams (Please refer to the online G-ULTRA wiring diagram document for more diagrams)

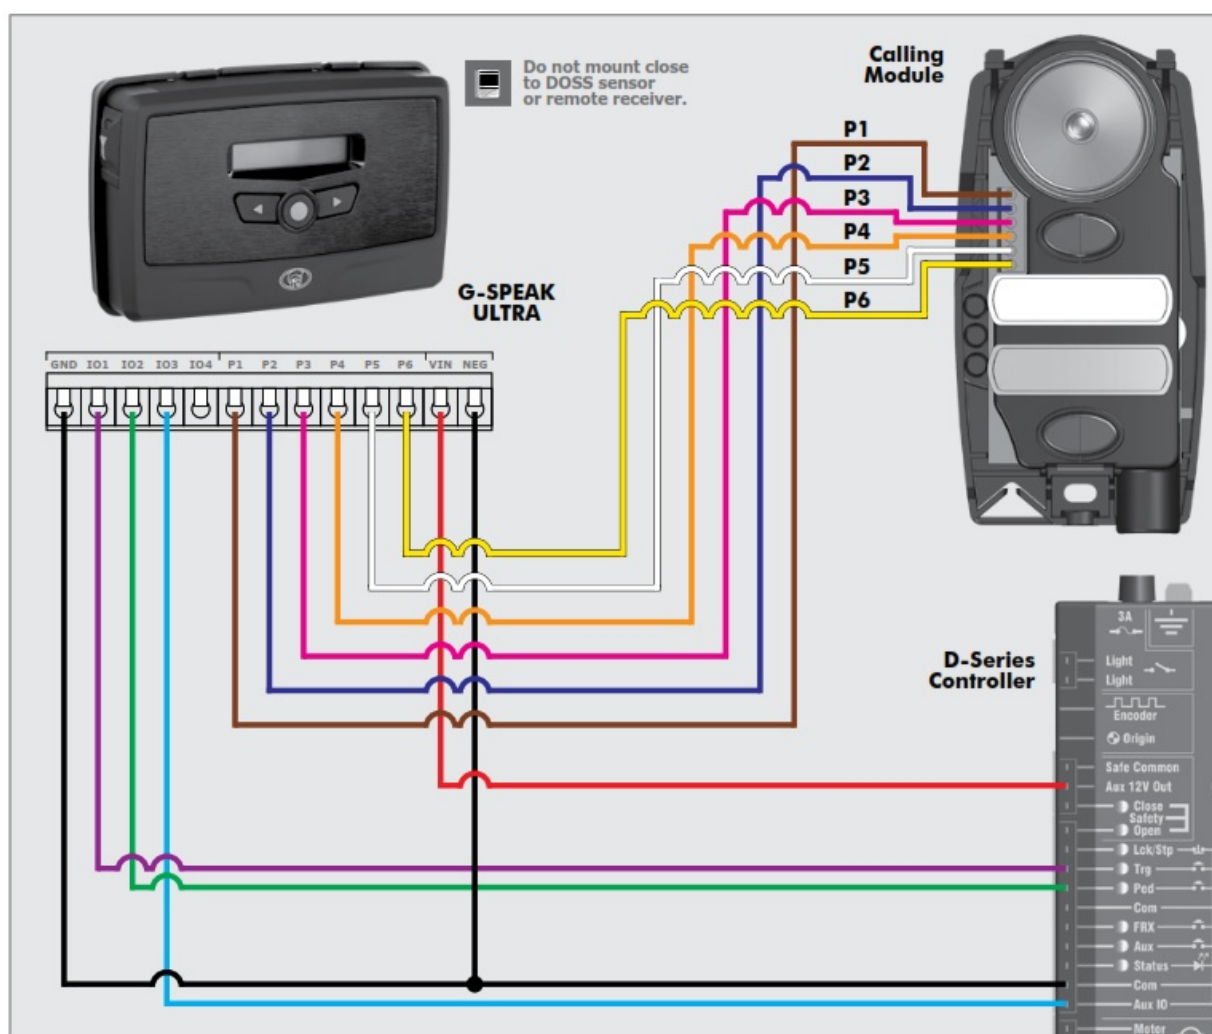 


FIGURE 9



Looking for more wiring diagrams and product applications?
Scan the QR code on your mobile device to be taken to our wiring diagram library.



https://www.centsys.co.za/pdf/prod/gultra/Centurion%20Systems_G-Ultra_G-Speak%20ultra%20Wiring%20Diagrams.pdf

6.4. Configuration of features

All features – both basic and advanced – can be easily, and remotely, configured via our G-WEB Mobile Phone App or our G-WEB Online Interface. By simply logging on to the G-WEB App or G-WEB, one can add and delete users, specify text for input notifications and activations, modify device characteristics and many other features. Download the G-WEB mobile App from your Smart Phone by navigating to the App store or go to <http://www.gweb.co.za>



It would be necessary to register if you have not previously done so

6.4.1. G-WEB Mobile App (Installers)

To download the G-WEB Mobile installer app, simply scan the QR code on your mobile device to be taken to the app in the applicable app store for your operating system. The G-WEB app gives you on-the-go access to a multitude of configuration and admin settings.



https://play.google.com/store/apps/details?id=com.jasper.xamarinapp&hl=en_US&pcampaignid=MKT-Other-global-all-co-prtnr-py-PartBadge-Mar2515-1
<https://apps.apple.com/za/app/g-remote/id1301957990>



There is no need to download a third party QR Scanner, as there is a QR Scanner that is built into the G-WEB Ultra Mobile App.

6.4.2. G-WEB Online (Installers)

Your CENTURION GSM devices can be remotely managed and configured using the G-WEB online interface. Scan the QR code to be taken to G-WEB online.



<https://www.gweb.co.za/>

6.4.3. G-REMOTE Mobile App (Users)

Download the G-REMOTE mobile app now for free by scanning the QR code on your mobile device. G-REMOTE lets you remotely control your GSM devices from your phone and receive push notifications for systems that are being monitored.



https://play.google.com/store/apps/details?id=com.jasper.xamarinapp&hl=en_US&pcampaignid=MKT-Other-global-all-co-prtnr-py-PartBadge-Mar2515-1
<https://apps.apple.com/za/app/g-remote/id1301957990>



Centurion Systems (Pty) Ltd
www.CentSys.com



www.centsys.com

Connect with us on:

 facebook.com/centurionsystems

 YouTube.com/centurionsystems

 @askcenturion

 centurion.systems

Subscribe to the newsletter: www.centsys.com/subscribe

Call Centurion Systems (Pty) Ltd South Africa

Head Office: +27 11 699 2400

Call Technical Support: +27 11

699 2481 from 07h00 to 18h00 (UTC+2)

www.centsys.com.au

Call: 1300 CENTSYS (1300 236 879)

After Hours International Technical Support Call Centre +27 11 699 2481 (16:00 to 02:00 – Australian Eastern Time)



E&OE Centurion Systems (Pty) Ltd reserves the right to change any product without prior notice

All product and brand names in this document that are accompanied by the ® symbol are registered trademarks in South Africa and/or other countries, in favour of Centurion Systems (Pty) Ltd, South Africa.



The CENTURION and CENTSYS logos, all product and brand names in this document that are accompanied by

the TM symbol are trademarks of Centurion Systems (Pty) Ltd, in South Africa and other territories; all rights are reserved. We invite you to contact us for further details.

Documents / Resources

	CENTSYS G-Speak Ultra Gsm-Based Intercom System [pdf] User Guide G-Speak Ultra Gsm-Based Intercom System, G-Speak Ultra, Gsm-Based Intercom System, Intercom System
	centsys G-Speak Ultra GSM Based Intercom System [pdf] User Guide G-Speak Ultra GSM Based Intercom System, G-Speak, Ultra GSM Based Intercom System, Based Intercom System, Intercom System

References

-  [G-WEB LOGIN](#)
-  [CENTSYS D5-SMART - Centsys.com.au](#)
-  [G-WEB LOGIN](#)
-  [G-WEB LOGIN](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.