

**CENTURION
Button
Remote
Control**



CENTURION Button Remote Control Instructions

[Home](#) » [CENTURION](#) » CENTURION Button Remote Control Instructions 

Contents

- [1 CENTURION Button Remote Control](#)
- [2 Specifications](#)
- [3 Programming a New Remote](#)
- [4 FAQs](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

CENTURION

CENTURION Button Remote Control



Specifications

- **Brand:** Centurion
- **Website:** www.remotepro.com.au.

Programming a New Remote

1. Press and immediately release the red learn button. The screen will now display 'bu'.
2. Press and immediately release the blue minus button. The screen will now display 'ru'.
3. Press and hold any button on your new remote until the light on the motor strobes.
4. Wait 5 seconds and test your remote.



WARNING: This product may contain a coin/button cell battery. Keep products and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside any part of the body.

www.remotepro.com.au.

FAQs

- **Q: How do I change the battery in the remote?**
 - **A:** To change the battery, locate the battery compartment on the back of the remote, open it using a small screwdriver, replace the old battery with a new one, and close the compartment securely.
- **Q: What should I do if my remote stops working suddenly?**
 - **A:** If your remote stops working suddenly, try replacing the battery first. If the issue persists, follow the programming steps to reprogram the remote. If the problem continues, contact customer support for assistance.

Documents / Resources

[illegible]

References

- [R Garage Door Remotes | Car Remotes | Free Shipping AU Wide – Remote Pro](#)
- [R Garage Door Remotes | Car Remotes | Free Shipping AU Wide – Remote Pro](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.