



CEREVO CDP-LS05A LiveShell W Compact Streaming Encoder User Guide

[Home](#) » [CEREVO](#) » CEREVO CDP-LS05A LiveShell W Compact Streaming Encoder User Guide 

Contents

- [1 CEREVO CDP-LS05A LiveShell W Compact Streaming Encoder](#)
- [2 Hardware Precautions](#)
- [3 Box Contents](#)
- [4 About Power Supply](#)
- [5 Connection to Live Shell Studio](#)
- [6 Warranty](#)
- [7 Hardware Precautions](#)
- [8 FCC](#)
- [9 Contact Information](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)



CEREVO CDP-LS05A LiveShell W Compact Streaming Encoder



LiveShell W Quick Setup Guide

Thank you for purchasing LiveShell W. Please review the online manual periodically as news about frequent updates and information about new features will be added there.

This Quick Setup Guide only covers network environments when an IP address can be automatically acquired through DHCP, and ID input and consent agreements are not required. Regarding 3G/4G USB modules, static IP address and other network environments, please refer to the online manual.

Detailed instructions are available online. LiveShell W Online Manual

<https://cerevo.com/en/wdoc>

Hardware Precautions

Please read the following carefully.

This section explains the precautions that must be taken to prevent harm to the user or others and damage to property.

Caution

The following classification indicates the hazards and their degree of severity that may result from mishandling Live Shell W.

A hazard that may result in personal injury or property damage if the product is mishandled.

High Temperature of the Main Unit

The surface of the main unit may become hot due to heat dissipation and may cause burns or other injury if touched. Handle with care when the power is on and immediately after the power is turned off.

Box Contents

- LiveShell W Unit x 1
- Quick Setup Guide x 1
- Carrying Case for LiveShell W x 1
- AC Adapter x 1
- Wireless LAN Adapter x 1
- USB Type C to C Cable (for Power Supply) x 1

About Power Supply

When using a power supply (AC adapter, mobile battery, etc.) other than that Supplied with the product, use a power supply that meets all of the following specifications. Using a power supply that does not meet all of the specifications may result in the product not operating properly, malfunction, or fire.

Compatible Power Supply Specifications

Output Voltage: 5V Output Current: 3A Output Connector: USB Type-C

Compatible USB Cable Specifications

USB Type C to C cable capable of 3A power supply. Type-A to C cables cannot be used.

STEP 1

Initial Preparation for Live Shell W

Please plug in the power supply using the Type-C connector to the POWERJ (MAINJ) USB C port on the rear of LiveShell W. (Do not push the power button yet.)



STEP 2

This guide shows setup for when the network environment is one in which an IP address can be obtained automatically by DHCP, and in which it is not necessary to enter an ID or consent to a license agreement using a browser.

Setup Network Connection

Follow the below instructions according to the network you are going to use.



Using a Wireless LAN Connection

Connect the included wireless LAN adapter. Then press and hold the top left button (power button) for 5 seconds to turn on the power.

The order is very important, so please be careful not to make a mistake.

This Quick Setup Guide only covers using AP Mode.

This Quick Setup Guide only covers using AP Mode.

1. Connect the wireless LAN adapter



2. Press and hold the power button for 5 seconds



3. A logo [Cerevo] will appear on the unit display. A few seconds later, the [Live Shell W] logo will appear.



After a few



seconds




Using an Ethernet Connection

Connect an Ethernet cable.

Then press and hold the top left button (power button) for 5 seconds to turn on the power.

The order is very important, so please be careful not to make a mistake.

1. Connect Ethernet cable

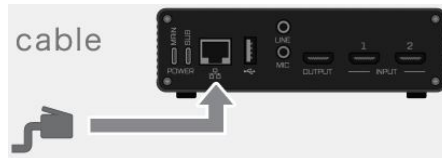

2. Press and hold the power button for 5 seconds.



STEP 3

Connection to Live Shell Studio

Please follow the instructions below according to the network you connected in STEP 2.




Using a Wireless LAN Connection

1. Press the control dial, go to [MAIN MENU]
[Network]-[AP Mode] and select
[AP Mode On].



2. Do the same operation as in (1), again select [Network], and then select [View AP Info].
3. Confirm that [ssid] and [pass] are displayed on the unit display.

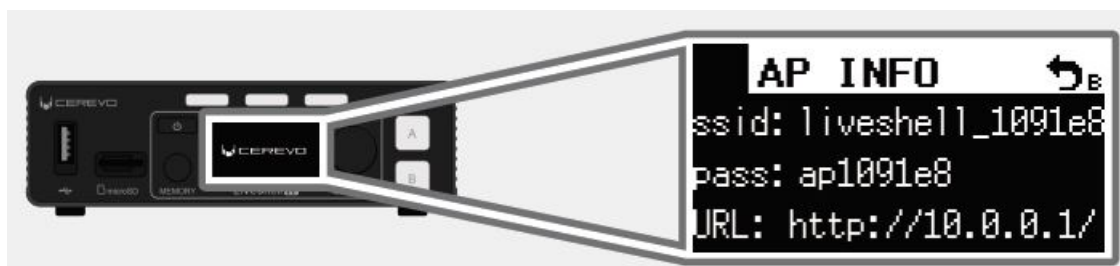

The above display is an example. Please make sure to check the display on the actual device

4. Open the wireless LAN settings of the PC or tablet on which you want to operate LiveShell Studio.
5. Enter the [ssid] and [pass] that are shown in (3) and connect via wireless LAN.



Using an Ethernet Connection

1. Network settings are automatically configured according to the network you are connected to.

Precautions When Connecting Via Wireless LAN

AP Mode is a mode in which LiveShell W itself temporarily becomes a wireless LAN access point. AP mode is used only for connection to LiveShell Studio and cannot be used for live streaming. Connection to the wireless LAN network used for your live streaming must be made from LiveShell Studio. For details on how to connect, please refer to the online manual after completing STEP 4.

Warranty

CerevoELLYeshell w warranty obligations for this hardware product are limited to the terms set forth herein. Cerevo, as defined below, warrants this Cerevo-branded hardware product against defects in materials and workmanship under normal use for a period of ONE YEAR from the date of retail purchase by the original end-user purchaser ("Warranty Period"). However, this warranty does not apply

- (a) if there is no purchase date, name or signature from the agent on the warranty, or the contents specified on the warranty are altered. The purchase date can be verified by a valid receipt.
- (b) to damage during transportation after purchase.
- (c) to damage caused by accident, abuse, misuse, liquid contact, fire, earthquake or other external causes.
- (d) to damage caused by combination with other equipment or damage or trouble caused by use with non-Cerevo products.
- (e) to damage caused by operating the product outside the permitted or intended uses described by Cerevo
- (f) to damage caused by service (including repairs and modifications) performed by anyone who is not an representative of Cerevo.
- (g) to damage caused by exposing the product outside of the recommended environment.
- (h) if the product is taken apart.
- (o) If a hardware defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, Cerevo will either:

If a hardware defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, Cerevo will either:

1. repair the hardware defect at no charge, using new or refurbished parts that are equivalent to the in performance and reliability.
2. exchange the product with a product that is new or refurbished that is equivalent to new in performance and reliability and is at least functionally equivalent to the original product.
3. refund the purchase price of the product.

To the extent permitted by law, this warranty and the remedies set forth above are exclusive and in lieu of all other warranties, remedies and conditions, whether oral, written, statutory, expressed or implied. As permitted by applicable law, Cerevo specifically disclaims any and all statutory implied warranties, including, without limitation, warranties of merchantability and fitness for a particular purpose and warranties against hidden or latent defects. Replacement product or part assumes the remaining warranty of the original product of ninety (90) days from the date of replacement or repair whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Cerevo's property. When a refund is given, the product for which the refund is provided must be returned to Cerevo and becomes Cerevo property. Cerevo does not warrant that the operation of the protection will be uninterrupted or error-free. Cerevo is not responsible for damage arising from failure to follow instructions relating to the product's use.

Important: Please do not open this hardware. Doing so voids your warranty.

Except as provided in this warranty and to the extent permitted by law, Cerevo is not responsible for direct special, incidental or consequential damages resulting from any breach of warranty or condition or under any other legal theory.

If you would like to request warranty service please contact us.

Hardware Precautions

Use this product in an environment that has a temperature between 32° -104° F (0° -40° C) and a humidity between 10% – 90%. A low or high temperature may shorten the life of the hardware and could temporarily stop the device as well. Do not use any electrical adapter other than the one provided. Doing so may damage the product or result in a fire. Use the adapter with surge protection only in electrical outlets supplying the electric current specified on the adapter. Do not use this product in any location that is subjected to direct sunlight, water, humidity, fire, or high temperatures. Doing so could damage the product or result in electric shock.

FCC

WARNING: KEEP THE Wi-Fi ADAPTER OUT OF REACH OF CHILDREN AND PETS TO AVOID ACCIDENTAL INGESTION.

FCC CAUTION Wi-Fi adapter's FCC ID: 2AFL4FX140AD FULL REVER (Hong Kong) LTD.

This device complies With part 5 of the FCC Rules. Operation is Subject to the Following two conditions:

1. this device may not cause harmful interference, and
 2. this device must accept any interference received, including interference that may cause undesired operation.
- Change or Modification not expressly approved by the party responsible could void the user's authority to Operate this device.

Contact Information

Please review the online manual and FAQ before contacting us. We are only available via email. When you contact us, please provide 1. your name, 2. product name. Please note that we are not available on weekends and Japanese holidays .

Please contact our support team at support-global@cerevo.com


STEP4

Confirm URL and Login Information

1. Press the control dial, select [MAIN MENU]>[Network] [Web Login].



2. Confirm that [user] [pass] [URL] is displayed on the unit display.

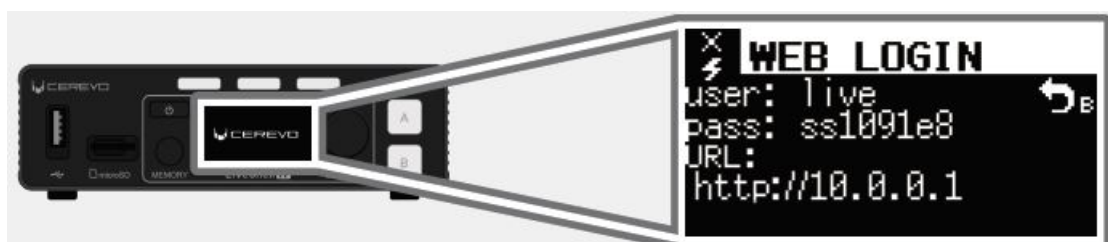


The above display is an example. Please make sure to check the display on the actual device.

Open Web Browser

Make sure the PC or tablet on which you want to operate LiveShell Studio is connected to the same network you connected to in STEP 2 and STEP 3, then open a web browser.

Enter IP address

Please enter the URL from STEP 4.1.2 into the address bar of your web browser to access LiveShell Studio.

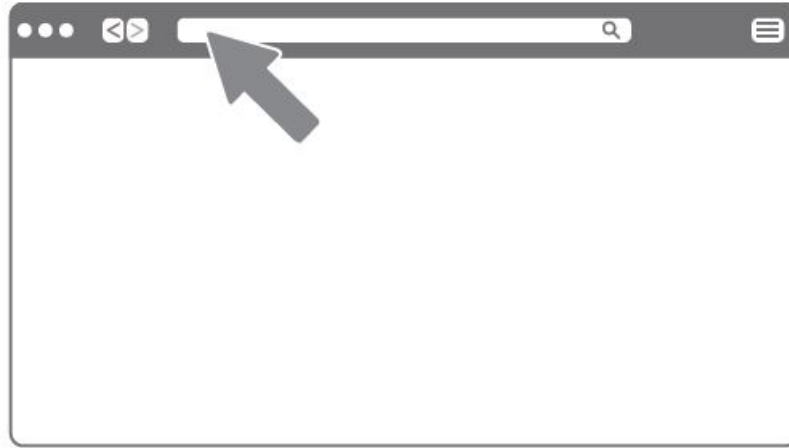

Enter user name and password

Enter the user name [user] and password [pass] from STEP 4.1.2

LiveShell Studio Initial Setup Confirmation

The setup is complete when the LiveShell Studio top screen appears on your web browser.



Please refer to the LiveShell W Online Manual for live streaming settings, video settings and more.

LiveShell W Online Manual: <https://cerevo.com/en/wdoc>



Please refer to [Troubleshooting] in the LiveShell W online manual if you cannot set up correctly or an error message is displayed when setting up your device.

Documents / Resources



[CEREVO CDP-LS05A LiveShell W Compact Streaming Encoder](#) [pdf] User Guide
CDP-LS05A LiveShell W Compact Streaming Encoder, CDP-LS05A, LiveShell W Compact Streaming Encoder, W Compact Streaming Encoder, Compact Streaming Encoder, Streaming Encoder, Encoder