



## Chacon Wi-Fi Timer User Manual

[Home](#) » [CHACON](#) » Chacon Wi-Fi Timer User Manual 


### Chacon Wi-Fi Timer User Manual



## Contents

- [1 What In The Box](#)
- [2 Create your My Chacon account](#)
- [3 Plug it into your Wi-A network](#)
- [4 Install your device](#)
- [5 Luminous states of the plug](#)
- [6 Resetting the plug](#)
- [7 Use](#)
- [8 Troubleshooting](#)
- [9 Technical specifications](#)
- [10 Support](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

## What In The Box

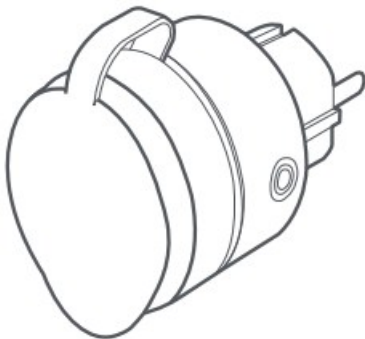

**1x**



**1x**

## Create your My Chacon account

1. Download the free My Chacon app from the iOS App Store, or from Google Play for Android.
2. Create an account by following the instructions in the app.

**Note:** The Chacon Wi-Fi timer socket is also compatible with the DiO one app, so you can use that App instead of My Chacon.

## Plug it into your Wi-A network

1. In the application, select “My devices”, click “+” and then select the “Plug” device”.
2. Plug in the Chacon plug into the main plug and press the plug pairing button during 3 seconds, the LED indicator flashes red.

3. Within 3 minutes, click “Install the Wi-Fi device” in the app.
4. Follow the installation wizard in the application.

**Note:** If the automatic Wi-Fi installation fails, please use the APP mode method to add the device to the application. Check your app for more info. In case the Wi-Fi network or password changed, press the pairing button 3 seconds and in the app press long in the device icon. Then follow the instruction in the application to update the Wi-Fi.

If you want to use the device in another account, please perform a factory reset.

## **Install your device**

1. Plug your lamp or device into the Chacon timer plug plug.
2. Set the device switch to “On”.

## **Luminous states of the plug**

- Slow flashing red: the plug is not connected to the Wi-Fi network or is not configured.
- Fast flashing red: configuration procedure in progress
- Steady blue: plug connected and in “on” position
- LED off: plug connected and in “Off position
- Flashing purple: reset in progress

## **Resetting the plug**

**To reset the plug to its factory settings:**

1. Press the button on the plug and hold for ten seconds.
2. The LED on the plug flashes purple to confirm the reset.

## **Use**

**With your smartphone via the My Chacon app:**

- Switch on or off from anywhere
- Create a programmable timer: set to the exact minute and select the day(s) of the week, with a one-off or repeated timer.
- Create a countdown the plug switches off automatically after the allotted time.

**Voice control:** Control your device or lighting with your voice by combining the Chacon plug with your Google Home or Amazon Alexa smart speaker. On the Google Home or Alexa application, download the One 4 All skill.

**On the plug:** Enable/disable the plug by pressing the button on it once.

## **Troubleshooting**

The plug does not appear on the application interface, or the device/lighting does not switch on or off:

- Check the luminous state of the plug:
- Flashing red LED: check the status of the Wi-Fi router.
- Flashing blue LED (for more than three minutes): check the Internet access.
- Make sure the Wi-Fi and Internet connection is operative and that the network is within range of the plug.
- Make sure that the Wi-Fi is on a 2.4-GHz band (it does not work at 5 GHz).
- When configuring it, your smartphone must be on the same Wi-Fi network as the plug.
- The plug can only be added to one account. A single My Chacon account can be used by all the members of a household.

## Technical specifications

- **Protocol:** Wi-Fi
- **Frequency:** 2.4 GHz 802.11/b/g/n
- **EIRP:** max. 0.7 mW
- **Power supply:** 230 V – 50 Hz
- **Max.:** 3680 W resistive load / 16A
- **Operating temperature:** 0 to 35°C IP44
- **Dimensions:** 54 x 98 mm



**Protective earth**



**Alternating current (AC)**



### Recycling

In accordance with European WEEE directives (2002/96/EC) and directives concerning accumulators (2006/66/EC), any electrical or electronic device or accumulator must be collected separately by a local organisation specialising in the collection of such waste. Do not dispose of these products with ordinary waste. Check the regulations in force. The logo shaped like a waste bin indicates that this product must not be disposed of with household waste in any EU country. To prevent any risk to the environment or human health due to uncontrolled scrapping, recycle the product in a responsible manner. This will promote the sustainable use of material resources. To return your used device, use the return and collection systems, or contact the original dealer. The dealer will recycle it in accordance with regulatory provisions.

**CE** CHACON declares that the Wi-Fi 53025 and 53026 plugs are compliant with the essential requirements and other relevant provisions of Directive RED 2014/53/EU. The complete text of the EU declaration of conformity is available at the following Internet address: [www.chacon.com/conformity](http://www.chacon.com/conformity)

## Support

[www.chacon.com/support](http://www.chacon.com/support)

## Documents / Resources



## [Chacon Wi-Fi Timer](#) [pdf] User Manual

Chacon, Wi-Fi Timer