



CHAMBERLAIN HBW0718 Universal Clicker Remote Control Transmitter Instructions

[Home](#) » [CHAMBERLAIN](#) » CHAMBERLAIN HBW0718 Universal Clicker Remote Control Transmitter Instructions



Contents

- [1 CHAMBERLAIN HBW0718 Universal Clicker Remote Control Transmitter](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Introduction](#)
- [5 CONNECT TO THE MYQ® APP](#)
- [6 GETTING STARTED](#)
- [7 PROGRAMS](#)
- [8 BATTERY](#)
- [9 FCC STATEMENT](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

CHAMBERLAIN

CHAMBERLAIN HBW0718 Universal Clicker Remote Control Transmitter



Product Information

Specifications

- **Models:** KLIK3C-BK2, KLIK3C-SS, KLIK5C-BK2, KLIK5C-SS
- Universal remote control
- Can be programmed to operate up to two devices
- Works with garage door openers, gate operators, or commercial door operators
- Has a SMART/LEARN button
- Each button works independently and must be programmed separately

FAQ

- **Q:** Can this remote control be programmed for more than two devices?
 - **A:** No, this remote control can only be programmed to operate up to two devices.
- **Q:** How do I know if my garage door opener is compatible with this remote control?
 - **A:** Check if your garage door opener has a SMART/LEARN button or DIP switches. If it has a SMART/LEARN button, follow the programming instructions provided. If it has DIP switches, refer to support.chamberlaingroup.com for instructions.
- **Q:** Can I program this remote control to Chamberlain accessories?

- **A:** Yes, you can program the remote control to Chamberlain accessories. Please refer to the manual provided with the accessory for instructions.
- **Q:** What should I do if my remote control was previously programmed to another type of opener?
 - **A:** If your remote control was previously programmed to another type of opener, follow the programming instructions provided in the manual to reprogram it to a yellow LEARN button opener.

Product Usage Instructions

Getting Started

1. Determine if the product you are programming has a SMART/LEARN button or DIP Switches. The location of these buttons may vary.
2. If your product has a SMART/LEARN button, follow the instructions for garage door openers with a yellow LEARN button. If your product has DIP switches, refer to support.chamberlaingroup.com for instructions.

Programming to Garage Door Openers with a Yellow LEARN Button

1. Ensure the garage door is closed and clear of obstructions.
2. Press and immediately release the yellow LEARN button on your garage door opener. The Learn LED will glow steady for 30 seconds.
3. Within 30 seconds, press and hold the button on the remote control you wish to use.
4. Release the button when the garage door opener lights blink or two clicks are heard.
5. Test the programming by pressing the button you just programmed. The opener should activate.
6. To program the remote to Chamberlain accessories, refer to the manual provided with the accessory.

Programming to Compatible Garage Door Openers

1. Remove the remote control cover and press and hold the program button until the LED turns on.
2. Press and release the SMART/LEARN button on your garage door opener.
3. Select a button on the remote control to program and press and release it the specified number of times according to the provided chart. Make sure the LED stops flashing between each press of the button.
4. The garage door opener will respond by clicking, blinking, or activating.

Introduction

UNIVERSAL REMOTE CONTROL

Your remote control can be programmed to operate up to two devices, such as a garage door opener, gate operator, or commercial door operator and has a SMART/ LEARN button. Each button on the remote control works independently of the other and must be programmed separately. The images throughout this manual are for reference only and your product may look different.

STOP

Read instructions thoroughly BEFORE beginning. If you are using this product with residential door openers, this product must be used only with door openers manufactured starting January 1, 1993 that use photoelectric

sensors located near the bottom of the door track.


IMPORTANT: The remote will activate your door or gate during programming. Be sure the door is clear of ALL obstructions. Start with the garage door closed. Make sure the garage door opener has a working light because it is a programming indicator.

WARNING: This product can expose you to chemicals including lead, which are known to the State of California to cause cancer or birth defects or other reproductive harm.
For more information go to www.P65Warnings.ca.gov

CONNECT TO THE MYQ® APP

1. Close the garage door.

- **IMPORTANT:** The remote activates the garage door during programming. Ensure the door is clear of all obstructions.

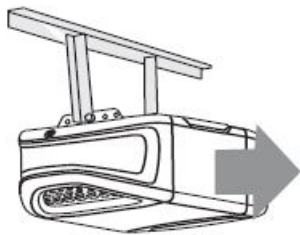

Or


POWERED BY myQ®

2. Look for a Wi-Fi or a Powered by myQ® logo to determine if your garage door opener is myQ® compatible. If not, proceed to programming.




3. To start on monitoring the garage door movements, scan the QR code to download the myQ® app .
4. To add your remote and name, follow the inapp instructions in order .
5. After completing setup in the app, you can control the garage door opener and to receive notices ever time your garage door opens and closes.

GETTING STARTED

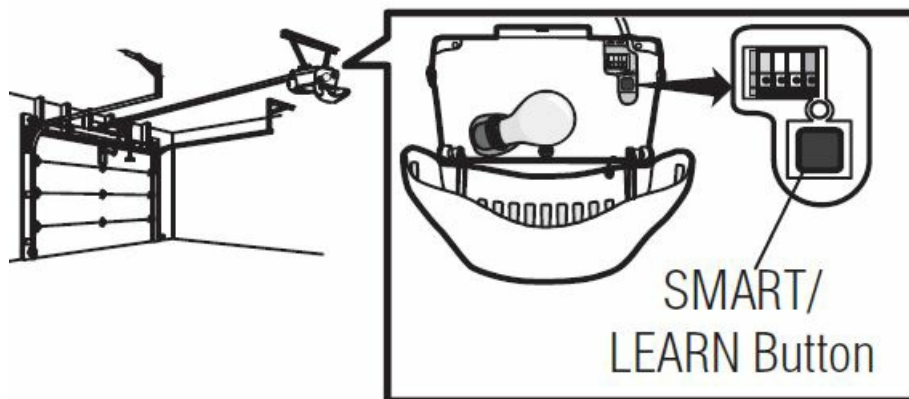

Determine if the product you are programming the remote control to has a SMART/LEARN button or DIP Switches. The SMART/ LEARN button or DIP Switches are located either on the product or in an external receiver on or near the product. The following instructions are for a garage door opener with a SMART/LEARN Button. For DIP Switch programming instructions or additional help, see support.chamberlaingroup.com.

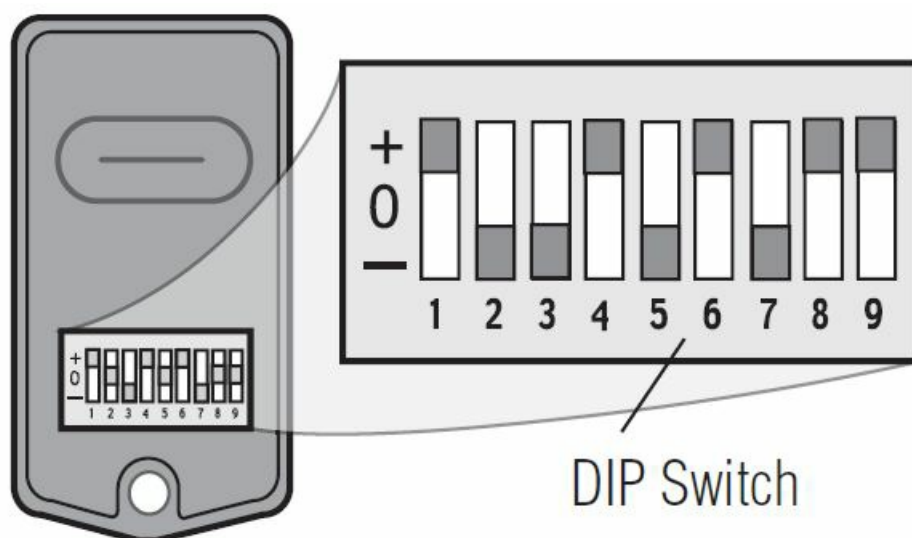


NOTE: DIP Switch is only available in KLIK3Cmodels manufactured before 11/2020.

PROGRAMS

PROGRAM TO GARAGE DOOR OPENERS WITH A YELLOW LEARN BUTTON


If your remote was previously programmed to another type of opener, follow the programming instructions on the next page to reprogram to a yellow LEARN button.

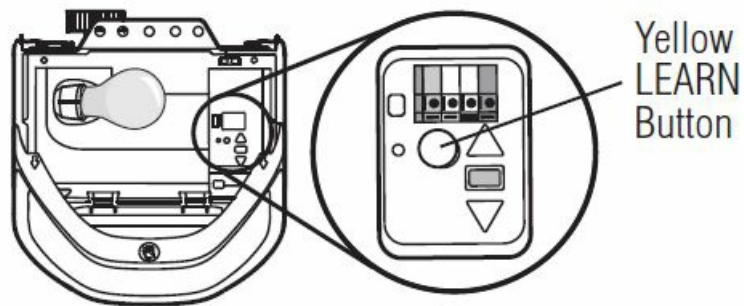

1. Start with the garage door closed.
2. Press and immediately release the yellow LEARN button. The Learn LED glows steady for 30 seconds. Within 30 seconds...
3. Press and hold the button on the remote control you wish to use.
4. Release the button when the garage door opener lights blink or two clicks are heard.
5. Test by pressing the button you just programmed. The opener activates.

To program the remote to Chamberlain accessories, refer to the manual provided with the accessory.

PROGRAM TO COMPATIBLE GARAGE DOOR OPENERS

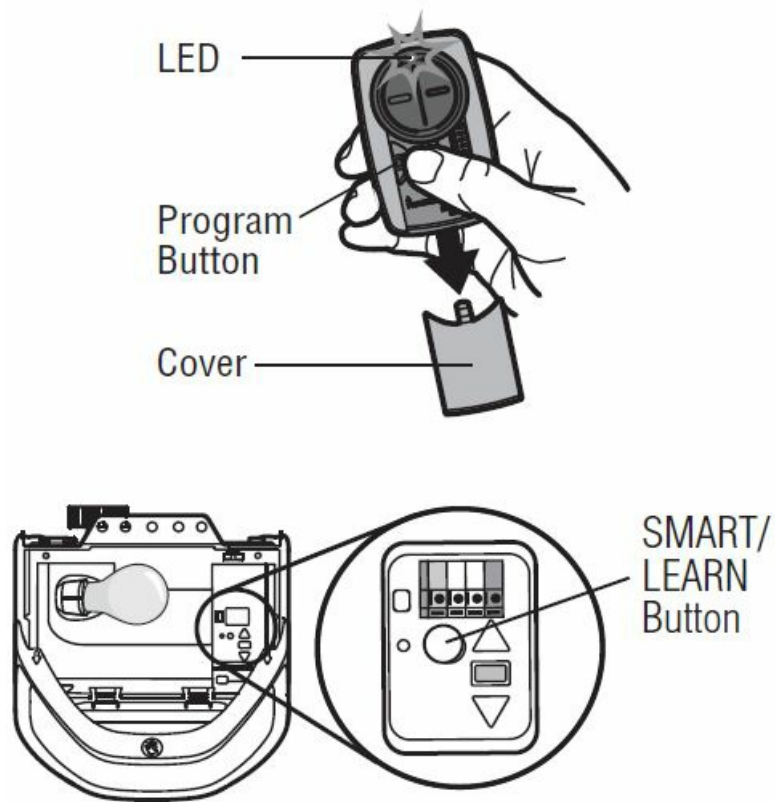

1. Remove the remote control cover. Press and hold the program button until the LED turns on.
 2. Press and release the SMART/ LEARN button on your garage door opener.
 3. Select a button to program on the remote control. Press and release the button the specified number of times according to the following chart.
- **NOTE:** Make sure the LED stops flashing between each press of the button. The garage door opener will respond by clicking, blinking or activating.

| Garage Door Opener Brand | Type/Color of SMART/LEARN button | Year | Times to press the remote button |
|-----------------------------------|----------------------------------|--------------|----------------------------------|
| Linear® | Mega-Code | 1997-Current | 1 |
| Chamberlain®* | Orange/Red | 1997-2003 | 2 |
| Chamberlain®* | Purple | 2005-Current | 3 |
| Chamberlain®* | Green | 1993-1996 | 4 |
| Genie®** Overhead Door® | Intellicode | 2005-Current | 5 |
| Genie® Overhead Door® | Intellicode | 1995-Current | 6 |
| Stanley® | Secure Code | 1998 | 7 |
| Chamberlain®* | Yellow | 2011-Current | 8 |
| Wayne Dalton® | Rolling Code | 1999 | 9 |
| Xtreme Garage®*** Guardian®*** | Black | 2016-Current | 10 |
| Sommer*** | Black | 2013-Current | 11 |
| Ryobi | Rolling Code | 2016-Current | 12 |

- * Chamberlain, LiftMaster, Sears Craftsman, Do-It Master Mechanic, Raynor, True Value and Sears Craftsman are compatible with Chamberlain technology.
- ** Find Genie Intellicode II instructions at support.chamberlaingroup.com.
- *** Compatible with KLIK5U-BK2 and KLIK5U-SS only..

1. Press the program button on the remote control to save.
2. Test by pressing the button you just programmed. The opener activates.

To program the remote to Chamberlain accessories, refer to the manual provided with the accessory.

BATTERY

Warnings

To prevent possible SERIOUS INJURY or DEATH:

- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.

To reduce risk of fire, explosion or chemical burn:

- Replace ONLY with 3V CR2032 coin batteries.
- DO NOT recharge, disassemble, heat above 212°F (100°C) or incinerate.



Dispose of batteries properly.
Replace ONLY with 3V CR2032 coin batteries.

NEED HELP?

- Go to support.chamberlaingroup.com for more information.

FCC STATEMENT

NOTICE: This device complies with part 15 of the FCC rules and Innovation, Science and Economic Development Canada license-exempt RSSs. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

All trade names used herein are trademarks of respective manufacturers listed.

Documents / Resources

CHAMBERLAIN

MODEL KLIK3C-BK2
MODEL KLIK3C-SS
MODEL KLIK3C-BK2
MODEL KLIK3C-SS

UNIVERSAL REMOTE CONTROL

Your remote control can be programmed to operate up to five devices, such as garage door opener, gate opener, or commercial or residential door opener (SMART/SMART+ only). Each button on the remote is coded to work independently of the others and must be programmed separately. The remote has eight of this code area in its reference to aid your product may be affected.


STOP

Read instructions thoroughly before using. If you are using this product with an automatic door opener, this product must be used only with door opener. Chamberlain's standard door opener lock will not allow the door to lock unless locked near the bottom of the door's travel.

WARNING! The remote will activate your door or gate opener if you are using it. Always use caution. Start with the garage door closed. Always use the emergency release cord as a working light because the emergency release indicator is not visible when the door is closed.

CAUTION! The product can become a projectile if the door is released. Always use caution. Start with the garage door closed. Always use the emergency release cord as a working light because the emergency release indicator is not visible when the door is closed.

© 2008 Chamberlain Corporation. All rights reserved. For more information, visit www.chamberlain.com.



CHAMBERLAIN HBW0718 Universal Clicker Remote Control Transmitter [pdf] Instructions

HBW0718 Universal Clicker Remote Control Transmitter, HBW0718, Universal Clicker Remote Control Transmitter, Remote Control Transmitter, Control Transmitter, Transmitter

References

- [!\[\]\(31b03e46ee8a80a1f1467b8c03bd76e8_img.jpg\) C Support](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)