



CHAMPTEK N-4082i Code Scanner User Guide

[Home](#) » [CHAMPTEK](#) » CHAMPTEK N-4082i Code Scanner User Guide 

Contents

- [1 CHAMPTEK N-4082i Code Scanner](#)
- [2 Interface Selection](#)
- [3 Reading Mode Selection \(not applicable to desktop type\)](#)
- [4 Select Terminator](#)
- [5 Setup Baud Rate](#)
- [6 Symbology Selection](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

SCANTECH

CHAMPTEK N-4082i Code Scanner



- Version Information
- Set All Default



Interface Selection

RS232

USB



VCOM



Reading Mode Selection (not applicable to desktop type)

Good Read OFF

Trigger ON/OFF



Auto Sense



Select Terminator

<CR+LF>



CR



HT (TAB)



None



Setup Baud Rate


9600



19200



<115200>

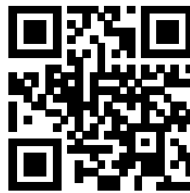

Symbology Selection

< UPC-A ON>



UPC-A OFF



<UPC-E ON>



UPC-E OFF



ISBN-13 ON>



ISBN-13 OFF



<EAN-8/JAN-8 ON>



EAN-8/JAN-8 OFF



<CODE 39 ON>



CODE 39 OFF



<CODE 128 ON>



CODE 128 OFF



<CODABAR/NW7 ON>



CODABAR/NW7 OFF



<Interleaved 25 ON>



Interleaved 25 OFF



GS1 Data Bar-
Omni directional ON



<GS1 Data Bar-
Omni directional OFF>



GS1 Data Bar-
Limited ON



<GS1 Data Bar-
Limited OFF>



GS1 Data Bar-
Expanded ON



<GS1 Data Bar-
Expanded OFF>



<QR Code ON>



QR Code OFF



<PDF417 ON>



PDF417 OFF



<Data Matrix ON>



Data Matrix OFF



Micro QR ON



<Micro QR OFF >



Aztec ON



<Aztec OFF>



Micro PDF417 ON
(Optional)



<Micro PDF417 OFF>



Enable



<Disable>



Select All Barcodes



Send Character by ALT Method

Enable



<Disable>



Bluetooth Configuration (for BT Scanner)

Set BT Parameter Default



BT Profile

<SPP Master Mode>



SPP Slave Mode



HID Slave Mode



Firmware Version (for BT Scanner)

Scanner Firmware Version

Cradle Firmware Version




Scanner MAC Address

Cradle MAC Address



Documents / Resources

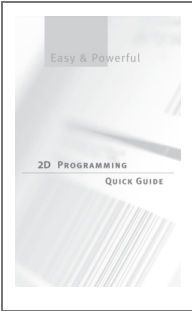	CHAMPTEK N-4082i Code Scanner [pdf] User Guide N-4082i Code Scanner, N-4082i, Code Scanner
--	---