



CHASE Mobile Card Reader Installation Guide

[Home](#) » [CHASE](#) » CHASE Mobile Card Reader Installation Guide 

Contents

- 1 CHASE Mobile Card Reader
- 2 Product Information
- 3 Product Usage Instructions
- 4 DEVICE OVERVIEW
 - 4.1 CHASE CARD READER_INSIDE VIEW
 - 4.2 CHASE CARD READER CHARGING BASE_TOP VIEW
 - 4.3 CHASE CARD READER CHARGING BASE_BOTTOM VIEW
- 5 Radiation Exposure Statement
- 6 Documents / Resources
 - 6.1 References



CHASE Mobile Card Reader



Product Information

Product	Description
CHASE CARD READER	All-in-one mobile card reader
CHASE CARD READER CHARGING BASE	Countertop charging cradle

Product Usage Instructions

WARNING: This symbol is intended to alert the user before starting using the Reader.

Before using the Device:

- Please charge the device for 12 hours before initial use.
- Please ensure the unit was not stored for over three months without charging.
- Battery life will depend on different use-cases and the battery manufacturer recommends replacing it with a new one every 2 years.

<u>Product</u>	<u>Description</u>
CHASE CARD READER	All-in-one mobile card reader
CHASE CARD READER CHARGING BASE	Countertop charging cradle

Caution: Do NOT attempt to open and disassemble the device to cause device tamper and violate the warranty.

CHASE CARD READER Power spec:

- Input: 5V DC, 2A

CHASE CARD READER CHARGING BASE Power spec:

- Input: 5V DC, 2A

Caution: Use only the AC adapter approved and provided by XAC Automation Corporation for use with this device. Use of any other AC adapter may cause a risk of fire or explosion.

Device Operating Temperature: 0°C to 40°C

PACKAGE CONTENT

 
- CHASE CARD READER
- CHASE CARD READER CHARGING BASE (another package)

DEVICE OVERVIEW

CHASE CARD READER_TOP & SIDE VIEW:

- Touch Display & NFC area


- Magnetic Stripe Reader
- Smart Card Reader
- Power Button

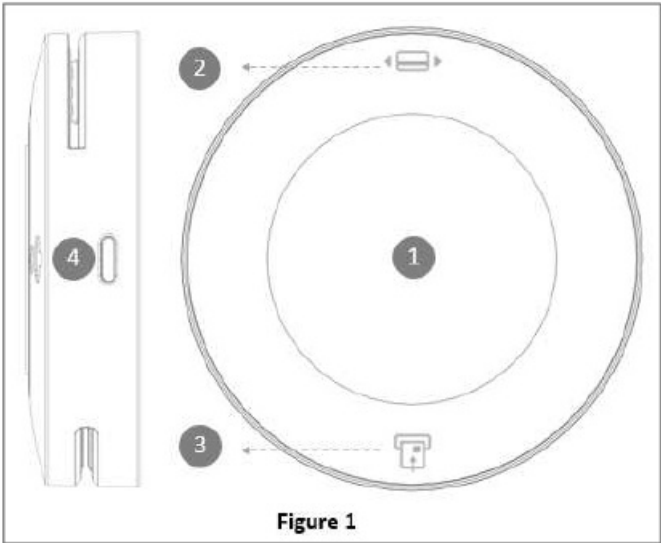

1	Touch Display & NFC area
2	Magnetic Stripe Reader
3	Smart Card Reader
4	Power Button

CHASE CARD READER_BOTTOM VIEW:

 - Battery Cover
- Charging Connector
- Secure Screw Nut
- Lanyard Hole

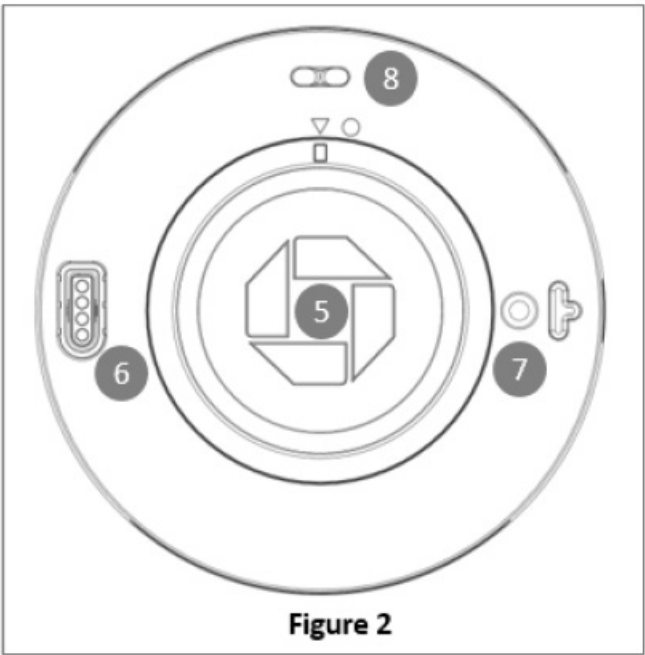

5	Battery Cover
6	Charging Connector
7	Secure Screw Nut
8	Lanyard Hole

Bottom Cover Removal Warning: When removing the bottom cover for the purposes of changing the battery, please remove the connector gently.

 
CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Warning for internal battery pack: To reduce the risk of fire or burns:

- 1. Do not attempt to open, disassemble, or service the battery pack.
- 2. Charge the battery periodically to ensure the charge/discharge characteristics.

CHASE CARD READER_INSIDE VIEW

- Battery Connector
- Battery Pack
- SAM Card Slot

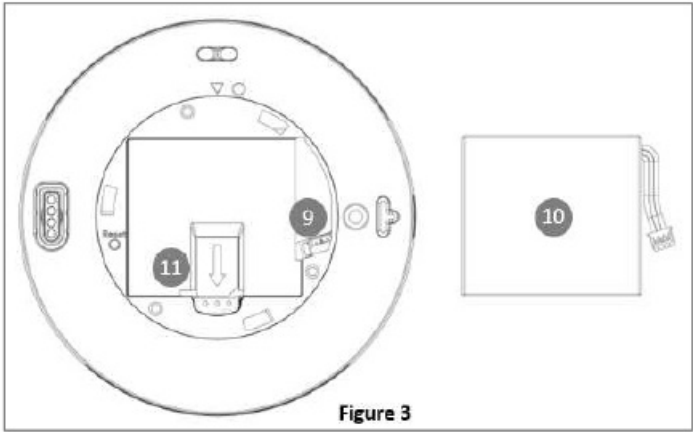

9	Battery Connector
10	Battery Pack
11	SAM Card Slot

CHASE CARD READER CHARGING BASE_TOP VIEW

- Power LED (Blue)
- Charging Connector
- Secure Screw

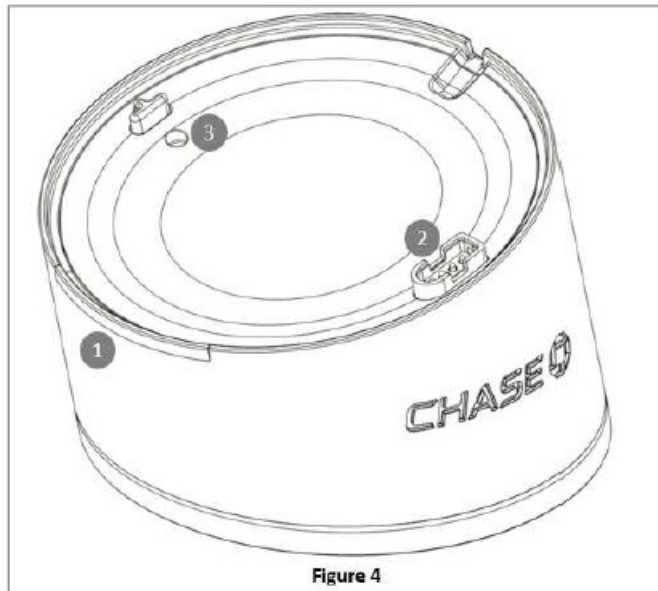 


Figure 4

1	Power LED (Blue)
2	Charging Connector
3	Secure Screw

CHASE CARD READER CHARGING BASE_BOTTOM VIEW

- USB-C Power Connector
- Base Holder Slot
- Secure Screw
- Power Cable Slot

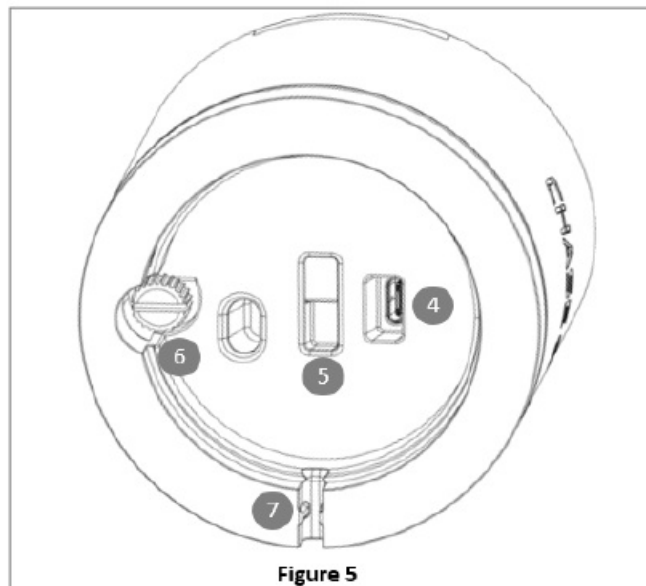 


Figure 5

4	USB-C Power Connector
5	Base Holder Slot
6	Secure Screw
7	Power Cable Slot

Federal Communication Commission Interference Statement:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Radiation Exposure Statement

The product comply with the FCC portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user limb or set the device to lower output power if such function is available. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

 
XAC Automation Corporation

886-3-577-2738

www.xac.com.tw

The above information is the exclusive intellectual property of XAC Automation Corporation and shall not be disclosed, distributed or reproduced without permission of XAC Automation Corporation. XAC AUTOMATION CORP. shall not be held liable for technical and editorial omissions or errors made herein; nor for incidental or consequential damages resulting from the furnishing, performance or use of this material.

Documents / Resources

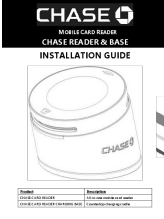	<p>CHASE Mobile Card Reader [pdf] Installation Guide</p> <p>JPMCR, MQT-JPMCR, MQTJPMCR, Mobile Card Reader, Mobile Reader, Card Reader, Reader</p>
---	--

References

- [Welcome to XAC AUTOMATION CORP.](#)
- [User Manual](#)

