



chassie memory control Instructions

[Home](#) » [chassie](#) » chassie memory control Instructions 

 
chassie memory control Instructions

Contents

- 1 [Resetting the Base](#)
- 2 [Memory Control](#)
- 3 [Setting Upper Limit](#)
- 4 [Setting Lower Limit](#)
 - 4.1 [Removing the Upper and Lower Limits](#)
- 5 [Locking the Control](#)
- 6 [Unlocking the Control](#)
- 7 [Documents / Resources](#)
- 8 [Related Posts](#)

Resetting the Base


1. Hold the “down” button until the base reaches its lowest position.
2. Release the “down” button.
3. Hold the “down” button again until the display states “RST”.
4. Release the “down” button.
5. Hold the “down” button again until the base lowers slightly, then raises back up.
6. Release the “down” button. The base is now ready to use.

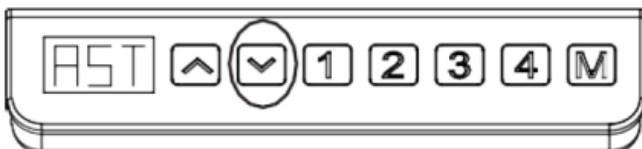

Memory Control


1. Adjust the base to the desired height.
2. Press “M” followed by the desired preset number.

 3. The preset is now set for that height.

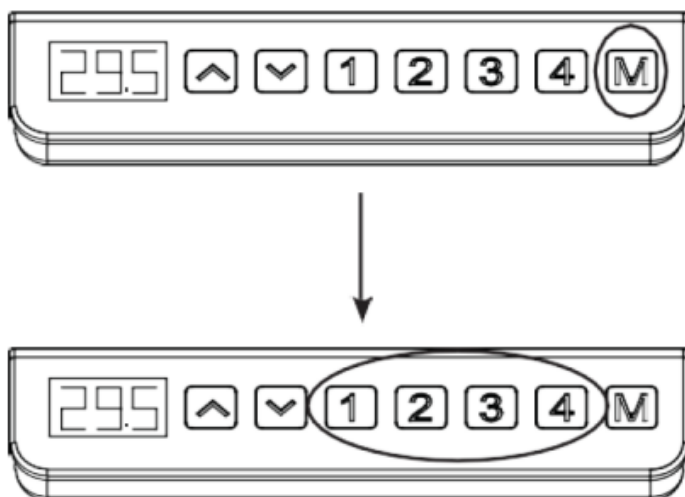



Setting Upper Limit

 1. Adjust the base to the desired maximum height.
2. Hold down the “M” button until the display states “S-” then release.
3. Press the “up” button, then release. Hold the “M” button until the display flashes “999” then changes to display the height.
4. The maximum height is now set.

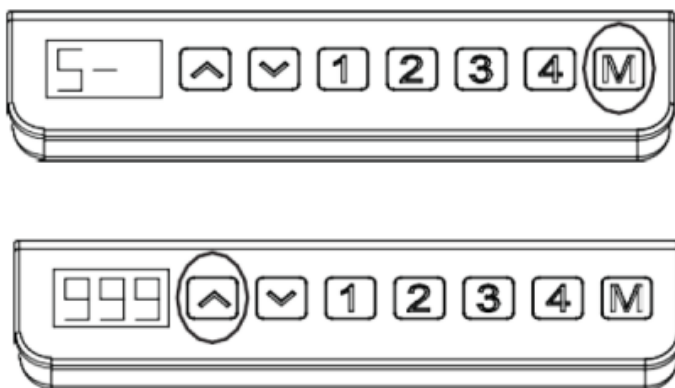



Setting Lower Limit

  1. Adjust the base to the desired minimum height.
2. Hold down the “M” button until the display states “S-” then release.
3. Press the “down” button, then release. Hold the “M” button until the display flashes “000” then changes to display the height.
4. The minimum height is now set.

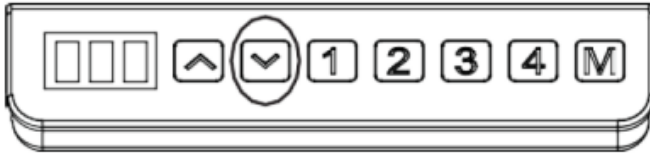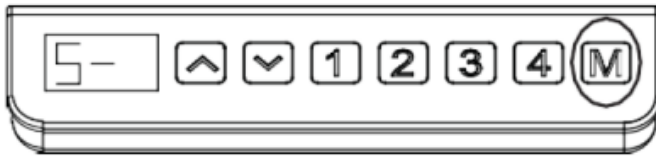

Removing the Upper and Lower Limits

  1. Hold down the "M" button until the display states "S-" then release.
2. Within five seconds, hold down the "M" button again for two seconds.
3. The display will flash "555" then change to display height.
4. The upper and lower limits are now removed.

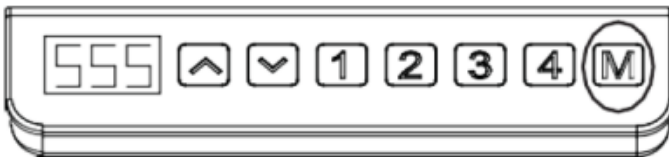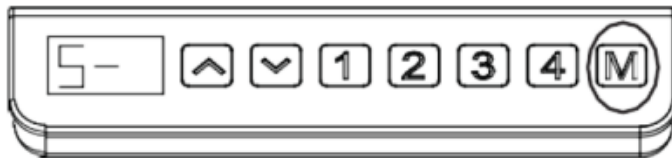

Locking the Control

1. Hold down the "M" button until display switches from "S-" to "LOC".
2. The control is now locked.



Unlocking the Control

1. Hold down the "M" button until display switches from "LOC" to the height display.
2. The control is now unlocked.





Documents / Resources

[illegible]

Manuals+,