



CHAUVET DJ ML6 RFC Remote Control Instructions

[Home](#) » [Chauvet DJ](#) » CHAUVET DJ ML6 RFC Remote Control Instructions 

CHAUVET DJ ML6 RFC Remote Control Instructions



Contents

[1 RFC Remote Control](#)

[2 Operation](#)

[3 Documents /
Resources](#)

RFC Remote Control

The RFC can be operated with any Chauvet RF enabled fixture.

RF wireless control must be set on the fixture.

To enable RF wireless control in the fixture, locate the RF function in the Menu Map and enable RF.

Binding

To bind the fixture to the remote, navigate to the BIND option in the fixture's menu and follow instructions.



Once the remote has bound to the fixture, it is possible to select a group on the fixture. Assigning the fixture to a group will be important when using the remote, as the remote can command multiple groups at once.


Battery Power

The RFC is battery operated. Ensure that the Alkaline battery (A23) is installed prior to operating the remote.



Movement may cause the back lights to turn on and drain the battery while being transported. Turn off the unit when not in use.

Operation

RFC	Button	Function
	<BLACK OUT>	Press to turn off all lights until the button is pressed again
	<STROBE>	Press to toggle strobe, then use or <-> to increase or decrease strobe speed
	<DIMMER>	Press then use <+> or <-> to increase or decrease the dimmer
	<AUTO>	Press to activate automatic mode. then use <+> or <-> to select a program
	<SPD/SENS>	Press then use <+> or <-> to increase or decrease speed or sensitivity
	<SOUND>	Press to activate sound-active mode, then use <+> or <-> to select a program
	<->	Press to decrease speed, sensitivity, or the dimmer/color value, or to scroll down the list of programs
	<+>	Press to increase speed, sensitivity, or the dimmer/color value, or to scroll up the list of programs
	<FREEZE>	Press to stop all movement and color chasing
	<R>, <G>, , <A>, <W>, <UV>	In manual mode, press then use <+> or <-> to increase or decrease the red (<R>), green (<G>), blue (), amber (<A>), white (<W>), or UV (<UV>) value.
	<FADE/SNAP>	Press to toggle between fade and snap programs
	<MANUAL>	Press to activate manual mode
	<PRESET/ COLOR>	Press to activate presets/colors, then use <+> or <-> to select a preset/color
	<PAN>	Press then use <+> or <-> to increase or decrease the pan value
	<GOBO>	Press then use <+> or <-> to increase or decrease the gobo value
	<FOCUS>	Press then use <+> or <-> to increase or decrease the focus value
	<TILT>	Press then use <+> or <-> to increase or decrease the tilt value
	<ZOOM>	Press then use <+> or <-> to increase or decrease the zoom value
	<PRISM>	Press then use <+> or <-> to increase or decrease the prism value




The RFC remote will not respond to any inputs when Freeze or Black Out is activated.

If the remote does not respond when a button is pressed, try pressing <Freeze> or <Black Out> Freeze or Black Out may have been inadvertently activated.



Documents / Resources

	<p>CHAUVET DJ ML6 RFC Remote Control [pdf] Instructions ML6 RFC Remote Control, ML6, RFC Remote Control, Remote Control, Control</p>
-----------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------

[Manuals+](#).