


CHEERFUN H013 LCD DRAWING TABLETS



# CHEERFUN H013 LCD Drawing Tablets User Manual

[Home](#) » [Support](#) » CHEERFUN H013 LCD Drawing Tablets User Manual 

## Contents

- [1 CHEERFUN H013 LCD Drawing Tablets](#)
- [2 Introduction](#)
- [3 Specifications](#)
- [4 What's in the Box](#)
- [5 Key Features](#)
- [6 How to Use](#)
- [7 Safety Precautions](#)
- [8 Maintenance](#)
- [9 Troubleshooting](#)
- [10 FAQs](#)
- [11 Video-Toy Gifts LCD Drawing Tablets for Kids Travel Essentials](#)
- [12 References](#)
- [13 Related Posts](#)

**CHEERFUN**

**CHEERFUN H013 LCD Drawing Tablets**



## Introduction

The CHEERFUN H013 LCD Drawing Tablet is a user-friendly and versatile digital drawing and writing device designed for artists, students, professionals, and anyone who enjoys sketching, taking notes, or expressing their creativity in a digital format. With its advanced features and user-friendly design, the CHEERFUN H013 provides an intuitive platform for both artistic and practical applications.

## Specifications

- **Screen Size:** Varies by model (typically available in sizes such as 8.5 inches, 10 inches, or 12 inches)
- **Display Type:** LCD
- **Battery Type:** CR2025 button cell battery (replaceable)
- **Weight:** Varies by model
- **Dimensions:** Varies by model
- **Color Options:** Varies by model
- **Pressure Sensitivity:** No
- **Erasable:** Yes (with the included stylus or any non-scratch tool)

## What's in the Box

- CHEERFUN H013 LCD Drawing Tablet
- Stylus Pen
- CR2025 Button Cell Battery (pre-installed)
- User Manual

## Key Features

1. **Erasable Surface:** The CHEERFUN H013 features a pressure-sensitive and erasable LCD screen, allowing you to draw, write, and sketch with the included stylus or any non-scratch tool.
2. **Various Sizes:** Available in multiple sizes to accommodate different preferences and artistic needs.
3. **Battery-Powered:** The device operates on a long-lasting CR2025 button cell battery, eliminating the need for charging and ensuring uninterrupted creative sessions.
4. **Slim and Lightweight:** With its slim and lightweight design, this electronic drawing tablet is highly portable, making it suitable for travel, school, or professional use.
5. **Lock Function:** Some models may offer a screen lock function to protect your drawings and notes from accidental erasure. Unlock when you want to erase your work.

## How to Use

1. Insert the pre-installed CR2025 button cell battery into the device.
2. Power on the drawing tablet by pressing the dedicated button, if available.
3. Use the stylus pen or any non-scratch tool to draw, write, or sketch on the LCD screen.
4. Apply different levels of pressure to vary line thickness and style.
5. Erase your creations by using the stylus's eraser tip or any non-scratch eraser tool.
6. To clear the entire screen, press the dedicated erase button, if available.

## Safety Precautions

- Keep the stylus pen and any non-scratch tools away from young children to prevent accidental ingestion or misuse.
- Avoid applying excessive force on the LCD screen, as it may damage the device.
- Store the drawing tablet in a cool and dry place, away from direct sunlight, extreme temperatures, and humidity.

## Maintenance

- Clean the LCD screen using a soft, lint-free cloth to remove fingerprints and marks.
- Replace the CR2025 button cell battery as needed, ensuring that it is installed correctly.
- Store the device in a protective sleeve or case to prevent dust and scratches.

## Troubleshooting

### Screen Not Responding:

- Ensure the device is powered on, and the battery is not depleted.
- Check if the stylus pen is working correctly.
- Try replacing the CR2025 button cell battery.

### Erase Button Not Working:

- Ensure that the device has an erase button, and it is functioning correctly.
- Verify if the stylus's eraser tip is operational.

### **Display Issues:**

- If the LCD screen displays anomalies or is unresponsive, contact customer support for assistance.

### **Stylus or Tool Problems:**

- If the stylus or any non-scratch tool is not working properly, inspect for damage or dirt on the tip. Clean or replace as needed.

### **FAQs**

Q: Does the CHEERFUN H013 support palm rejection technology?

A: Yes, the CHEERFUL H013 includes palm rejection technology, ensuring that only the stylus input is recognized while resting your hand on the screen, preventing unintended marks.

Q: Is the CHEERFUN H013 suitable for digital note-taking?

A: Yes, the CHEERFUN H013 is ideal for digital note-taking, making it a useful tool for students and professionals.

Q: Can I save my drawings on the CHEERFUN H013?

A: Yes, the CHEERFUN H013 allows you to save your drawings directly to the tablet or transfer them to a computer for further editing or sharing.

Q: How do I erase drawings on the CHEERFUN H013?

A: You can erase drawings on the CHEERFUN H013 using the erase button or the stylus with the eraser function activated.

Q: What is the resolution of the CHEERFUN H013's LCD screen?

A: The CHEERFUN H013 has a screen resolution of 1920x1080 pixels, providing clear and detailed visuals.

Q: Does the CHEERFUN H013 have a customizable shortcut button?

A: Yes, the tablet features programmable shortcut buttons that allow you to customize functions for quicker access to tools and commands.

Q: Can I connect the CHEERFUN H013 to a smartphone or tablet?

A: Yes, the CHEERFUN H013 can be connected to Android smartphones and tablets via OTG adapters, expanding its usability.

Q: Is the CHEERFUN H013 compatible with Windows and Mac computers?

A: Yes, the CHEERFUN H013 is compatible with both Windows and Mac operating systems, making it versatile for different users.

Q: What is the stylus sensitivity of the CHEERFUN H013?

A: The CHEERFUN H013 stylus offers 8192 levels of pressure sensitivity, providing precision and control for drawing and writing.

Q: Does the CHEERFUN H013 require batteries?

A: No, the CHEERFUN H013 does not require batteries as it is powered by a built-in rechargeable battery.

 
Q: What is the screen size of the CHEERFUN H013?

A: The CHEERFUN H013 LCD Drawing Tablet features a 10-inch LCD screen.

Q: What is the CHEERFUN H013 LCD Drawing Tablet?

A: The CHEERFUN H013 LCD Drawing Tablet is a digital drawing and writing device with an LCD screen for creative and educational purposes.

### Video-Toy Gifts LCD Drawing Tablets for Kids Travel Essentials



<https://manuals.plus/wp-content/uploads/2023/12/Toy-Gifts-LCD-Drawing-Tablets-for-Kids-Travel-Essentials.mp4>

## References

- [User Manual](#)