



Chef s Choice Gourmezza 2-Slice Toaster, 900W, 5 Functions Instruction Manual

[Home](#) » [Chef-s Choice](#) » Chef s Choice Gourmezza 2-Slice Toaster, 900W, 5 Functions Instruction Manual 

Chef s Choice Gourmezza 2-Slice Toaster, 900W, 5 Functions



READ THESE INSTRUCTIONS BEFORE USE.
IT IS ESSENTIAL THAT YOU FOLLOW THESE INSTRUCTIONS TO ACHIEVE OPTIMUM RESULTS.
© 2021 The Legacy Companies

Contents

- [1 IMPORTANT SAFEGUARDS](#)
- [2 PARTS LIST](#)
- [3 HOW TO USE THE 2-SLICE TOASTER](#)
 - [3.1 MAKING TOAST](#)
- [4 HINTS AND TIPS](#)
- [5 CLEANING & MAINTENANCE](#)
- [6 SERVICE](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions. Every user should read this manual.
2. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
3. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item when on top of appliance when in operation. Monitor the bread. If overcooked, it can catch fire.
4. Position the toaster upright on a firm, level, heat-resistant surface, near a power socket and out of reach of children.
5. Appliances can be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the toaster and understand the hazards involved.
6. This toaster shall not be used by children. Keep the toaster and its cord out of the reach of children.
7. To protect against fire, electric shock and injury to persons, do not immerse cord, plug or toaster in water or other liquid.
8. Do not put your toaster in water, don't use it in a bathroom or near water.
9. Do not clean this product with a water spray or the like.
10. Do not clean with metal scouring pads, pieces can break off the pad and touch electrical parts involving a risk of electric shock.
11. Unplug from the outlet when not in use and before cleaning. Allow to cool before cleaning, storing away and putting on or taking off parts.
12. Do not place on or near a hot gas or electric burner, or in heating oven.
13. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
14. Before plugging into a socket, check whether your voltage corresponds to the rating label on the appliance.
15. Always attach plug to appliance first, then plug cord into wall outlet. To disconnect, turn any control to "off", then remove plug from the outlet.
16. Route the mains lead so it doesn't overhang and can't be caught accidentally.
17. Keep the toaster and main lead away from the hotplates, hobs and burners.
18. Unplug the toaster after use. As long as the toaster is hot, even if unplugged, there is the danger of someone getting burned. Do not touch and do not put it into storage while hot.
19. Always disconnect the appliance from the power supply if left unattended.
20. Do not attempt to dislodge food when toaster is plugged in.
21. When heating toaster pastries, always use lightest toast color setting.
22. Clean the crumbs out of the toaster frequently to avoid build up of crumbs. This is unhygienic and could cause a fire.
23. Do not use the toaster unless the crumb tray is closed.
24. Do not use toaster for anything other than toasting bread products.
25. Do not use the toaster outdoors.
26. The area around the toasting slot will get hot during use. Do not touch.
27. Do not let the toasting slot become covered during toasting or while the toasting slot is hot.
28. Do not toast buttered items or make toasted sandwiches in the toaster.

29. If bread gets jammed, unplug the toaster and let the toaster cool before carefully removing the bread. Do not use any sharp utensils to remove bread, it will damage the elements.
30. Do not use torn, curled or misshapen slices. It may jam the toaster.
31. Do not attempt to modify the plug in any way.
32. Do not let power cord hang over edge of table or counter or touch hot surfaces.
33. Do not operate the toaster with a damaged cord or plug. If it malfunctions or has been damaged in any manner, return the toaster to The Legacy Companies Service Department for examination, repair or adjustment.
34. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
35. A short power-supply cord (or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
36. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
37. If longer detachable power-supply cord or extension cord is used:
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
 - 2) The cord should be arranged so than it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
 - 3) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.

SAVE THESE INSTRUCTIONS.

PARTS LIST



1. Bread carriage
2. Carriage handle
3. Bagel button
4. Gluten-free button
5. Defrost button
6. Cancel button
7. Browning level knob
8. Crumb tray
9. Main toaster body

HOW TO USE THE 2-SLICE TOASTER

Before first use remove all packaging.

MAKING TOAST

Put the toaster upright on a firm, level, heat-resistant surface, clear of curtains and other combustible materials. Don't put it on or near anything that could be damaged even by moderate sources of heat. Plug it into a power socket (if necessary, switch the socket on).

Use the knob (7) to adjust the browning level number. Higher the number darker the toast (setting 3 is best for most uses).

Put the bread centrally into the toasting slot (1). Maximum thickness is 20mm.

Press the bread carriage handle (2) fully down it won't lock down unless the toaster is connected to the electricity supply.

To toast a Bagel, Gluten-free or Defrost, press the button of Bagel (3), or Gluten-free (4), or Defrost (5) for your selection. The light beside the button will be come on and element will heat up. You can press Cancel (6) to terminate your toasting at any time or when the toast is cooked to your liking.

When it's done, the toast will pop up and the elements will turn off.




BAGEL BUTTON (3)

Bagel will toast the front side.




GLUTEN-FREE BUTTON (4)

Gluten-free will toast longer, at a lower power, which produces better results for gluten-free breads.

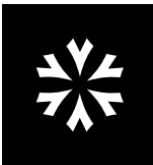

DEFROST BUTTON (5)

This feature takes the guesswork out of toasting frozen bread. Set the browning level (7) to your favoured setting, put the frozen bread into the toasting slot (1), lower the bread carriage handle (2), and then press the button (5). The light by the button will come on. The toasting time will be adjusted automatically to give the same browning level you get with unfrozen bread.

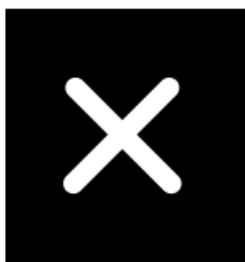

CANCEL BUTTON (6)

To stop the toaster before the toasting cycle has finished, press the eject button (6), to pop the toast up, turn the elements off, and put the light out.

HINTS AND TIPS

If toasting two slices, they should be of similar size, thickness and freshness. Old bread contain less moisture, so makes crisper toast. Old or thin bread cooks faster than fresh or thick bread, so use a lower setting. Sweet bread products (tea cakes, fruit loaf, etc.) brown much more quickly than ordinary bread, so should be toasted on a lighter setting.

CLEANING & MAINTENANCE

- Clean the appliance with a damp cloth only. Do not immerse in water.
- Unplug the toaster and let it cool down fully.
- Don't let anything enter the slot (1), as this might damage the element.
- Don't use harsh or abrasive cleaning agents or solvents.

CRUMBS

Remove crumbs frequently. They are unhygienic and could cause a fire hazard. Unplug the toaster and let it cool down fully. Remove and empty the crumb tray (8). Wipe it with a damp cloth, dry it, then slide it back into the toaster. Don't use the toaster unless the crumb tray is in place and closed.

SERVICE

This appliance is for household use only. No user-serviceable parts are inside. Refer servicing to qualified personnel.

In the event service is needed, return your toaster to The Legacy Companies, where the cost of repair or electrical or mechanical adjustment can be estimated before the repair is undertaken. If failure occurs within the warranty period there may be no charge.

Please include your return address and a brief description of the problem or damage to the toaster on a separate sheet inside the box.

1 YEAR WARRANTY

This product is guaranteed for 1 year from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.

The Legacy Companies
149 Cleveland Drive, Paris, KY 40361 U.S.A.

www.chefschoice.com

This product may be covered by one or more EdgeCraft patents and/or patents pending as marked on the product. Chef'sChoice®, EdgeCraft®, and the overall design of this product are registered trademarks of the Conforms to UL Std. 1026

© 2021 The Legacy Companies





[Chef s Choice Gourmezza 2-Slice Toaster, 900W, 5 Functions](#) [pdf] Instruction Manual
Gourmezza 2-Slice Toaster 900W 5 Functions, Gourmezza 2-Slice, Toaster 900W 5 Functions,
900W 5 Functions, 5 Functions, Functions

References

-  [Chef's Choice by EdgeCraft](#)
-  [USE - Prodotti detergenti per la casa](#)