




CHEFMAN RJ31-P2 Series 2 Slice Toaster User Guide

[Home](#) » [Chefman](#) » CHEFMAN RJ31-P2 Series 2 Slice Toaster User Guide 

CHEFMAN®

USER GUIDE
2-SLICE TOASTER
WITH EXTRA WIDE SLOTS



AFTER SALES SUPPORT

 **USA 888-315-8407**

 [**customerwarranty@rjbrands.com**](mailto:customerwarranty@rjbrands.com)

MODEL: RJ31-P2 SERIES

Now that you have purchased a Chefman® product you can rest assured in the knowledge that as well as your 3-year parts and labor warranty you have the added peace of mind of dedicated helplines and web support.



READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.

Contents

- 1 Introduction
- 2 SAFETY INSTRUCTIONS
- 3 Operating Instructions
- 4 Features
- 5 Cleaning and Maintenance
- 6 Terms and Conditions
- 7 Warranty Card
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

Introduction

Congratulations!

You have made an excellent choice with the purchase of this quality Chefman® product. By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of Chefman® .

We want you to be completely satisfied with your purchase so this Chefman® product is backed by a comprehensive manufacturer's 3-year warranty and an outstanding after sales service through our dedicated Helpline.

We hope you will enjoy using your purchase for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty please telephone our Helpline for immediate assistance. Faulty product claims made within the 3-year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your receipt).

This guarantee is in addition to your statutory rights. Your statutory rights are not affected. This limited warranty does not apply in cases of damage caused by accident, improper use, abuse and force majeure.

This limited warranty will be invalidated if the appliance is tampered with in any way whatsoever. In case of questions or technical problems please call the following toll-free help line number: 888-315-8407, Monday – Friday 9am to 5pm EST.

If the appliance has to be returned to us, it must be packed correctly as we cannot accept any responsibility for damage caused in transit.

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

WARNING: When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. Never operate appliance without bread.
3. Do not insert any forks, knives or similar items into the appliance.
4. Do not insert oversized items; foil packaging or metal implements in the toaster wells.
5. Do not place the item near flammable objects. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
6. Do not touch hot surfaces. Use handles or knobs.
7. Do not touch the body of the toaster while in use; wait for the toaster to cool down.
8. To protect against electrical shock, do not immerse the power cord or power plug or appliance in water or in any other liquid.
9. Close adult supervision is necessary when any appliance is used by or near children.

10. Unplug the appliance from the outlet when not in use and allow toaster to cool before cleaning. Allow to cool before putting on or taking off parts.
11. Do not operate any electrical appliance with a damaged power cord or power plug or operate it after the appliance malfunctions, or has been dropped or damaged in any manner. Return this appliance to nearest authorized service facility for examination, repair or adjustment.
12. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electrical shock or injury to persons.
13. Do not use outdoors or for commercial purposes.
14. Do not allow cord to hang over edge of table or counter, or allow it to come into contact with hot surfaces including stove.
15. Do not place appliance on or near a hot gas or electric burner, or in a heated oven or microwave.
16. To disconnect, turn any control to "off", then remove plug from wall outlet.
17. Place the appliance on a hard, flat level surface to avoid interruption of airflow underneath the burner.
18. Be extra cautious when toasting bread products that contain fats or sugars as the bread may burn. If bread smokes, press CANCEL button or use a lower setting to stop it from burning.
19. Do not attempt to dislodge food when toaster is plugged in as they may involve a risk of fire or electric shock.
20. Do not use the appliance for other than its intended use.

SAVE THESE INSTRUCTIONS

This appliance is for HOUSEHOLD USE ONLY. It may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

Warning: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and:
2. The cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced. Please return it to an authorized service representative.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS

INTERMITTENTLY OR STOPS WORKING ENTIRELY.

CAUTION: To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.

IMPORTANT: During the first few minutes of initial use, you may notice smoke and/ or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Operating Instructions

1. Insert the slices of bread.
2. Select the desired toast setting.
3. Press down the lever completely, the lever will then latch into position.
4. After completion of each toasting cycle, the bread will automatically pop up and the appliance will switch itself off.
5. Carefully remove the bread from the toaster.

NOTE: All types of bread can be used for toasting, but the slices should not be too thin or too thick. Fresh bread and dark coarse bread require longer toasting than drier bread; set appliance with this in mind.

TOASTER FUNCTIONS

- **TOAST:** This is the default setting for general bread. Just adjust the toast shade selector and push the lever downwards to switch on the toaster.
- **BAGEL:** This function is useful for bagels, English muffins or dark whole meal bread. Press the bagel button, adjust the toast shade selector to your preference and push the lever downwards to switch on the toaster.
- **CANCEL:** If you wish to stop toasting during a cycle, just press the cancel button and the toast will pop up immediately.

HELPFUL TIPS

- To change selection user must press the cancel button and then re-select the preferred function(s).
- Selected functions will automatically be cancelled if the lever is not pushed down in approximately 10 seconds.
- Approximately 10 seconds after the lever is pushed down, the selected functions will be automatically locked. The toast shade selector will only function when it is adjusted to a lower toast setting. This safety feature avoids over extended toasting time per cycle.
- Once a cycle is finished, the toaster will automatically return to the default setting which is for general bread toasting conditions, and the user should select the desired function(s) again for the next use.
- The high-lift facility lever makes it easier to remove the toast. When the toasting is complete, press the lever upwards and safely take out the bread.
- Beware of the hot surface when removing the toast.

Features



1. Heat insulated Housing
2. Bagel Button
3. Cancel Button
4. Toast Shade Selector
5. Slide-Out Crumb Tray
6. Power Cord
7. Lever w/High-Lift Facility

Cleaning and Maintenance

CLEANING YOUR TOASTER

1. Remove the plug from the power outlet before cleaning.
2. Do not immerse the appliance into water.
3. Never use an abrasive sponge to clean the appliance, clean with a moist cloth and then dry with a soft cloth.
4. Regularly check and remove bits of toast from the crumb tray.
5. Before removing the crumb tray, allow the appliance to cool for at least ten minutes after completion of the preceding toasting operation.
6. Clean with a moist cloth and then replace the crumb tray into the appliance.
7. Never use the appliance without the crumb tray in position.

Terms and Conditions

CHEFMAN LLC warrants, subject to the conditions stated below, that from the date of purchase, this product will

be free from mechanical defects for a period of THREE (3) years. CHEFMAN LLC, at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, CHEFMAN LLC will repair or replace the same effecting all necessary parts replacements for a period of three years from the date of purchase. Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

This warranty is available to consumers only. You are a consumer if you own a CHEFMAN® 2-SLICE TOASTER WITH EXTRA WIDE SLOTS that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

CONDITIONS: This warranty is valid for the original USA retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty. Warranty registration is not necessary to obtain warranty on CHEFMAN LLC Products. Save your proof of purchase receipt.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR: This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product; improper voltage or current; use contrary to the operation instructions; deviation from instructions regarding storage and transportation; repair or alteration by anyone other than CHEFMAN LLC or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. CHEFMAN LLC shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

HOW TO OBTAIN WARRANTY SERVICE: If your CHEFMAN® 2-SLICE TOASTER WITH EXTRA WIDE SLOTS should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply call our toll-free number 1-888-315-8407 Ext: 400 for additional information from our Customer Service Representatives, or send the defective product to Customer Service at Chefman, 873 Route 45, Suite 101, New City, NY 10956.

To facilitate the speed and accuracy of your return, please enclose \$10.00 for shipping and handling of the product. Please only pay by money order.

This warranty is effective for the time periods listed above and subject to the conditions provided for within this policy.

CHEFMAN is a registered trademark of PLUS ITS CHEAP, LLC.

Warranty Card

2-SLICE TOASTER WITH EXTRA WIDE SLOTS

Your details:.....

Name:.....

Address:.....

E mail:

Date of purchase*.....

* We recommend you keep the receipt with this warranty card

Location of purchase.....

Description of malfunction:.....

Return your completed warranty card to:

RJ Brands
873 Route 45
Suite 101
New City, New York
10956

Phone lines available Monday to Friday, 9am-5pm EST
3-YEAR LIMITED WARRANTY



CHEFMAN®



Like us on facebook



Find us on Pintrest



Follow us on twitter



Watch us on Youtube





Visit us at
www.mychefman.com

Documents / Resources

	<p>CHEFMAN RJ31-P2 Series 2 Slice Toaster [pdf] User Guide</p> <p>RJ31-P2 Series 2 Slice Toaster, RJ31-P2, Series 2 Slice Toaster, 2 Slice Toaster, Slice Toaster, Toaster</p>
-----------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

-  [Manual-Hub.com - Free PDF manuals!](#)
-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.