

# **CHEREEKI Wired Game Controller User Guide**

Home » CHEREEKI » CHEREEKI Wired Game Controller User Guide



Wired Game Controller User Guide

#### Contents [ hide

- 1 How to Use on PC
- 2 How to Use on PS3
- **3 SPECIFICATIONS**
- **4 Product Diagram**
- 5 Documents /
- **Resources**
- **6 Related Posts**

#### How to Use on PC

- 1. This controller is fully compatible with Windows 7 / 8 / 8.1 / 10.
- 2. Plug the controller into one of the USB ports on the PC. The driver will be installed automatically and you can use the controller directly.
- 3. To disconnect the controller, pull on the connector rather than the cable to prevent the PC from falling.
- 4. If the controller can not be recognized by the PC, please refer to the last page of the manual to manually download and install the driver.


## How to Use on PS3

- 1. This controller is fully compatible with PS3.
- 2. Plug the controller into one of the USB ports on the PS3.
- 3. To disconnect the controller, pull on the connector rather than the cable to prevent the PS3 from falling.

## **SPECIFICATIONS**

Product Name	Wired Game Controller
Model	EG-C3071
Product Batch	20220410-08
Dimensions	154 x 113 x 58mm
Weight	205g
Material	ABS
Operating Voltage	3.7V
Manufacturer	SHENZHEN LEDA TECHNOLOGY CO., LTD.
Address	No. 202 Huaqing Avenue, Longhua District, Shenzhen 518000, China
Service Email	support@chereeki.com
EC REP	UNLIMITE 24 RUE LAMARTINE, 38320, EYBENS, FRANCE unlimite-sas@hotmail.com
UK REP	LEDA TECHNOLOGY CO., LIMITED  4D Salisbury Road, Weston-Super-Mare, Somerset, United Kingdom, BS22 8EW ledatec@hotmail.com

# **Product Diagram**

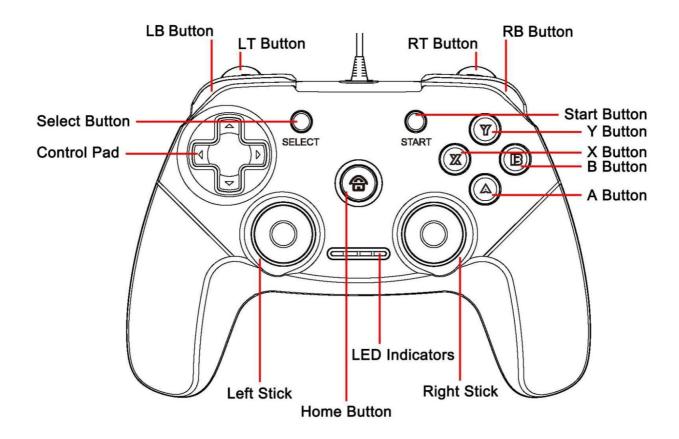

## **Documents / Resources**



Manuals+, home privacy