



# CHERRY A1UcM6SurpL Stream Keyboard Instructions

[Home](#) » [CHERRY](#) » CHERRY A1UcM6SurpL Stream Keyboard Instructions 


## Contents

- 1 CHERRY A1UcM6SurpL Stream Keyboard
- 2 Key Function Overview
- 3 For your safety
- 4 Connecting keyboard
- 5 Cleaning the keyboard
- 6 If the keyboard is not working
- 7 Device disposal
- 8 Technical data
- 9 Certifications
  - 9.1 Federal Communications Commission (FCC) Radio Frequency Interference Statement
  - 9.2 For UL
  - 9.3 UKCA
- 10 Customer Service
- 11 Documents / Resources
  - 11.1 References
- 12 Related Posts

**CHERRY A1UcM6SurpL Stream Keyboard**



## Key Function Overview

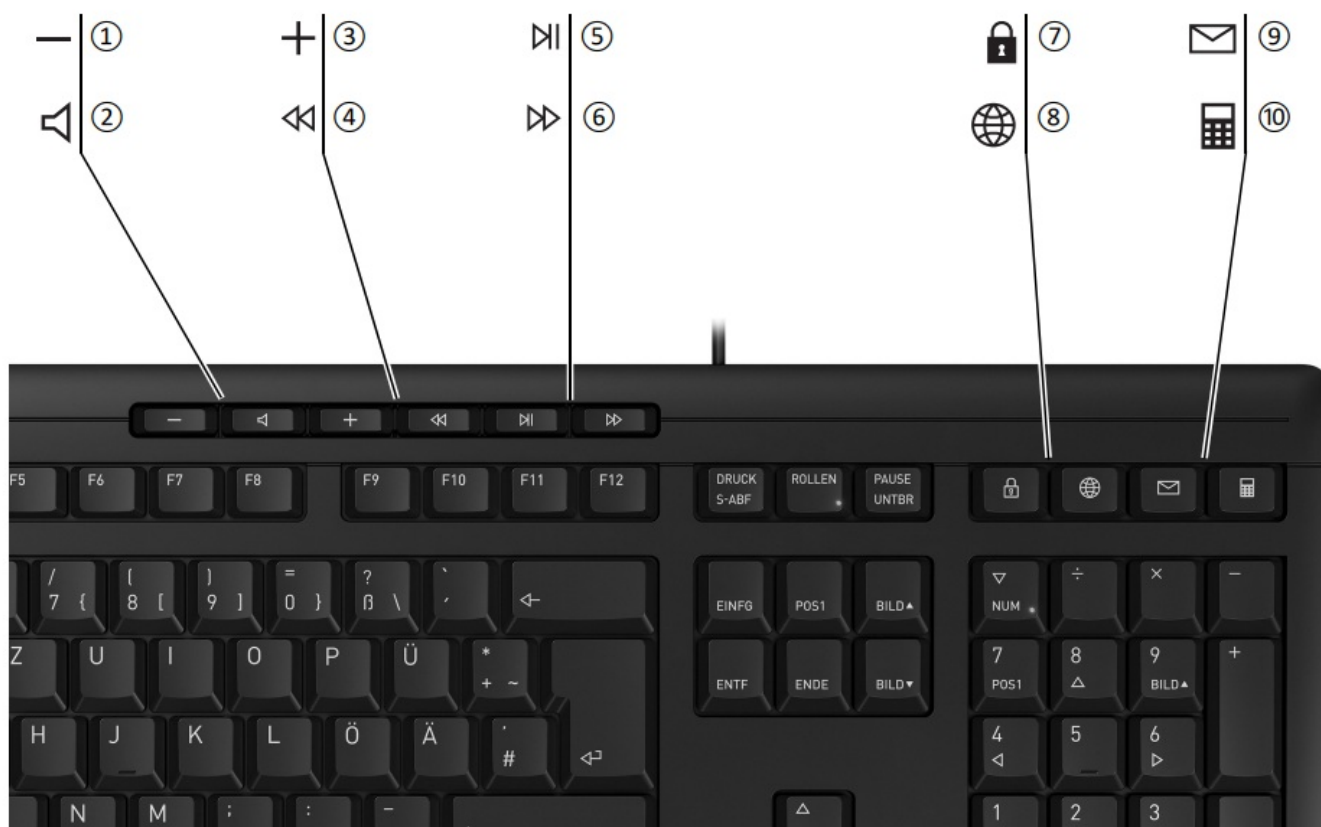

- ① Volume down
- ② Sound on/off
- ③ Volume up
- ④ Previous title
- ⑤ Play/pause
- ⑥ Next title
- ⑦ Blocking the PC
- ⑧ Browser, home
- ⑨ E-Mail program
- ⑩ Calculator

**Before you begin ...**



### **Every device is different!**

The operating instructions contain information on effective and reliable use.

- Read the operating instructions carefully.
- Keep the operating instructions and pass them on to other users.

The CHERRY STREAM KEYBOARD is a keyboard for operating computers.

For information on other products, downloads and much more, visit us at [www.cherry.de](http://www.cherry.de).

## **For your safety**

### **RSI stands for “Repetitive Strain Injury”**

RSI arises due to small movements continuously repeated over a long period of time.

- Set up your workspace ergonomically.
- Position the keyboard and mouse in such a manner that your upper arms and wrists are outstretched and to the sides of your body.
- Take several short breaks, with stretching exercises if necessary.
- Change your posture often.

## **Connecting keyboard**

- Connect the keyboard to the USB port of the PC/ laptop.  
The keyboard is ready to use without installing any software.

## **Cleaning the keyboard**

1. Switch off the PC.

### **NOTE! Aggressive cleaning agents and liquids can damage the keyboard**

- Do not use solvents such as gasoline or alcohol and scouring agents or scouring sponges for cleaning.
  - Prevent liquids from entering the keyboard.
  - Do not remove the keycaps of the keyboard.
2. Clean the keyboard with a slightly damp cloth and some mild cleaning agent (e.g. dishwashing liquid).
  3. Dry off the keyboard with a soft, lint-free cloth.

## **If the keyboard is not working**

- Use another USB port on the PC/laptop.
- To make sure that the keyboard is not defective, test it if possible with another PC/laptop.
- Set the option “USB Keyboard Support” or “USB Legacy Mode” to “enabled” in the BIOS of the PC.

## **Device disposal**



- Do not dispose of devices with this symbol in household waste.
- Dispose of the devices in accordance with statutory regulations – at your local dealer or at municipal recycling centers.

## Technical data

Designation	Value
Supply voltage	5.0 V/DC $\pm 5\%$ SELV
Current consumption	20 mA
Storage temperature	-25 °C ... +65 °C
Operating temperature	0 °C ... +50 °C

## Certifications

### Federal Communications Commission (FCC) Radio Frequency Interference Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### For UL

For use with Listed Personal Computers only!

### UKCA

UK Authorised Representative:  
Authorised Representative Service  
The Old Methodist Chapel  
Great Hucklow  
SK17 8RG  
UK

## Customer Service

### For Europe

Cherry Europe GmbH  
Cherrystraße 2  
91275 Auerbach/OPf.  
Germany  
Internet: [www.cherry.de](http://www.cherry.de)

### For USA

Cherry Americas, LLC  
5732 95th Avenue  
Suite 850  
Kenosha, WI 53144  
USA  
Tel.: +1 262 942 6508  
Email: [sales@cherryamericas.com](mailto:sales@cherryamericas.com)  
Internet: [www.cherryamericas.com](http://www.cherryamericas.com)



## Documents / Resources



[CHERRY A1UcM6SurpL Stream Keyboard](#) [pdf] Instructions  
A1UcM6SurpL Stream Keyboard, A1UcM6SurpL, Stream Keyboard, Keyboard

## References

- [CHERRY - mice and keyboards for professionals](#)
- [CHERRY Deutschland - Mäuse, Tastaturen und Eingabegeräte für Profis](#)
- [CHERRY - mice and keyboards for professionals](#)