


Choetech BH-013 Wireless Keyboard Case with Touchpad User Manual

Home » CHOETECH » Choetech BH-013 Wireless Keyboard Case with Touchpad User Manual



Wireless Keyboard Case with Touchpad
User Manual

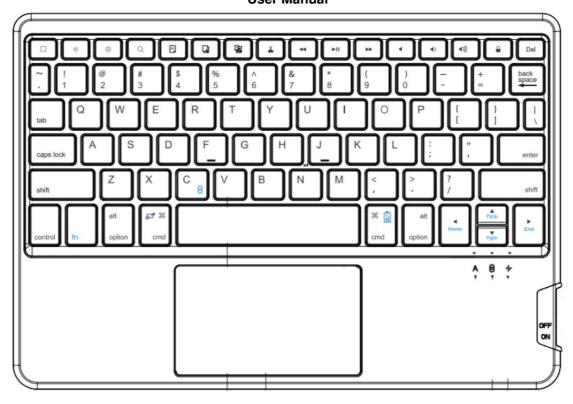

Contents [hide

- 1 BH-013 Wireless Keyboard Case with
- **Touchpad**
- 2 Package contents
- 3 Keyboard diagram
- **4 Specifications**
- **5 Operation instructions**
- **6 Touchpad function**
- **7 Warranty Conditions**
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

BH-013 Wireless Keyboard Case with Touchpad


Dear customer,

Thank you for purchasing our product. Please read the following instructions carefully before first use and keep this user manual for future reference. Pay particular attention to the safety instructions. If you have any questions or comments about the device, please contact the customer line.

Package contents

- 1 x Choetech Wireless Keyboard Case with Touchpad,
- 1 x User Manual,
- 1 x After-sale Card


Keyboard diagram

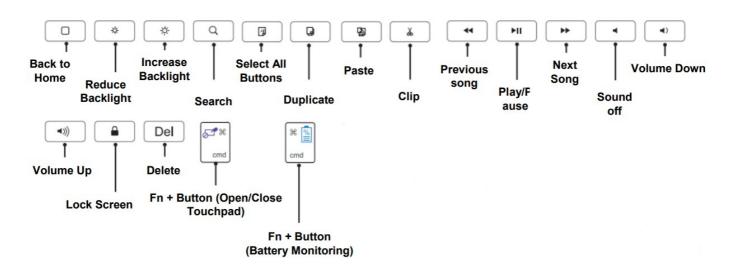

Battery monitoring instructions:

The power light will flash when Press "Battery monitor indicator".

- 1. Red light flashes once, it means the battery power 0-25 %.
- 2. Red light flashes twice, it means the battery power 25-50 %.
- 3. Red light flashes three times, it means battery power 50-75 %.
- 4. Red light flashes four times, it means battery power 75-100 %.

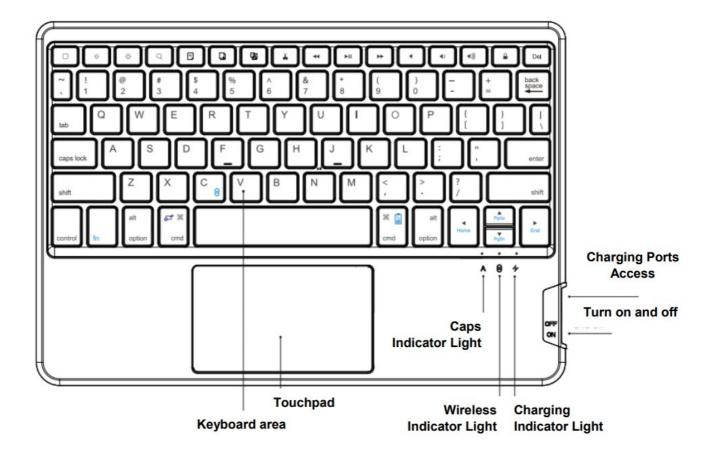

The blue screen printing on the keyboard should be cooperated with "Fn". For example, if you want to see the first website, please press the button of "Fn + Pgup". Press "Fn + C" into wireless matching condition.

Indicator light:

| Caps Indicator Light | Light on means uppercase input, light off means lowercase input. |
|--------------------------|--|
| Wireless Indicator Light | Press "Fn + C" blinking blue light slowly for keyboard match to device, light will be off after finishing. |
| Charging Indicator Light | Blinking – Low Battery (Red) – Device is Charging (Red) – Charging complete (G reen) |

Specifications

| Working current | ≤10 mA | Working voltage | 3.0~4,2 V |
|----------------------|---------------|-------------------|-----------------|
| Low voltage alert | 3.0~3.3 -v | Working time | ≤70 hours |
| Battery standby time | ≥150 days | Sleeping current | ≤0.3 mA |
| Battery lifetime | 3 years | Battery capacity | ≤180 mAh |
| Charging port | USB-C | Keyboard lifetime | 3 Million times |
| Charging time | 2-3 hours | Connect distance | ≤10 m |
| Awaken time | ≤2 seconds | Charging current | ≤200 mA |
| Working temperature | -10°C ~+ 55°C | Matching password | Random |

Operation instructions

Connect:

- 1. Install device first, and then fold front cover for standing the device.
- 2. Dial ON/OFF button on right direction for opening keyboard, press "Fn + C" into wireless matching condition. (The wireless indicator light blinks slowly.)
- 3. Open Wireless on device, search keyboard name (Wireless Keyboard) for matching device to Keyboard (or pair without a password).
- 4. Input the numbers which shows on the device, and then press "Enter" key for finishing match.
- 5. The Keyboard will automatically sleep if you do not use it within 10 minutes. Then press any key and wait 2-3 seconds, the device will automatically return the last time you read.

Note: The effective time of pairing status is about 2 minutes, and the indicator light will go out after successful connection.

Disconnect: Clear the pairing information on your device or turn off the keyboard power directly to break the connection.


Attentions

- 1. Please charge the keyboard in time when power indicator light turns red.
- 2. The power indicator light is red in charging status, and it will become green when the keyboard is fully charged.
- 3. If there is no operation in 10 minutes, the keyboard will go to sleep mode, please press any key for 2-3 seconds to wake it up.
- 4. Do not squeeze, twist or pat on the keyboard. And clean it with a soft cloth.
- 5. Keep it away from liquid, fire, and magnetic field.
- 6. Please do not connect multiple wireless keyboards at the same time, if necessary, please connect one by one.

Common connecting problems and solutions

- 1. Make sure you have turned on the power and the keyboard battery are enough.
- 2. Make sure the keyboard is within the effective working distance.
- 3. Make sure the relative wireless function is open.
- 4. Make sure the keyboard has paired with the device.
- 5. Remove the device pairing record and turn off the wireless function and rematch.

Touchpad function

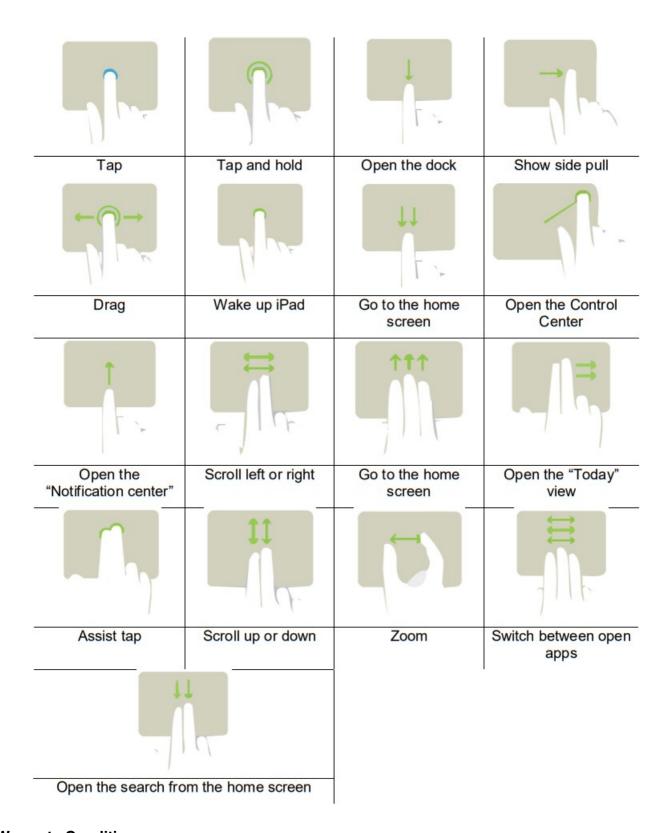

Warranty Conditions

A new product purchased in the Alza.cz sales network is guaranteed for 2 years. If you need repair or other services during the warranty period, contact the product seller directly, you must provide the original proof of purchase with the date of purchase.

The following are considered to be a conflict with the warranty conditions, for which the claimed claim may not be recognized:

- Using the product for any purpose other than that for which the product is intended or failing to follow the instructions for maintenance, operation, and service of the product.
- Damage to the product by a natural disaster, the intervention of an unauthorized person or mechanically through the fault of the buyer (e.g., during transport, cleaning by

inappropriate means, etc.).

- Natural wear and aging of consumables or components during use (such as batteries, etc.).
- Exposure to adverse external influences, such as sunlight and other radiation or electromagnetic fields, fluid intrusion, object intrusion, mains overvoltage, electrostatic discharge voltage (including lightning), faulty supply or input voltage and inappropriate polarity of this voltage, chemical processes such as used power supplies,
- If anyone has made modifications, modifications, alterations to the design or adaptation to change or extend the functions of the product compared to the purchased design or use of non-original components.

EU Declaration of Conformity

Identification data of the manufacturer's / importer's authorized representative:

Importer: Alza.cz a.s.

Registered office: Jankovcova 1522/53, Holešovice, 170 00 Prague 7

CIN: 27082440

Subject of the declaration:

Title: Wireless Keyboard Case with Touchpad

Model / Type: BH-013

The above product has been tested in accordance with the standard(s) used to demonstrate compliance with the essential requirements laid down in the Directive(s):

Directive No. 2014/53/EU

Directive No. 2011/65/EU as amended 2015/863/EU



WEEE

This product must not be disposed of as normal household waste in accordance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE – 2012/19 / EU). Instead, it shall be returned to the place of purchase or handed over to a public collection point for the recyclable waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. Contact your local authority or the nearest collection point for further details. Improper disposal of this type of waste may result in fines in accordance with national regulations.

www.alza.co.uk/kontakt

© +44 (0)203 514 4411
Importer Alza.cz a.s., Jankovcova 1522/53, Holešovice, 170 00 Praha 7,

www.alza.cz

Documents / Resources



<u>Choetech BH-013 Wireless Keyboard Case with Touchpad</u> [pdf] User Manual BH-013 Wireless Keyboard Case with Touchpad, BH-013, Wireless Keyboard Case with Touchpad, Keyboard Case with Touchpad, Touchpad, Touchpad

References

- 🍇 alza.at
- <u>alza.co.uk</u>
- 🍇 alza.de
- <u>alza.hu</u>
- 🍇 alza.sk

Manuals+, home privacy