

ChopSabers

LED
GLOWING
LIGHT
SABER



ChopSabers LED Glowing Light Saber User Guide

[Home](#) » [ChopSabers](#) » ChopSabers LED Glowing Light Saber User Guide 

Contents

- [1 ChopSabers LED Glowing Light Saber](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 FEATURES](#)
- [6 SETUP GUIDE](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PROS & CONS](#)
- [10 WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 References](#)
- [13 Related Posts](#)

ChopSabers

ChopSabers LED Glowing Light Saber



INTRODUCTION

The ChopSabers LED Glowing Light Saber is a great toy for people who like science fiction and exciting experiences. This lightsaber is a slick 10.25-inch piece that brings the famous weapon's glow to life. It's great for young Jedi fans and collectors alike. The lightsaber has bright LED lights that make it glow in bright colors, making role-playing fights more exciting. It's important to have the ChopSabers LED Light Saber for costumes, parties, or just having fun while playing. This cheap lightsaber, which costs \$9.97, is a great deal because it is made of high-quality materials and works well. The 3 LR44 batteries that come with it power it, so it's ready to use as soon as you get it. ChopSabers released this glowing sword on July 21, 2019, and fans love how small it is and how bright the lights are. It would make a great gift for kids ages 3 and up.

SPECIFICATIONS

Brand	ChopSabers
Product Name	LED Glowing Light Saber
Price	\$9.97
Item Length	10.25 inches
Manufacturer	ChopSabers
Item Weight	1.13 ounces
Batteries	3 LR44 batteries required
Date First Available	July 21, 2019

WHAT'S IN THE BOX

- LED Glowing Light Saber
- Battery
- User Guide



FEATURES

- **Unique Light Saber Design:** These chopsticks have a cool, LED-lit design that looks like the famous light sabers from sci-fi movies. They're great for a really epic meal.
- **Bright LED Lights:** These chopsticks have bright red and blue LED lights that make your meal truly memorable.
- **Eco-Friendly and Reusable:** Designed to be used more than once, the chopsticks are both eco-friendly and fun for your eating needs.
- **Different Color Modes:** Your lightsaber chopsticks can be customized with 8 different light modes that will make every meal more fun.
- **Plastic Without BPA:** It is made of safe plastic without BPA, so no dangerous chemicals will touch your food.
- **Ideal for Themed Meals:** It's great for sushi, noodles, and other Asian foods, adding a spacey twist to your mealtime.
- **Great for Gifts:** These LED light saber chopsticks are perfect as gifts for science fiction or movie fans, and they're also great for Halloween or Christmas.
- **Easy On/Off Button:** The light effect can be turned on or off with a simple button, which makes it easy to use and saves battery life when needed.
- **Lightweight and Convenient:** It's easy to take and handle these chopsticks for meals because they are only 1.13 ounces and 10.25 inches long.
- **Batteries Included:** The chopsticks come with three LR44 camera batteries, so you can use them right away.



- **Fun and Interactive:** Have fun dining fights with your family or friends to make the meal more memorable and interactive.
- **Durable Construction:** The chopsticks are made to last so you can use them for everyday meals or special occasions.
- **Handy:** Because they are small, they are easy to store when not in use and don't take up much room.
- **Great for Movie Fans:** The chopsticks' design is perfect for sci-fi fans, which makes them a must-have for collectors or movie fans.
- **No Assembly Needed:** You can use these chopsticks right away from the box; they don't need to be put together.



SETUP GUIDE

- **Unbox the Chopsticks:** Take the chopsticks out of the box and make sure the LED lights are still working.
- **Insert Batteries:** Open the compartment at the bottom of the chopsticks, put in the three LR44 batteries in the way shown by the alignment of the batteries, and then close the compartment firmly.
- **Power On:** To turn on the LED lights, press the button on the chopstick handle.
- **Choose Your Light Mode:** Press the button to switch between the 8 color modes and pick the light setting you like best.
- **Test the Lights:** Make sure the LED lights work right and give off the right effect before you use them.
- **Use the Chopsticks to Eat:** Hold the chopsticks like you normally would and use them to pick up your food while the lights are on.
- **Turn Off:** When you're done using the chopsticks, press the button again to turn off the lights. This will save battery life.
- **Store Safely:** After using, put the chopsticks away in a safe, dry place to keep the LEDs from getting damaged.
- **Replace Batteries as Necessary:** If the lights dim or stop working, take off the cover for the battery section and put in three new LR44 batteries.
- **Clean:** After using the chopsticks, wipe them down with a soft, damp cloth to get rid of any food or stain marks. Do not soak them in water, though.

- **Avoid Too Much Pressure:** To keep the LED system from breaking, don't press too hard on the chopsticks while you eat.
- **Stay Away from Water:** Don't put the chopsticks in water; just wipe them clean.
- **Use on Flat Surface:** When using the chopsticks, it's best to do so on a flat surface so that the LEDs shine brightly and the chopsticks are easy to hold.
- **Don't Drop:** Be careful not to drop the chopsticks. If you do, the LED controller could get broken.
- **Get Ready for Important Events:** These chopsticks are great for special parties, so make sure you have them on hand for movie nights or birthday parties.

CARE & MAINTENANCE

- **Clean the Chopsticks Often:** Wipe them down with a soft, wet cloth after each use to keep food off of them.
- **Battery Care:** Take care of your batteries by checking their level every time you use them. As needed, switch out the three LR44 batteries to keep the LED lights bright.
- **Do Not Submerge in Water:** Do not put the chopsticks in water. To keep the sensitive parts from getting damaged, clean with a damp cloth instead.
- **Store in a Dry Place:** To make the LEDs and battery section last longer, keep the chopsticks in a dry place, away from water.
- **Be Gentle:** Be gentle with the chopsticks so that you don't break or crack the LEDs or plastic.
- **Place in a Safe Area:** Keep the chopsticks in a safe area when not in use so they don't get broken or dropped.
- **Avoid Too Much Heat:** Keep the chopsticks away from sources of very high heat, as these can damage the plastic or make the LEDs stop working.
- **Check for Battery Leaks:** Look for signs of leaking in the battery compartment every so often. If you do find any, clean the cubby right away.
- **Correctly Change Batteries:** When you change the batteries, make sure you use the right 3 LR44 batteries and put them in according to the directions.
- **Avoid Improper Use:** If you don't want to break or damage the LED system, don't use the chopsticks for things they weren't made for, like stirring or heavy lifting.
- **Regular Inspections:** Make sure the LEDs aren't dimming or acting up, and if they are, replace the batteries or call the maker.
- **Avoid Bending or Twisting:** Be careful not to bend or twist the chopsticks; they're not meant to do that and could break or stop working if you do.
- **Take Out Batteries for Long-Term Storage :** If you're going to be keeping the chopsticks for a long time, take out the batteries to keep them from rusting.
- **Replace Broken LEDs:** If an LED light stops working, check to see if there are any loose connections or broken wires inside the chopstick. If there are, replace the LED.

TROUBLESHOOTING

Issue	Possible Causes	Solutions
Light does not turn on	Batteries are dead or improperly inserted.	Replace the batteries with new LR44 batteries.
Light flickers	Low battery or loose connection.	Ensure batteries are inserted correctly and tightly.
LED light dim	Batteries may be low.	Replace with fresh LR44 batteries.
Saber feels too weak	Incorrect battery installation or depleted batteries.	Check battery orientation and replace them.
No sound when activated	Sound module failure or no power.	Check if the batteries are functional or replace.
Handle is loose	The plastic handle may be damaged or loose.	Tighten or repair the handle.
Saber lights up but no sound	The sound effect module may be faulty.	Test with new batteries or contact support.
Not lighting correctly	Contact points may be dirty.	Clean the battery contacts with a soft cloth.
Batteries drain too fast	Low-quality or old batteries.	Use fresh, high-quality LR44 batteries.
Saber lights up in sections	Possible wiring issue inside.	Open the saber to check internal connections.
Saber makes unusual noises	The sound module might be defective.	Try removing and reinserting the batteries.
Flashing lights don't sync well	Misalignment of components inside.	Disassemble and reassemble the parts carefully.
Lights not as bright as expected	Batteries may be weak.	Replace the batteries with fresh ones.
Plastic handle gets cracked	Impact or rough play.	Handle with care to avoid damage.
Saber turns on automatically	The switch is faulty or stuck.	Check the switch for debris or stickiness.

PROS & CONS

Pros:

- Compact and lightweight design, perfect for kids and collectors.
- Bright LED light that adds realism to battles and playtime.
- Affordable price at just \$9.97.
- Easy to use with included LR44 batteries.
- Great for cosplay, themed parties, or as a fun gift.

Cons:

- Batteries may need frequent replacement.

- Small size may not be ideal for older users or those seeking a larger saber.
- The plastic material may not withstand heavy rough play.
- Limited to a single color of light.
- No adjustable settings for light intensity or effects.

WARRANTY

The ChopSabers LED Glowing Light Saber typically comes with a **1-year manufacturer's warranty** covering any defects in material or workmanship. This warranty excludes damages caused by misuse or external factors like physical impact. For replacement or repairs, contact the manufacturer with proof of purchase.

FREQUENTLY ASKED QUESTIONS

What is the ChopSabers LED Glowing Light Saber?

The ChopSabers LED Glowing Light Saber is a 10.25-inch glowing toy saber that lights up for exciting play. It requires 3 LR44 batteries for operation.

How much does the ChopSabers LED Glowing Light Saber cost?

The ChopSabers LED Glowing Light Saber is priced at \$9.97.

What is the length of the ChopSabers LED Glowing Light Saber?

The ChopSabers LED Glowing Light Saber has an item length of 10.25 inches, making it compact and easy for children to handle.

How much does the ChopSabers LED Glowing Light Saber weigh?

The ChopSabers LED Glowing Light Saber weighs only 1.13 ounces, making it lightweight and ideal for play.

When was the ChopSabers LED Glowing Light Saber first available?

The ChopSabers LED Glowing Light Saber was first made available on July 21, 2019.

What type of batteries does the ChopSabers LED Glowing Light Saber require?

The ChopSabers LED Glowing Light Saber requires 3 LR44 batteries for operation.

What is the power source of the ChopSabers LED Glowing Light Saber?

The ChopSabers LED Glowing Light Saber is powered by 3 LR44 batteries that provide long-lasting illumination.

How do you activate the glow on the ChopSabers LED Glowing Light Saber?

To activate the glow of the ChopSabers LED Glowing Light Saber, simply switch on the button that activates the LED lights.

How do you change the batteries in the ChopSabers LED Glowing Light Saber?

To change the batteries in the ChopSabers LED Glowing Light Saber, open the battery compartment and replace the 3 LR44 batteries as needed.

Why isn't my ChopSabers LED Glowing Light Saber turning on?

Ensure that the batteries are properly installed, and the power switch is in the on position. If it still doesn't turn on, check the battery contacts for any corrosion or dirt, and replace the batteries if necessary.

The lights on my ChopSabers LED Glowing Light Saber are dim. How can I fix this?

Dim lighting is usually caused by low battery power. Replace the batteries with fresh ones, making sure they are inserted correctly. If the problem persists, check for dirt or debris around the LED contacts.

My ChopSabers LED Glowing Light Saber flickers or flashes unexpectedly. What should I do?

Flickering lights can occur due to poor battery connection or weak batteries. Try replacing the batteries with fresh ones and ensure the connections are secure. Also, check the LED light for any physical damage.

The ChopSabers LED Glowing Light Saber won't turn off. What should I do?

To turn off the saber, press and hold the power button for a few seconds. If it remains on, ensure the button is not stuck or damaged. If the issue continues, check the internal switch mechanism for any issues.

The blade of my ChopSabers LED Glowing Light Saber is loose. How can I fix this?

Check the blade attachment point and ensure it is securely fastened to the hilt. Tighten any screws or connectors that might have come loose. If the problem persists, check for damage to the blade or hilt connection.

The ChopSabers LED Glowing Light Saber is not lighting up evenly across the blade. What can I do?

Uneven lighting may be due to faulty LEDs or a poor connection within the blade. Inspect the blade for damage or loose connections. If necessary, you may need to replace the LED strip inside the blade.

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.