



# ChromaCast CC-1 Multi Functional Clip On Tuner Owner's Manual

[Home](#) » [ChromaCast](#) » ChromaCast CC-1 Multi Functional Clip On Tuner Owner's Manual 

## Contents

- [1 ChromaCast CC-1 Multi Functional Clip On Tuner](#)
- [2 Safety and Battery Instruction](#)
- [3 Operation](#)
- [4 Specifications](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)

# CHROMACAST™

## ChromaCast CC-1 Multi Functional Clip On Tuner



## CC-1

Thank you for purchasing the CC-1 Clip-On Tuner. The display can be easily rotated in different directions and angles. Please read this manual carefully to make sure that you use your tuner correctly and keep it for future reference.

## Safety and Battery Instruction


### Safety

1. Never use alcohol, petrol, or any other strong chemical to wipe the exterior of the tuner or the LCD screen.
2. Do not crush or scratch the exterior as the tuner's condition may diminish or malfunction.

### Battery Use

1. Confirm the correct polarity(+,-) when putting in a new battery.
2. Take out the battery when the tuner is not in use for a long period of time.
3. If the battery malfunctions, take it out and place it back in after ten seconds.
4. Replace the battery if the LCD screen lights are weak or unclear.
5. If corrosion of your battery should occur, replace it immediately.
6. Dispose of the old battery properly.

### Product Interface

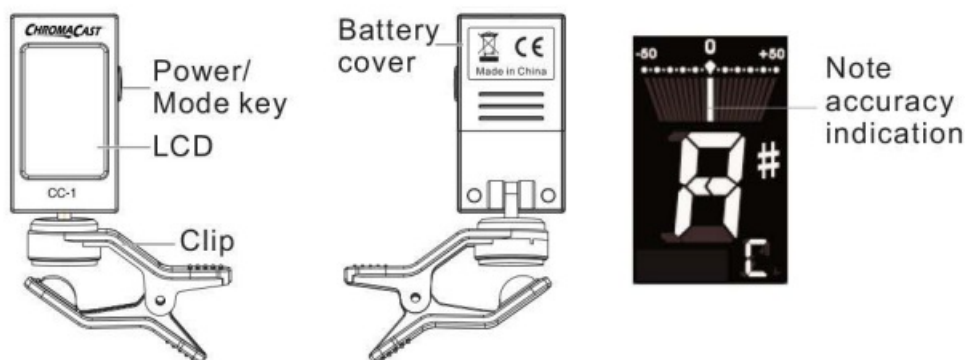

## Operation

Insert the battery, hold down the power button to turn it on.

### Button Functions

#### 1. Power on

- Press and hold button to turn on. The LCD screen will light up as an “on” indication.

#### 2. Power off

- Press and hold the power button and the LCD display will turn off.

If no use is detected after 3 minutes, it will turn off automatically.

- **Mode changes:** Tap the power button to cycle through modes (Chromatic, Guitar, Bass, Violin, and Ukulele).

## Tuning

1. After choosing the tuning mode, turn the clip towards you for easy observation and clip the tuner to the instrument.
2. Play a single note on your instrument. When the tuner detects the note, it will show the corresponding note and string number closest to the pitch detected by the clip.
3. The “note accuracy indication needle” will move in relation to the note. If the needle is to the left the pitch is too low (flat) and if it is to the right, the pitch is too high (sharp). The tuner will read the pitch and the color will be orange until the instrument is in tune. Tune your instrument until the needle points to the middle and the LCD display changes to green.
4. Under the Chromatic mode, the note name will display on the screen.  
(C, C#, D, D#, E, F, F#, G, G#, A, A#, B). If the note name is lower than the actual string played, adjust the instrument to make it higher pitched until in tune.
5. Under the Guitar, Bass, Violin, and Ukulele modes, the note name will display on screen. The note will display as the proper note and string number (Guitar: 6E, 5A, 4D, 3G, 2B, 1 E).

## Specifications

1. **Tuning mode:** Chromatic/Guitar/Bass/Violin/Ukulele
2. **Tuning range:** B0-B7
3. **A4 calibration:** 440Hz
4. **How to tune:** Clip onto instrument, power on, and play.
5. **Tolerance:** +/-1 cent
6. **Power:** (1) 3V CR2032 battery
7. **Weight:** 30g

## Notice to Consumers

### IMPORTANT NOTICE TO CONSUMERS


This product has been manufactured according to strict specifications and voltage requirements that are applicable in the country in which it is intended that this product should be used. If you have purchased this product via the internet, through mail order, and/or via a telephone sale, you must verify that this product is intended to be used in the country in which you reside. This product is intended for use in the United States.

### WARNING

Use of this product in any country other than that for which it is intended could be dangerous and could invalidate the manufacturer's or distributor's warranty. Please also retain your receipt as proof of purchase otherwise your product may be disqualified from the manufacturer's or distributor's warranty.

- Copyright© 2014. All rights reserved. [www.ChromaCast.com](http://www.ChromaCast.com)
-

Documents / Resources

	<p><a href="#">ChromaCast CC-1 Multi Functional Clip On Tuner</a> [pdf] Owner's Manual</p> <p>CC-1 Multi Functional Clip On Tuner, CC-1, Multi Functional Clip On Tuner, Functional Clip On Tuner, Clip On Tuner, Tuner</p>
---	---

References

- [User Manual](#)