

CHROMACAST CC-KSTAND Double Braced X-Style Pro Series Keyboard Stand User Guide

<u>Home</u> » <u>ChromaCast</u> » CHROMACAST CC-KSTAND Double Braced X-Style Pro Series Keyboard Stand User Guide [™]



Contents

- 1 CC-KSTAND Double Braced X-Style Pro Series Keyboard Stand
- **2 KEYBOARD STAND ASSEMBLY**
- 3 Documents / Resources
 - 3.1 References
- **4 Related Posts**

CC-KSTAND Double Braced X-Style Pro Series Keyboard Stand



MODEL: CC-KSTAND

KEYBOARD STAND ASSEMBLY



Parts Included: In order to form top to Bottom

- -2ea. X-Braces -2ea. Upper Bars (Shorter)
- -2ea. Lower Bars (Longer) -8ea. Hex Bolts
- -1 Hex Key
- -Adjustable wrench or pliers will be required (not included)



Loosen the center nut, and pull out the adjustment knob.



Pull and release the adjustment knob to secure the stand in an "X" position, as seen in this image. The adjustment knob must be inserted into the height adjust wheel.

Center nut must then be re-tightened.



Attach the 2 lower bars (longer) to each X-Brace by inserting 2 hex bolts through each bar, and tighten with the hex wrench. Repeat and attach the 2 upper bars (shorter) on the opposite end by inserting 2 hex bolts through each bar and tighten with the hex wrench.



Remove one of the rubber pads on the upper bars (shorter) to put the locking straps on if desired. Then put the rubber pad back on. Now you're ready to play!



Documents / Resources



CHROMACAST CC-KSTAND Double Braced X-Style Pro Series Keyboard Stand [pdf] User Guide

CC-KSTAND Double Braced X-Style Pro Series Keyboard Stand, CC-KSTAND, Double Braced X-Style Pro Series Keyboard Stand, Pro Series Keyboard Stand, Keyboard Stand

References

• User Manual

Manuals+,