



## CHUANGO RC-80 Remote Control User Manual

[Home](#) » [CHUANGO](#) » CHUANGO RC-80 Remote Control User Manual 

# CHUANGO®

RC-80  
Remote Control  
MULTILINGUAL  
USER MANUAL



## Contents


- [1 Introduction](#)
- [2 Overview](#)
- [3 Connect Remote Control](#)
- [4 Operating Instructions](#)
- [5 Specifications](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

## Introduction

RC-80 remote control is dainty and delicate, easy to carry. It can be attached to your key rings, or just put into your pockets or purses.

When you are about to exit or enter the house, you can use it to arm or disarm the system, In case of emergency, press the [SOS] button, and the alarm will be activated immediately.

## Overview

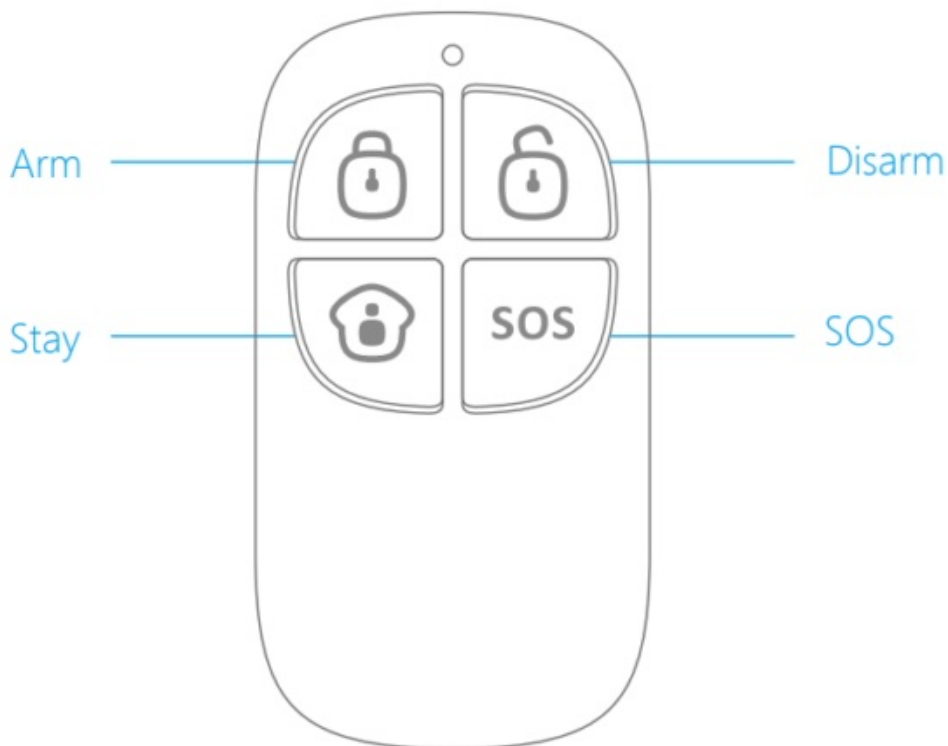












## Connect Remote Control

Connecting the remote control is to build a wireless connection between the remote control and the control panel.

1. The Control panel enters into the connecting state (For details, please refer to the relative user manual).
2. Press any key on the remote control, and the control panel beeps once, indicating a successful connection.

**Note:** If the control panel beeps twice when the above operation is done, it means the remote control has been connected before.

## Operating Instructions

Icon	Operation	Meaning
	Arm	Press this button, and the control panel beeps once, indicating the whole system is armed.
	Disarm	Press this button, and the control panel beeps twice, then the system is disarmed except for those sensors in the 24-hour zone.
	Stay	Press this button, and all the sensors in home mode will enter disarm status. While other sensors remain in arm status, the user can move freely in the home zone.
<b>SOS</b>	SOS	Press this button, the system will enter into the alarm state immediately.
 + 	Mute Arm	Press the [Stay  ] button for 1 second, wait until its indicator flashes once then press the [Arm  ] button within 3 seconds, and the system is armed silently.
 + 	Mute Disarm	Press the [Stay  ] button for 1 second, wait until its indicator flashes once then press the [Disarm  ] button within 3 seconds, the system is disarmed silently.

## Specifications

**Power Supply:** DC 3 V CR2025 Lithium Battery x 1

**Transmit Current:** <7 mA

**Transmitting Distance:** <80 m (Open area/no interference)

**Radio Frequency:** 433.92MHz

**Housing Material:** PC+ABS plastic

**ERP(dBm).MAX:** -14.81

**Operation Condition:**

**Temperature:** 0 °C ~ +55 °C

**Relative Humidity:** <80% (non-condensing)

**Dimensions:** 58 x 31 x 9.5 mm




Printed in China

Ver: RC-80-UM-ML-V1.0

© Chuango. All Rights Reserved.

Documents / Resources

	<p><a href="#">CHUANGO RC-80 Remote Control</a> [pdf] User Manual RC-80 Remote Control, RC-80, Remote Control</p>
---	---

[Manuals+.](#)