



ChunHee HI03-IM-2 Wireless Home Intercom System For Elderly User Manual

[Home](#) » [ChunHee](#) » ChunHee HI03-IM-2 Wireless Home Intercom System For Elderly User Manual 

Contents

- [1 ChunHee HI03-IM-2 Wireless Home Intercom System For Elderly](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 Intercoms](#)
- [6 Installing](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

ChunHee

ChunHee HI03-IM-2 Wireless Home Intercom System For Elderly



Product Information

The Wireless Intercom System is a communication device that allows for convenient and efficient intercom communication within a specified range. It consists of multiple intercom devices that can be set to the same channel to enable seamless communication.


- **Volume +/-:** This feature allows you to adjust the volume of the intercom voice. There are four levels available: 1, 2, 3, and 4. Each level corresponds to a specific volume level ranging from 60dB to 115 dB.
- **Channel Setting:** By pressing the designated buttons, you can change the channel of the intercom system. The system supports 16 channels, numbered from 1 to 16.
- **Tips:** In order to communicate effectively, all intercom devices must be set to the same channel.
- **Set:** This function allows you to change the reminder ringtones. Please note that it only works with the intercom doorbell system and not the room intercom system. If you require an outdoor doorbell machine, please visit our store.
- **Power ON/OFF:** This button is used to turn the intercom system on or off.

Product Usage Instructions

1. To adjust the volume of the intercom voice, press the Volume +/- buttons. Each press will increase or decrease the volume level by one.
2. To change the channel, press the Channel Setting buttons. Each press will cycle through the available channels from 1 to 16.
3. Ensure that all intercom devices are set to the same channel in order to communicate with each other.
4. If you wish to change the remind ringtones, press the Set button. Please note that this feature is only compatible with the intercom doorbell system and not the room intercom system.

5. If you require an outdoor doorbell machine, please visit our store.
6. To turn the intercom system on or off, simply press the Power ON/OFF button.

OVERVIEW

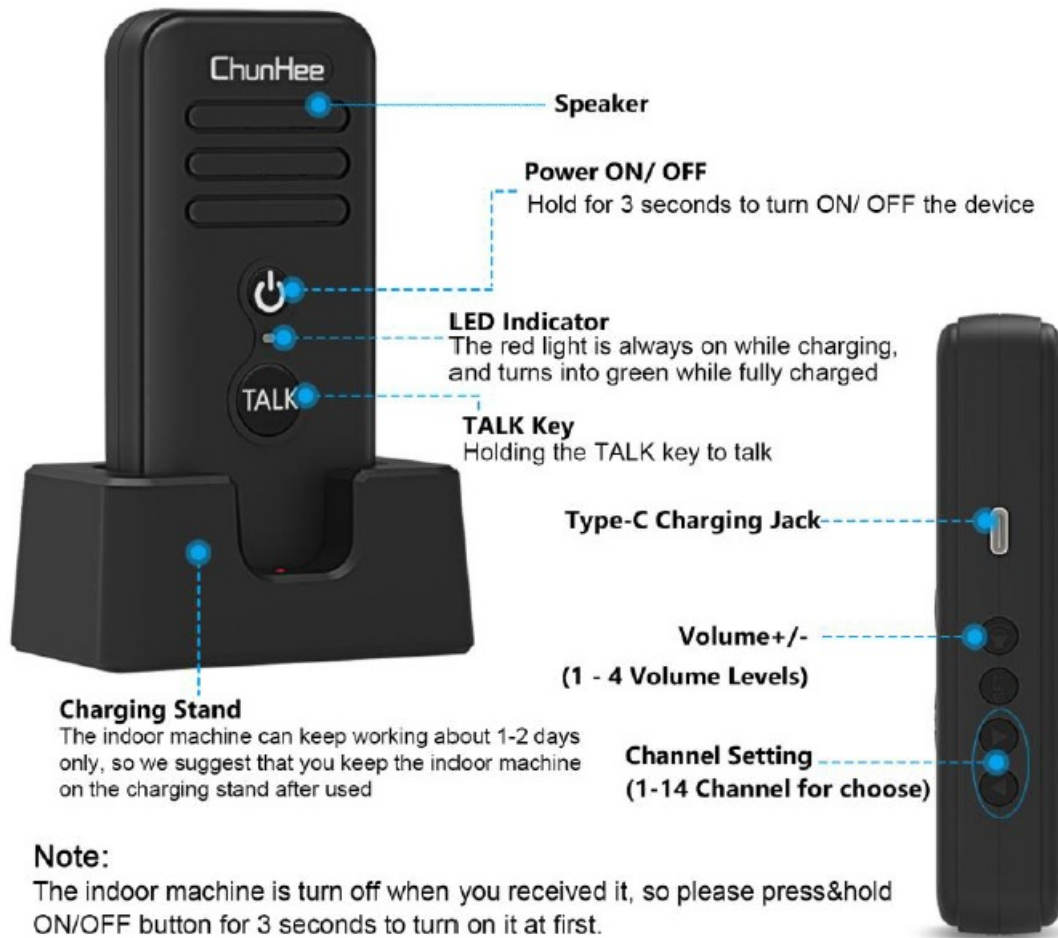

- **Volume +/-**: Adjust the volume of the intercom voice from 1 to 4 Levels (60dB/80dB/100dB/115dB).
- **Channel Setting**: Press the ► & ◀ to change the channel (From 1 to 16).
- **Tips**: Must keep all of the intercom devices on the same channel to talk.
- **Set**: Change the reminder ringtones (Don't work on the room intercom system, only work with the intercom doorbell system. Please see our store if you need the outdoor doorbell machine)
- **Power ON/OFF**: Hold the power button for 3 seconds until hear the beep voice to turn on/off the machine. (Click the Volume Button after turning on the machine. If you hear the BEEP tone, it means the device has power. If you do not hear the tone, it means the battery needs to be charged)

Intercoms

1. The using time of the intercom is about 48 hours. We suggest that the intercom stay in the charge station after use or charge the indoor machine once every 40 hours.
2. This intercom system is supported and expandable to 14 devices to work together.

Note: Please charge the intercom at least 6 hours after receiving it to ensure that there is sufficient power to use. Then press & hold the ON/OFF button for 3 seconds to turn it on it after is charged.

Pairing and using

1. The intercom device should be on the same channel (a total of 16 channels). Press the ► & ◀ button to

change the channel.

2. To test the communication between the devices, hold the TALK button to talk to another intercom device.
Release the TALK button after speaking then wait for the other intercom response.

Installing

1. Place it on the charging stand, then connect it to AC power.
2. Start using the intercom system!


Usage scenario

1. Set the same channel (1-16) for the intercom;
2. Hold the power button of the device to turn on the intercom;
3. Hold the talking button to speak with others.

Notes

1. You must press and hold the TALK button when you want to speak to someone. Simply clicking the TALK button is invalid;
2. Two users cannot use the TALK button on both sides at the same time.
3. Only one user can use the TALK button to speak to the other. The other user must wait for the speaker to finish, then press and hold the TALK button on their side to respond. You will not be able to hear the other user while you are speaking.

Documents / Resources

	ChunHee HI03-IM-2 Wireless Home Intercom System For Elderly [pdf] User Manual HI03-IM-2 Wireless Home Intercom System For Elderly, HI03-IM-2, Wireless Home Intercom System For Elderly, Home Intercom System For Elderly, Intercom System For Elderly, System For Elderly, For Elderly
---	--