

Cisco IP Phone 6841 and 6851 User Guide

Home » Cisco » Cisco IP Phone 6841 and 6851 User Guide Ta



Quick Start Guide
Cisco IP Phone 6841 and 6851 Multiplatform Phones




Cisco IP Phone 6841 shown.


- 1. An incoming call or voicemail indicator
- 2. Line and feature buttons
- 3. Softkeys
- 4. Navigation
- 5. Hold, Transfer, and Conference
- 6. Speakerphone, Headset, and Mute
- 7. Voicemail, Applications, and Directory
- 8. Volume


Line and Feature Buttons


Use the line and feature buttons to view calls on a line, access features such as Speed Dial, and perform tasks such as resuming a held call.

Buttons illuminate to indicate status:

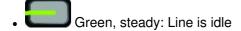

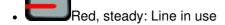

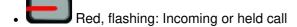

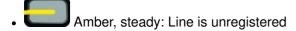

Place a Call

Enter a number and pick up the handset.

Answer a Call

Press the flashing red line button.

Put a Call on Hold



2. To resume a call from hold, press Hold again.

View Your Recent Calls

- 1. Press Applications
- 2. Scroll and select Recents.
- 3. Select a line to view.

Transfer a Call to Another Person

- 1. From a call that is not on hold, press Transfer
- 2. Enter the other person's phone number.
- 3. Press Transfer again (before or after the party answers).

Add Another Person to a Call

1. From an active call, press **Conference**

- 2. Enter the number you want to join and press Dial.
- 3. Once the call is connected, press Conference again.

Place a Call with a Headset

- 1. Plug in a headset.
- 2. Enter a number using the keypad.
- 3. Press Headset

Place a Call with the Speakerphone

- 1. Enter a number using the keypad.
- 2. Press **Speakerphone**

Mute Your Audio

- 1. Press Mute
- 2. Press Mute again to turn mute off.

Listen to Voice Messages

Press **Messages** and follow the voice prompts. To check messages for a specific line, press the line button first.

Forward All Calls

- 1. Select a line and press Forward.
- 2. Dial the number that you want to forward to or press Voic email.
- 3. When you return, press Clr fwd.

Adjust the Volume in a Call

Press **Volume** up or down to adjust the handset, headset, or speakerphone volume when the phone is in use.

Adjust the Ringtone Volume

Press **Volume** up or down to adjust the ringer volume when the phone is not in use.

Change Ringtone

1. Press Applications .

- 2. Select User preferences > Audio preferences > Ext (n) Ring tone, where n= extension number.
- 3. Scroll through the list of ringtones and press Play to hear a sample.
- 4. Press Select and Set to save a selection.
- 5. Press Back to exit.

Adjust the Screen Contrast

- 1. Press Applications
- 2. Select User preferences > Screen preferences > Contrast level.
- 3. Use the keypad to change the contrast number.
- 4. Press Set.

Adjust the Screen Backlight

- 1. Press Applications .
- 2. Select User preferences > Screen preferences > Backlight timer.
- 3. Press **Select** to scroll through the options.
- 4. Press Set to save a selection
- 5. Press Back to exit.

User Guide
View the full User Guide at
https://coxbusiness.online/mpp

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership

relationship between Cisco and any other company. (1110R)



Copyright © 2018 Cisco Systems, Inc. All rights reserved.

September 2018

Contents

1 Documents / Resources

1.1 References

2 Related Posts

Documents / Resources



CISCO Cisco IP Phone 6841 and 6851 [pdf] User Guide Cisco, IP Phone, 6841, 6851, Multiplatform Phones

References

- Cisco Trademarks Cisco
- O Cisco MPP Trial

Manuals+,