



Cisco RV260W Router User Guide

[Home](#) » [Cisco](#) » Cisco RV260W Router User Guide 



Cisco RV260W Router

Contents

- 1 Package Contents
- 2 Installing the Cisco RV260W
- 3 Cisco RV260W Features
- 4 Connecting the Equipment
- 5 Getting Started with the Configuration
- 6 Where to Go from Here
- 7 Documents / Resources
- 8 Related Posts

Package Contents

- Cisco RV260W Router
- Universal Power Adapter
- This Quick Start Guide
- Pointer Card/RoHS
- Technical Support Contact Card
- Ethernet Cable
- EU Directives 2014/53/EU Compliance Information (for EU SKU only)

Welcome

Thank you for choosing the Cisco RV260W router.

The RV260W router provides reliable Internet access connectivity and includes the following features:

- Easy to use UI with multiple set-up wizards.
- Eight port wireless router.
- Supports IPv6 firewall.
- Business-grade small business network in a box.

This guide describes how to install your Cisco RV260W and launch the web-based Device Manager.

Installing the Cisco RV260W

To prevent the device from overheating or being damaged:

- **Ambient Temperature** — Do not operate the device in an area that exceeds an ambient temperature of 104°F (40°C).
- **Air Flow** — Be sure that there is adequate airflow around the device. If wall-mounting the device, make sure that the heat dissipation holes are to the side.
- **Circuit Overloading** — Adding the device to the power outlet must not overload that circuit.
- **Mechanical Loading** — Be sure that the device is level and stable to avoid any hazardous conditions and that it is secure to prevent it from sliding or shifting out of position. Do not place anything on top of the device, as excessive weight may damage it.

Desktop Mounting

For desktop mounting, place the device on a flat surface so that it sits on its four rubber feet.

Wall Mounting

The RV260W router has two wall-mount slots on the bottom panel. To mount the router on a wall, you will need to use the wall-mount kit screws (included).

Guidelines for Mounting the Router on a Wall

When choosing a location for mounting the router on a wall, consider cable limitations and wall structure.

- Mount the router with the front panel facing upward. Make sure to mount the router low enough so that you can see the LEDs.
- Make sure that the power supply rests on a horizontal surface such as the floor or a table. If the power supply is not supported, the strain on the power adapter cable could cause it to disconnect from the router.
- Do not install the router or its power supply next to a heat source of any kind, including heating vents.

You can mount the router on a hollow wall or a wall stud. To mount the router, follow these steps:

STEP 1 Position the router on the wall to determine where to attach the two mounting screws. Drill two pilot holes at approximately 109 mm apart.

STEP 2 Insert a screw into each hole, leaving a gap between the surface and the base of the screw head of 1 to 1.2 mm.

STEP 3 Place the router wall-mount slots over the screws and slide the router down until the screws fit snugly into the wall-mount slots.



WARNING Insecure mounting might damage the router or cause injury.

Cisco is not responsible for damages incurred due to insecure wall-mounting.



WARNING For safety reasons, please ensure that the heat dissipation holes are facing sideways.

Cisco RV260W Features

Front Panel

PWR	Power off or in rescue mode. Solid green when the power is on and in normal operation. Flashing green when the device is booting up.
VPN	Off when no VPN tunnel is defined, or all defined VPN tunnels have been disabled. Solid green when at least one VPN tunnel is up. Flashing green when transmitting or receiving data over a VPN tunnel. Solid amber when no enabled VPN tunnel is up.
DIAG	Off when the system is on track to boot up. Slow blinking red (1Hz) when the firmware upgrade is in progress. Fast blinking red (3Hz) when the firmware upgrade is failing. Solid red when the system failed to boot up with both active and inactive images or in rescue mode.
LINK/ACT of WAN and LAN 1 -8	Off when there is no Ethernet connection. Solid green when the GE Ethernet link is on. Flashing green when the GE is sending or receiving data.
GIGABIT of WAN and LAN1 -8	Solid green when at 1000M speed. Off when at non-1000M speed.
DMZ	Solid green when DMZ is enabled. Off when DMZ is disabled.

WLAN 2.4GHz	<p>Off when the 2.4G Radio is disabled.</p> <p>Solid green when the 2.4G Radio is enabled.</p> <p>Flashing green when the 2.4G is transmitting or receiving data.</p>
WLAN 5GHz	<p>Off when the 5G Radio is disabled.</p> <p>Solid green when the 5G Radio is enabled.</p> <p>Flashing green when the 5G is transmitting or receiving data.</p>
USB	<p>Off when the USB is not connected, or the USB is inserted and not recognized</p> <p>Solid green when the USB dongle is connected to an Internet Service Provider (ISP) and an IP address has been assigned.</p> <p>Solid green when USB storage is recognized.</p> <p>Flashing green when transmitting or receiving data.</p> <p>Amber when the USB dongle is recognized but failed to connect to an ISP.</p> <p>Amber when USB storage access has errors.</p>
Reset	<p>The RESET button has two functions:</p> <ul style="list-style-type: none"> • To reboot the unit and retain the current configuration, press and hold RESET for a least 3 but no more than 10 seconds, by using a paper clip or a pen tip. • To reboot the unit and restore the factory default configuration, press and hold the RESET button for more than 10 seconds. Changes you have made to the router are lost.

Back Panel

WIFI — Push the button to enable or disable the WIFI.

Console Port — The router console port is designed for a serial cable connection to a terminal or a computer that is running a terminal emulation program.

USB — Type A USB port that supports flash drives and 3G/4G/LTE USB dongles. Caution: Use only the power supply provided with the device; using another power supply may cause the USB dongle to fail.

SFP Port — A small factor-form pluggable (SFP) is a hot-swappable input/ output device that plugs into the SFP port, linking the port with the network.

WAN — Connecting the router to a wide area network device such as a cable or DSL modem.

LAN — (1-8) RJ-45 device connections to link local area network devices, such as PCs, print servers, or switches to the router.

POWER — Toggles power to the device on or off.

12VDC (2.5A) — Power port that connects the device to the provided 12VDC, 2.5 amp power adapter.

Side Panel

Kensington Lock Slot – Lock slot on the right side to secure the device physically, using the Kensington lock-down equipment.

Connecting the Equipment

Connect a configuration terminal (PC) to the device by using a LAN port.

The terminal must be in the same wired subnetwork as the device to perform the initial configuration. As part of the initial configuration, the device can be configured to allow remote management.

To connect a computer to the device:

STEP 1 Power off all equipment, including the cable or DSL modem, the computer, and this device.

STEP 2 Use an Ethernet cable to connect your cable or DSL modem to the WAN port on this device.

STEP 3 Connect another Ethernet cable from one of the LAN (Ethernet) ports to the Ethernet port on the computer.

STEP 4 Power on the WAN device and wait until the connection is active.

STEP 5 Connect the power adapter to the 12VDC port of this device.



CAUTION Use only the power adapter that is supplied with the device.

Using a different power adapter could damage the device or cause the USB dongles to fail.

The power switch is on by default. The power light on the front panel is solid green when the power adapter is connected properly and the device is finished booting.

STEP 6 Plug the other end of the adapter into an electrical outlet. Use the plug (supplied) specific to your country.

STEP 7 Continue with the instructions in the Using the Setup Wizard to configure the device.

Getting Started with the Configuration

To configure the router, you can either use Ethernet or wireless.

Please follow these steps to access the Wizard and then the web-based configuration utility from your computer by Ethernet:

STEP 1 Ethernet: Power on the PC that you connected to the LAN port. Your PC becomes a DHCP client of the device and receives an IP address in [192.168.1.xxx](#) range.

Wireless: Search the wireless SSID “CiscoSB-Setup”, and connect to this SSID with the passphrase “cisco123”.

STEP 2 Locate the IP address of the router. The router IP address is [192.168.1.1](#) by default. As well,

a. The router can be accessed and managed by Cisco network tools and services including the Cisco FindIT Network

Discovery Utility enables you to automatically discover all supported Cisco devices in the same local network segment as your computer. You can get a snapshot view of each device or launch the product configuration utility to view and configure the settings. For more information, see www.cisco.com/go/findit.

b. The router is Bonjour-enabled and automatically broadcast their services and listen for services being advertised by other

Bonjour-enabled devices. If you have a Bonjour-enabled browser, such as Microsoft Internet Explorer with a Bonjour plug-in, or the Apple Mac Safari browser, you can find the router on your local network without knowing its IP address.

You can download the complete Bonjour for Microsoft Internet Explorer browser from Apple’s website by visiting: <http://www.apple.com/bonjour/>.

STEP 3 Launch a web browser, such as Microsoft Internet Explorer or Mozilla Firefox.

STEP 4 In the address bar, enter the default IP address of the device, <https://192.168.1.1>. A site security certificate, the message is displayed. The Cisco RV260W uses a self-signed security certificate. This message appears because the device is not known to your computer.

STEP 5 Enter the default user name: cisco and password: cisco in the User Name and Password fields.

STEP 6 Click **Login**.

STEP 7 Follow the Setup Wizard instructions to finish the router installation.

We strongly recommend that you use the Setup Wizard for the first installation.

The Setup Wizard turns on the Wi-Fi radio, which allows you to connect wirelessly. For more advanced configurations, see the Administration Guide. A link to the Administration Guide is found in **Where to Go from Here**.

Congratulations, you can now start using your router.

Changing the Administrator Username and Password

To change the Administrator username and password on the device:

STEP 1 From the Getting Started page, select **Change Administrator Password** or select **System Configuration > User Accounts** from the navigation bar.

STEP 2 Check a username from the **Local User Membership** list and click **Edit**.

STEP 3 Enter the **Username**.

STEP 4 Enter the old **Password**.

STEP 5 Enter the new **Password**.

STEP 6 Confirm the new **Password**.

STEP 7 Select the group (**admin**, **guest**) from the drop-down list in the Password Strength Meter.

STEP 8 Click **Save**.

Troubleshoot Your Connection

If you cannot access your device by using the **Setup Wizard**, the device may not be reachable from your computer. You can test network connections by using **ping** on a computer running Windows:

STEP 1 Open a command window by using **Start > Run** and enter **cmd**.

STEP 2 At the **Command** window prompt, enter the ping and the device's IP address. For example, **ping 192.168.1.1** (the default static IP address of the device).

If you can reach the device, you should get a reply similar to the following:

```
Pinging 192.168.1.1 with 32 bytes of data:
```

```
Reply from 192.168.1.1: bytes=32 time<1ms TTL=128
```

If you cannot reach the device, you should get a reply similar to the following:

```
Pinging 192.168.1.1 with 32 bytes of data:
```

```
Request timed out.
```

Possible Causes and Resolutions

Bad Ethernet connection:

Check the LEDs for the proper indications. Check the connectors of the Ethernet cable to ensure that they are firmly plugged into the device and your computer.

Wrong or conflicting IP address:

Verify that you are using the correct IP address of the device.

Verify that no other device is using the same IP address as this device.

No IP route:

If the device and your computer are in different IP subnetworks, remote access must be enabled and you need at least one router on the network to route the packets between the two subnetworks.

Unusually long access time:

Adding new connections may take 30–60 seconds for the affected interfaces and LAN to become operational.

Where to Go from Here

Support	
Cisco Support Community	https://community.cisco.com/t5/smallbusiness-support-community/ct-p/5541-small-business-support
Cisco Firmware Downloads	https://software.cisco.com/download/home Select a link to download firmware for Cisco products. No login is required.
Cisco Partner Central (Partner Login Required)	http://www.cisco.com/c/en/us/partners.html
Product Documentation	
Cisco RV260W	https://www.cisco.com/c/en/us/products/routers/rv260w-wireless-ac-vpn-router/index.html

For EU Lot 26 related test results, see www.cisco.com/go/eu-lot26-results



Americas Headquarters

Cisco Systems, Inc.

www.cisco.com

Cisco has more than 200 offices worldwide.

Addresses, phone numbers, and fax numbers are listed on the Cisco website at

www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries.

To view a list of Cisco trademarks, go to this URL:

www.cisco.com/go/trademarks.

Third-party trademarks mentioned are the property of their respective owners.


The use of the word partner does not imply a partnership relationship between Cisco and any other company.

(1110R)

© 2018 Cisco Systems, Inc. All rights reserved.

78-101011-01

Documents / Resources

 <p>Cisco RV260W Router Package Contents</p> <ul style="list-style-type: none">• Cisco RV260W Router• Cisco RV260W Router• Cisco RV260W Router• Router (RV260W)• Router (RV260W)• Router (RV260W)• Router (RV260W)• Router (RV260W)• Router (RV260W)	<p>CISCO Cisco RV260W Router [pdf] User Guide</p> <p>Cisco, RV260W, Router</p>
--	--

[Manuals+](#)