



Clare CLR-V100-4B36WF-W Value Series Wi-Fi Fixed Lens Bullet Camera Installation Guide

 
[Home](#) » [CLARE](#) » Clare CLR-V100-4B36WF-W Value Series Wi-Fi Fixed Lens Bullet Camera Installation Guide 

Contents


- 1 Clare CLR-V100-4B36WF-W Value Series Wi-Fi Fixed Lens Bullet Camera
- 2 Box Contents
- 3 Required Equipment
- 4 Inspection
- 5 Overview
- 6 Installation
- 7 Camera Setup & Default Password
- 8 Contact Information
- 9 Warranty Information
- 10 Camera Information
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts



Clare CLR-V100-4B36WF-W Value Series Wi-Fi Fixed Lens Bullet Camera

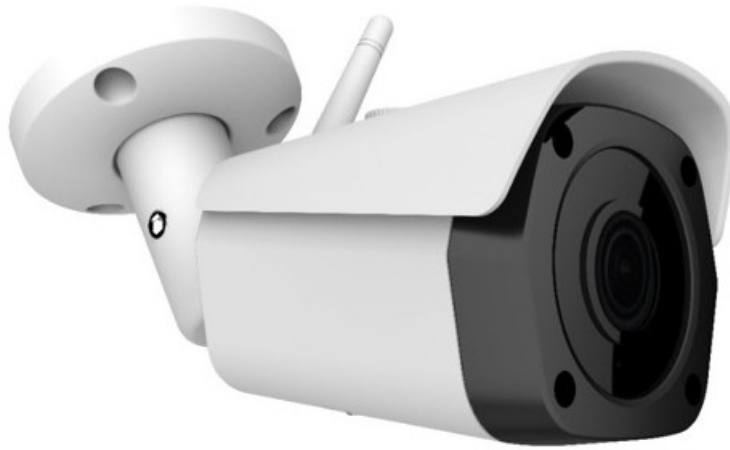

 For Setting up cameras and complete user manuals, please scan these QR codes:

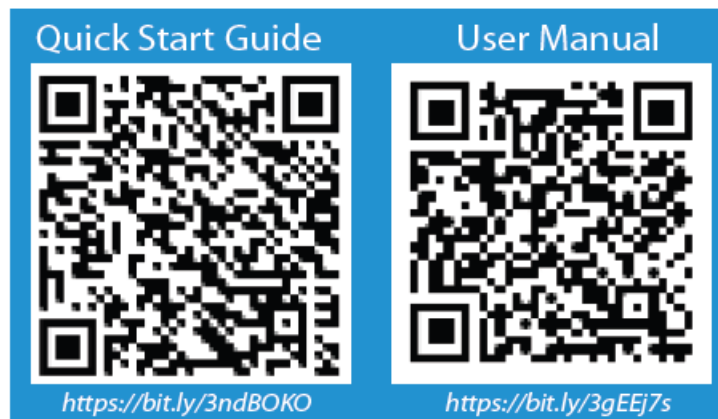

<https://bit.ly/3ndBOKO>

<https://bit.ly/3gEEj7s>

Box Contents

- Camera and antenna
- 12VDC Power Supply
- Mounting template
- Mounting kit
- Accessory kit

Required Equipment

- Phillips head screwdriver
- Power source: Ethernet cable
- Drill with 1/4" drill bit

Cables



Inspection

 
Ensure that the device is in good condition and all the assembly parts are included.

- Make sure that all equipment is powered off during installation.
- Ensure the mounting surface is strong enough to withstand three times the weight of the camera and the mount.
- If the product does not function properly, please contact technical support. Do not disassemble the camera for repair or maintenance.

WARNING: This product can expose you to chemicals including cadmium, which which is known to the State of California to cause cancer. For more information, go to www.p65warnings.ca.gov.

Overview

Before installing, familiarize yourself with the parts of the camera. Please note, the Wi-Fi Turret camera does not support POE.

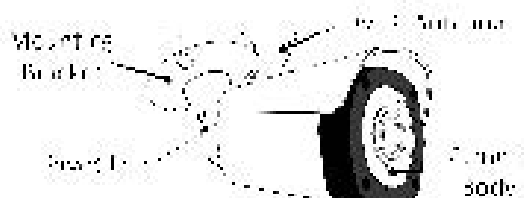

NOTE: Screw in the antenna into the antenna jack before installation.

 


Installation

Before You Get Started: You will need to physically connect the camera to the local area network using an Ethernet cable to configure the Wi-Fi.

A Wi-Fi signal strength of -60dBm or greater is required at the installation location to establish a reliable connection to the network.


1. Using an Ethernet cable, connect the camera to the home network via router, modem, or switch.
Power up the camera using the included 12VDC power supply.

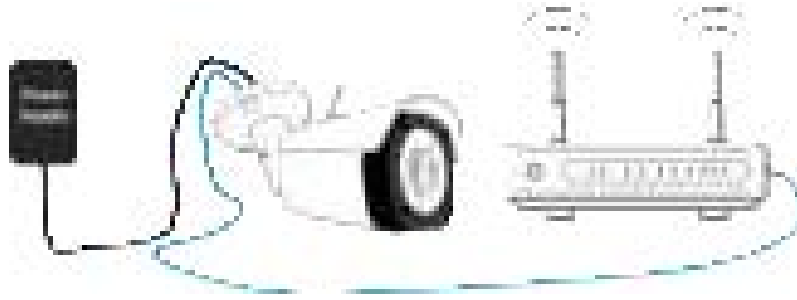


2. Access the camera web console using the IP Address. You can use the IP Search Tool to discover the camera IP address. Download the tool here: <https://bit.ly/3En7jJ7>
3. Input the default username (admin) and password (first six characters of the UUID). Change the password when prompted.
4. Connect the camera to the desired 2.4GHz network using the Web Console, You can add the network by navigating to: Configuration > Network > Wi-Fi.
Select the desired Wi-Fi SSID and input the password. Tap Save once completed.
5. Check and update the firmware: Configuration > System Configuration > Maintenance > Check Current Version.
6. Check to make sure you are able to discover and add the Wi-Fi camera using the ClareVision App (iOS or Android) when on the local area network.
7. At the desired installation location, check the Wi-Fi signal strength to ensure it is -60dBm or greater with the perimeter doors closed. If the signal is too low, you may need to boost the signal with a Wi-Fi range extender or wireless access point.

You can check the Wi-Fi signal strength using a Wi-Fi analyzer app such as:

 
- Wifi Analyzer app for Android
 - AirPort Utility Tool for iOS
8. Press the locking button on the side of the mounting bracket to disconnect it from the body of the camera.

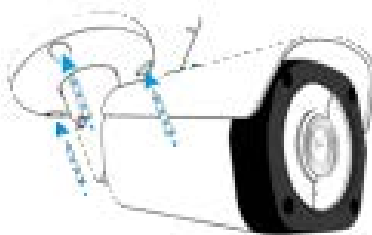

 
9. Mount the base to the desired location using the four mounting screws and anchors.

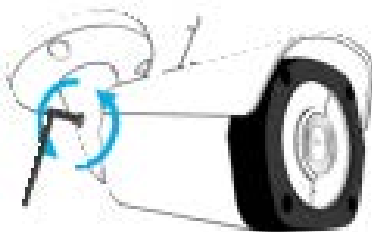

 10. Snap the camera into place by lining up the ridges on inner part of the mounting bracket with the outer ridges of the camera. Press the button to lock it back into place.

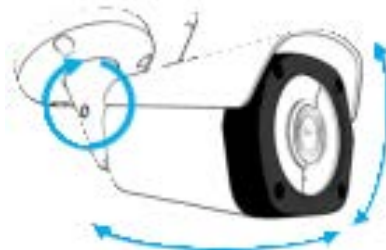

 11. Adjust the camera by panning, tilting, and rotating the camera body to the desired viewing angle.

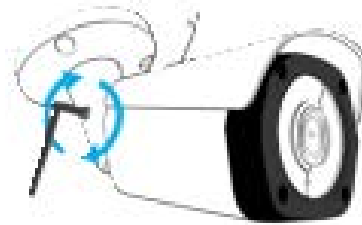

Camera Setup & Default Password

IMPORTANT NOTE: The default camera setup password is the FIRST 6 Characters of the UUID/SN. You will be prompted to change the password when setting up the camera. Please refer to the Quick Start Guide for complete setup instructions or by visiting: <https://bit.ly/3ndBOKO>

Support

For additional help:

Integrator/Dealer Support:

Phone: 941.404.1072

Email: claresupport@clarecontrols.com

For more information, instructional videos, or support documentation, visit our Help Center and view your item's product page:

<https://www.clarecontrols.com/helpcenter>

Contact Information

Clare Controls, LLC.

7519 Pennsylvania Ave, Suite 104

Sarasota, FL 34243

General: 941.328.3991

Fax: 941.870.9646

www.clarecontrols.com

Warranty Information

Clare Controls offers a two (2) year limited warranty on original Clare Controls components, from the date of shipment from Clare Controls. To view complete limited warranty details, including limitations and exclusions, please visit: www.clarecontrols.com/warranty

Camera Information

Please provide this guide to the customer and notate the camera installation location and new camera password. This guide includes important camera details.


- Camera Password: _____
- Installation Location: _____

- Camera Details: Product Label

Doc ID: 2022-03-2131-05

12 | ClareVision Value Series Wi-Fi Turret Cameras

Documents / Resources

	<p>Clare CLR-V100-4B36WF-W Value Series Wi-Fi Fixed Lens Bullet Camera [pdf] Installation Guide</p> <p>CLR-V100-4B36WF-W Value Series Wi-Fi Fixed Lens Bullet Camera, CLR-V100-4B36WF-W, Value Series Wi-Fi Fixed Lens Bullet Camera, Fixed Lens Bullet Camera</p>
---	---

References

- [Clare Smart Home and Security](#)
- [Policies](#)
- p65warnings.ca.gov
- [IP Search Tool for ClareVision Cameras](#)
- [ClareVision Camera User Manual](#)
- [ClareVision Cameras Quick Start Guide](#)
- [Help Center](#)

Manuals+