




clarion CZ205AU CD and USB Receiver Owner's Manual

[Home](#) » [clarion](#) » clarion CZ205AU CD and USB Receiver Owner's Manual 

clarion CZ205AU CD and USB Receiver




Contents


1 FEATURES
2 PRECAUTIONS
3 CONTROLS
4 CAUTIONS ON HANDLING
4.1 Handling Discs
5 OPERATIONS
5.1 Basic Operations
5.2 System Setup
5.3 Audio Setup
5.4 Radio Operations
5.5 CD/MP3/WMA Operations
5.6 CD/MP3/WMA Operations
5.7 iPod & iPhone Operations
5.8 AUX Operations
6 TROUBLE SHOOTING
7 ERROR DISPLAYS
7.1 SPECIFICATIONS
8 INSTALLATION / WIRE CONNECTION GUIDE
8.1 Removing the Source Unit
8.2 Wiring and Connections
8.3 Wiring and Connections
9 Documents / Resources
9.1 References
10 Related Posts

FEATURES

- Compatible with iPod® / iPhone® with Pandora® internet radio App
- Front Panel Auxiliary Input and 4ch RCA Output with Subwoofer Control
- BEAT-EQ with 3 Band Parametric Equalizer and MAGNA BASS EX Dynamic Bass Enhancement

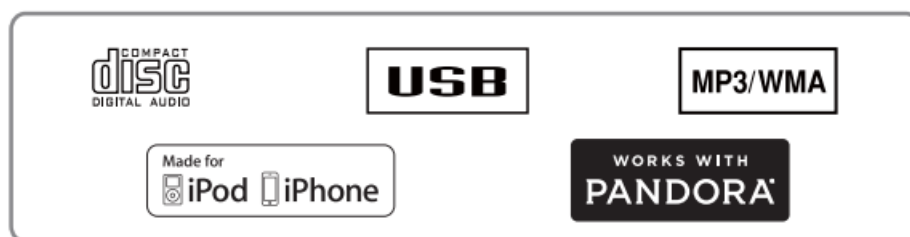

Expanding Systems

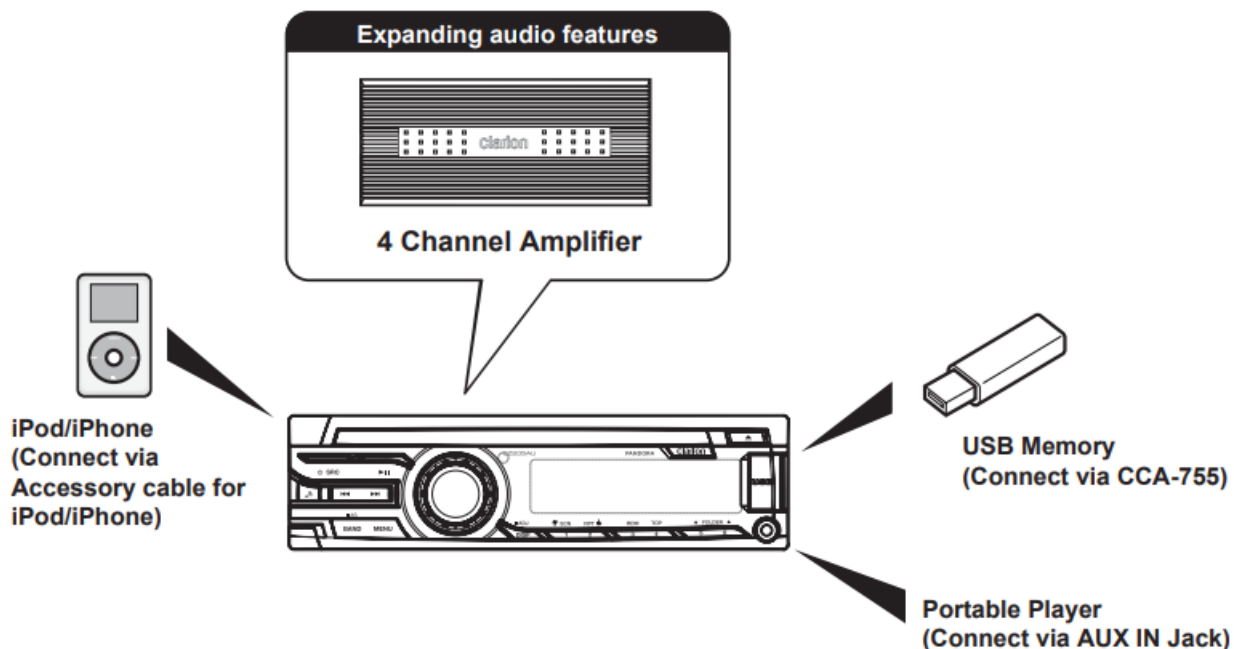

Note:

- The items listed only show connectivity options and are not included with the unit.
- CCA-755: Sold separately.
- Optional CCA-750 (iPod cable) also available, but CZ205AU doesn't have iPod Video function, so even if connect to the Monitor, CZ205AU doesn't playback the video.

PRECAUTIONS



WARNING

For your safety, the driver should not operate the controls while driving. Also, while driving, keep the volume to a level at which external sounds can be heard.

1. When the interior of the car is extremely cold and the player is used soon after switching on the heater, moisture may form on the disc or the optical parts of the player and proper playback may not be possible. If moisture forms on the disc, wipe it off with a soft cloth. If moisture forms on the optical parts of the player, do not use the player for about one hour.
The condensation will disappear naturally allowing normal operation.
2. Driving on extremely bumpy surface can cause the disc to skip during playback.
3. This unit uses precision parts and components for its operation. In the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts. Contact your Clarion dealer or service center.
4. Made for iPod™ and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.


Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

iPhone and iPod are trademarks of Apple Inc., registered in the U.S. and other countries.

5. Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. used with permission.

Pandora is currently only available in the United States, Australia and New Zealand.

If you have any issues with the Pandora application on your mobile phone, please direct them to pandora-support@pandora.com.

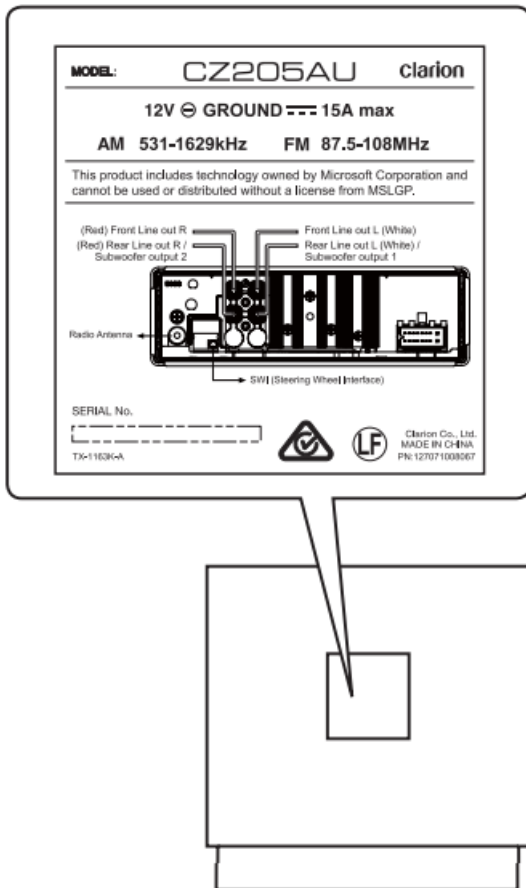

Front Panel / Generalities

For a longer service life, be sure to read the following cautions.

- Do not allow any liquids on the unit from drinks, umbrellas, etc. Doing so may damage the internal circuitry.
- Do not disassemble or modify the unit in any way. Doing so may result in damage.
- Do not let cigarettes burn the display. Doing so may damage or deform the body.
- If a problem should occur, have the unit inspected at your store of purchase.
- The remote control unit may not work if the remote control sensor is exposed to direct sunlight.

Cleaning the body


- Use a soft, dry cloth and gently wipe off any dirt or dust.
- For tough dirt, apply some neutral detergent diluted in water to a soft cloth, wipe off the dirt gently, then wipe again with a dry cloth.
- Do not use benzene, thinner, car cleaner, etc., as these substances may damage the body or cause the paint to peel. Also, leaving rubber or plastic products in contact with the body for long periods of time may cause stains.


USB Port

- The USB memory stick may stick out when inserted, so it may cause danger during driving. When connect USB memory stick to the source unit, please use the USB extension cable(CCA-755).
- The USB memory sticks must be recognized as “USB mass storage class” to work properly. Some models may not operate correctly. When the memorized data is lost or damaged by any chance, Clarion shall not be liable for any damage. When using the USB memory stick, we recommend that you backup your data stored on it before using a personal computer etc.
- Data files may be broken when using USB memory sticks in the following situation: When disconnecting the USB memory stick or turning the power off while reading data. When affected by static electricity or electric noise. Connect/disconnect the USB memory stick when it is not accessed.
- Connecting with the computer is not available.

Remove the DCP


The control panel can be detached to prevent theft. When detaching the control panel, keep it in the safety place and prevent scratches. We recommend taking the DCP (DETACHABLE CONTROL PANEL) with you when leaving the car.

1. Press the [ SRC] button (1 sec.) to turn off the power.
2. Deeply push into [OPEN] button to unlock the DCP.
3. Hold the side popped out, remove the DCP.

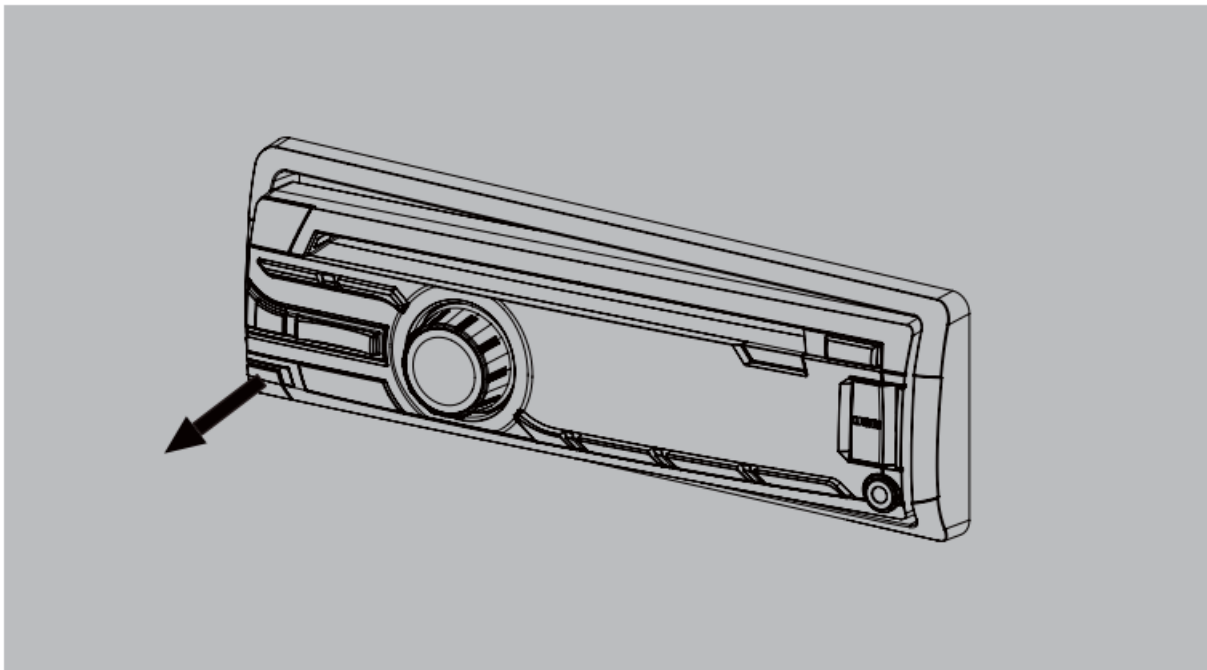

Attach the DCP

1. Hold the DCP and ensure that the panel faces towards you. Set the right side of the DCP into the DCP bracket.
2. Press the left side of the DCP until it locks.

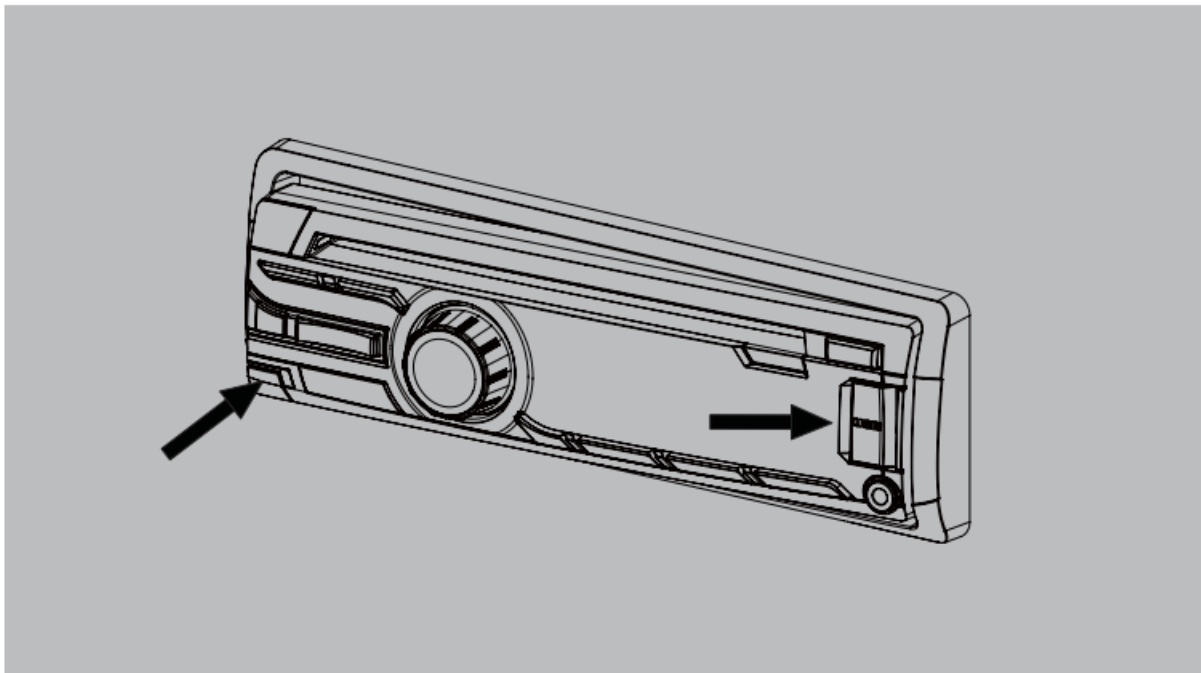


CAUTION

- The DCP can easily be damaged by shocks. After removing it, be careful not to drop it or subject it to strong shocks.
- Once the [OPEN] button is pressed and DCP is unlocked, car vibrations can cause the DCP to fall.
- The connector for the main unit and DCP is extremely important. Be careful not to damage it by pressing on it with fingernails, screwdrivers, etc.

Note: If the DCP is dirty, wipe off the dirt with a soft, dry cloth only.

CONTROLS

Operational Panel

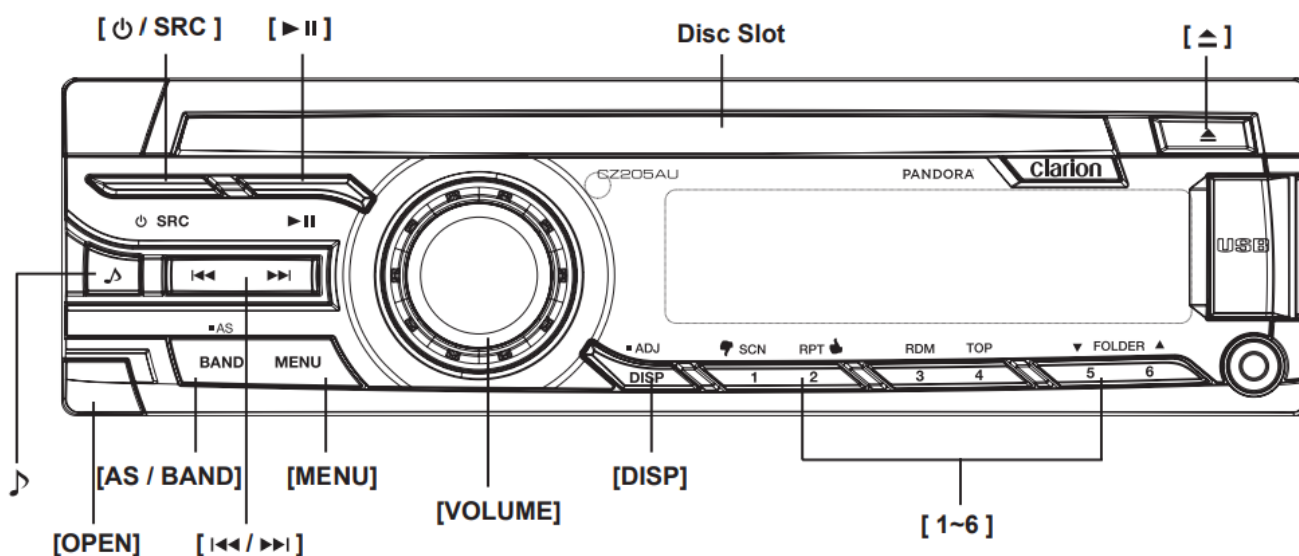

Names of Buttons



[SRC] Button

- Toggle the audio source
- Power on / Power off (long press)
- [AS / BAND] Button
- RADIO mode – Select tuner band / Auto memory store (long press)
- [MENU] Button
- MP3/WMA mode – Search function
- CD mode – No function
- RADIO mode – No function
- AUX mode – No function
- USB mode – Search function
- iPod mode – iPod menu
- Pandora mode – Station select



[] Button

- Press to eject disc



[] Button

- Play / Pause
- [<< , >>] Buttons
- RADIO mode – Manual tuning / Auto search (long press)
- MP3/WMA/CD/USB/iPod mode
 - Previous / next track
 - Fast Forward / Fast Backward (long press)
- Pandora mode – Skip track ()
- [OPEN] Button
- Unlock the front panel



[] Button

- Sound effect setting

[VOLUME] Knob

- Adjust volume level / Confirm (press)
- Pandora mode – Bookmark track
- [1~6] Buttons
- [1] Button: Scan play / Preset station 1 / Preset

station memory 1 (long press) /

Pandora mode – Thumbs down

- [2] Button: Repeat play / Preset station 2 / Preset station memory 2 (long press) / Pandora mode – Thumbs up
- [3] Button: Random play / Preset station 3 / Preset station memory 3 (long press) / Pandora mode – Create new station by Artist / by Track (long press)
- [4] Button: Top play / Preset station 4 / Preset station memory 4 (long press)
- [5] Button: Previous folder / Preset station 5 / Preset station memory 5 (long press) / Pandora mode – Previous station 10 tracks down (long press)
- [6] Button: Next folder / Preset station 6 / Preset station memory 6 (long press) 10 tracks up (long press) / Pandora mode – Next Station

[DISP] Button


- Display switch
- System setup (long press)

Notes for use of Remote Control


1. Aim the remote control at the remote sensor on the unit.
2. Remove the battery from the remote control or insert a battery insulator if the battery has not been used for a month or longer.
3. DO NOT store the remote control under direct sunlight or in high temperature environment, or it may not function properly.
4. Use “button shaped” lithium battery “CR2025” (3V) only.
5. DO NOT subject battery to recharge, disassemble, heat or dispose in fire or water.
6. Insert the battery in proper direction according to the (+) and (-) polarities.
7. Store the battery in a place where children cannot reach to avoid the risk of accident.

Inserting the Battery

1. Slide remote control unit's rear cover in the direction shown.
2. Insert battery (CR2025) into insertion guides with printed side (+) up.
3. Press battery into compartment as shown.
4. Replace and slide cover until it clicks into place.

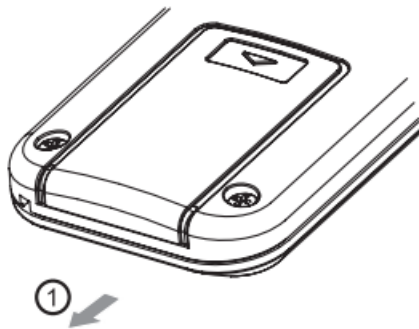

Insertion guide

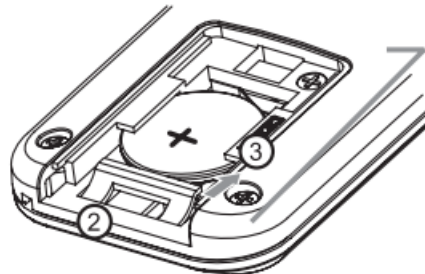

Remote Control (RCX001: Sold separately)



[SRC] Button

- Toggle the audio source
- Power on / Power off (long press)



[] Buttons

- Preset station up / down
- Previous / next track
- Search (long press)

- Pandora mode – Skip track ()

[SCN / PS / AS] Button

- Scan play / Preset scan
- Auto store (long press)
- Pandora mode – Thumbs down
- Pandora mode – Next Station
- CD/MP3/WMA/USB mode – Top play
- RADIO mode – Select tuner band
- Pandora mode – Next Station




[] Buttons

- Volume up / down



[] Button

- Play / Pause
[ISR] Button
- No function
[DISP] Button
- Display change
[RDM] Button
- Random play
- Pandora mode – Bookmark track
[RPT] Button
- Repeat play
- Pandora mode – Thumbs up
[MUTE] Button
- Mute the volume

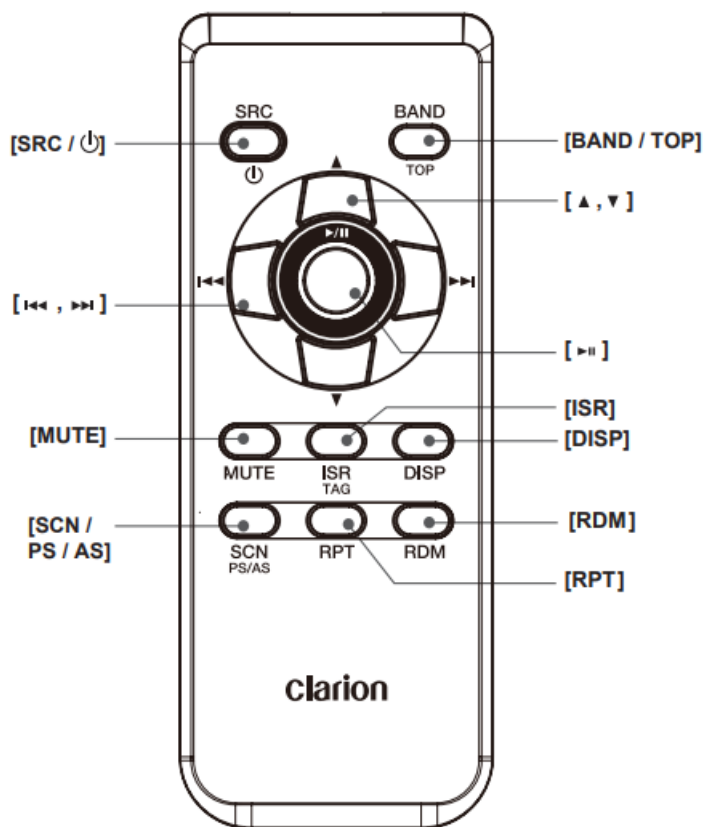

CAUTIONS ON HANDLING


Handling Discs

Handling

- New discs may have some roughness around the edges. If such discs are used, the player may not work or the sound may skip. Use a ball-point pen or the like to remove any roughness from the edge of the disc.

Ball-point pen

Roughness

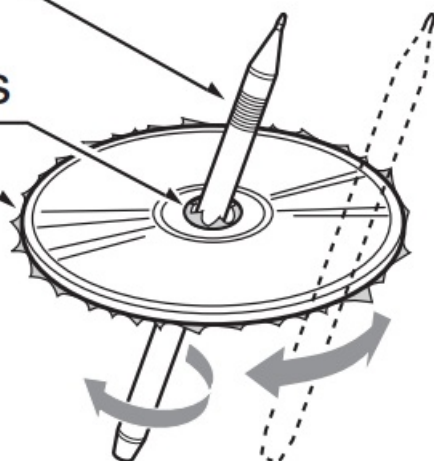

- Never stick labels on the surface of the disc or mark the surface with a pencil or pen.
- Never play a disc with any cellophane tape or other glue on it or with peeling off marks.
If you try to play such a disc, you may not be able to get it back out of the player or it may damage the player.
- Do not use discs that have large scratches, are misshapen, cracked, etc.
Use of such discs may cause misoperation or damage.
- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.
- Do not use commercially available disc protection sheets or discs equipped with stabilizers, etc. These may damage the disc or cause breakdown of the internal mechanism

Storage

- Do not expose discs to direct sunlight or any heat source.
- Do not expose discs to excess humidity or dust.
- Do not expose discs to direct heat from heaters.

Cleaning

- To remove fingerprints and dust, use a soft cloth and wipe in a straight line from the center of the disc to the circumference.
- Do not use any solvents, such as commercially available cleaners, anti-static spray, or thinner to clean discs.
- After using special disc cleaner, let the disc dry off well before playing it.

On Discs

- Never turn off the power and remove the unit from the car with a disc loaded.



CAUTION

For your safety, the driver should not insert or eject a disc while driving.

OPERATIONS

Basic Operations

Note:

- Refer to the diagrams in “3. CONTROLS” when reading this chapter.



CAUTION

When the unit is turned on, starting and stopping the engine with its volume raised to the maximum level may harm your hearing.

Be careful about adjusting the volume.

Power on / off


Notes:


- Start the engine before using this unit.
- Be careful about using this unit for a long time without running the engine. If you drain the battery too far, you may not be able to start the engine and this can reduce the service life of the battery.

1. Start the engine. The power button / knob illumination on the unit will light up.



Engine ON
position

2. Press the [ / SRC] button on the front panel or the remote control to turn on the power under standby mode. The unit goes back to the last status after power on.

3. Press and hold the [ / SRC] button on the front panel or the remote control to turn off the power.

Mute

Press the [MUTE] button on the remote control to mute the volume from the unit.

Note:

Doing the operation above again or adjusting volume will release muting.

Volume adjustment

Rotate the [VOLUME] knob on the front panel

or press the [] or [] button on the remote control.


The adjustable range of volume is 0 to 40.



CAUTION

While driving, keep the volume level at which external sounds can still be heard.

Playing source selection

Press [ / SRC] button on the front panel or remote control repeatedly to choose desired playing source.

Note:

Playing source selection means selecting which mode, such as DISC mode, RADIO mode and AUX mode.

Display system time

Press the [DISP] button on the front panel or remote control to change the display information from clock, station information (radio mode), or track information (CD mode).


RESET

If you have following problems, please press [RESET] button.



- Unit can not power on
- Nothing happens when buttons are pressed
- Display is not accurate

Note:

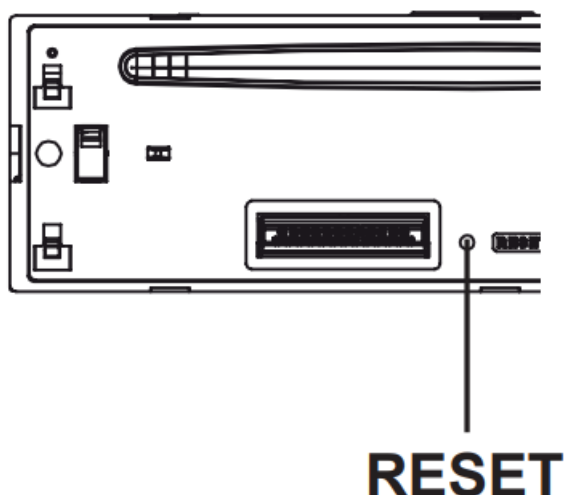

* When the [RESET] button is pressed, preset radio stations, audio setting, etc. stored in memory are cleared.



System Setup

In any mode, press and hold [DISP] button to enter system setup. Press [] or [] button to select options, rotate the [VOLUME] knob to adjust.

CLOCK

Press the [VOLUME] knob to enter clock setting mode, rotate the [VOLUME] knob to set clock, press [] [] button to select hour or minute, press and hold the [VOLUME] knob to confirm.

DX/LO (RADIO mode)

Rotate the [VOLUME] knob to choose radio local or distant at RADIO mode.

- LO: Only stations with strong signal can be received.
- DX: Stations with strong and weak signals can be received.

AUX SENS (AUX mode)

Rotate the **[VOLUME]** knob to choose AUX Input sensitivity LOW, MID or HIGH at **AUX** mode.

CRN SVR: ON/OFF

Rotate the **[VOLUME]** knob to choose SCRN SVR (screen saver) ON or OFF.

SCROLL: ON/OFF

For track information that is longer than the display panel:

When SCOLL is ON, the LCD will scroll the ID3 TAG information across the display, e.g.:

TRACK->FILE->FOLDER->TITLE->ARTIST- >ALBUM->TRACK->...

When SCROLL is OFF, the LCD will display one of the ID3 TAG information, the default is TRACK, but user can adjust it to other ID3TAG information by press [DISP] button.

S-CTRL (iPod mode) : ON/OFF

Rotate the **[VOLUME]** knob to choose S-CTRL (Simple control) ON or OFF.

* Refer to Page 10.

REAR/S-W

Rotate the **[VOLUME]** knob to choose REAR or S-WOOFER (SUB-WOOFER).

DIMMER: ON/OFF

Rotate the **[VOLUME]** knob to choose DIMMER ON or OFF.

- ON: LCD dimmer is active when small light of vehicle is turned ON.
- OFF: LCD always maximum brightness regardless of the vehicle small light.

BEEP: ON/OFF


Rotate the **[VOLUME]** knob to choose button beep sound ON or OFF.

12/24H

Rotate the **[VOLUME]** knob to choose time format: 12 or 24 hours.


Audio Setup



Press the [] button to enter sound effect setting mode. First press shows current EQ.

Rotate the **[VOLUME]** knob to changes BEAT EQ in this order:

OFF -> B-BOOST -> IMPACT -> EXCITE -> CUSTOM

Rotate the **[VOLUME]** knob to changes CUSTOM, and press the **[VOLUME]** knob, the press [] or [



] button to select it including: BAS-G -> BAS-F -> BAS-Q -> MID-G -> MID-F -> MID-Q -> TRE-G -> TRE-F, rotate the **[VOLUME]** knob to select a value.



BAS-G / MID-G / TRE-G: (-7)- (+7)


BAS-F: 60 / 80 / 100 / 200

BAS-Q: 1.0 / 1.25 / 1.5 / 2.0

MID-F: 500 /1.0K / 1.5K /2.5K

MID-Q: 0.5 / 0.75 / 1.00 / 1.25

Press the [] button, then press [] or

[] button to select USER preset including:

BALANCE -> FADER -> M-B EX -> LPF

(low pass filter) -> SUBW VOL (Subwoofer Volume), rotate the [VOLUME] knob to select a value.

BALANCE: LEFT 1-7 -> CENTER -> RIGHT 1-7

FADER: FRONT 1-7 -> CENTER -> REAR 1-7

M-BEX: ON / OFF

LPF: THROUGH / 80 / 120 / 160

SUBW VOL: (-6) – (+6)



Radio Operations



Select tuner as playing source Press [ / SRC] button once or more to enter RADIO mode.

Selecting the radio band Press the [**BAND**] button on the panel or on the remote control to select one radio band among FM1, FM2, FM3, AM.

Manual tuning

During manual tuning, the frequency will be changed in steps.

Press the [] or [] button on the panel to tune in a lower / higher station.

Press the [] or [] button on the remote control to select preset stations.

Auto tuning

Press and hold the [] or [] button to seek a lower / higher station.

To stop searching, repeat the operation above or press other buttons having radio functions.

Note:

When a station is received, searching stops and the station is played.

Preset scan

Preset scan receives the stations stored in preset memory in order. This function is useful when searching for a desired station in memory.

1. Press the [**SCN/PS/AS**] on the remote control button.
2. When a desired station is tuned in, press the [**SCN/PS/AS**] button again to continue receiving that station.

Note:

Be careful not to press and hold the [**SCN/ PS/AS**] button for 1 second or longer, otherwise the auto store function will begin and the unit starts storing stations.

Auto store

The unit stores the strongest stations found in the entire Band.

Press and hold the [AS/BAND] button (1sec.) or [PS/AS] button on the remote control to start automatic station search.

To stop auto store, press other buttons having radio functions.

Notes:

1. After auto store, the previous stored stations will be overwritten.
2. The unit has 4 bands, such as FM1, FM2, FM3 and AM. FM3 and AM can store by AS function. Each band can store 6 stations, CZ205AU can store 24 stations in total.

Manual store


When one expected radio station has been detected, press and hold number button 1-6 to store it in the memory.

Recall the stored stations

Press one numeric button among 1 to 6 on the panel to select the corresponding stored station.

Local seeking

When LOCAL seeking is ON, only those radio stations with strong radio signal could be received.

To select LOCAL function, press and hold the [DISP] button on the front panel, then press [] button repeatedly until LO or DX displays on the screen, and rotate the [VOLUME] knob to select Local or Distant mode.

Note:

The number of radio stations that can be received will decrease when Local mode is ON.

CD/MP3/WMA Operations

This unit can playback MP3/WMA files

Note:

- If you play a WMA file with active DRM (Digital Rights Management), there will be no audio.

To disable DRM

(Digital Rights Management) When using Windows Media Player 9/10/11, click on Tool -> Options -> Copy Music tab, then under Copy settings, unclick the Check box for Copy project music. Then, reconstruct files. Personally constructed WMA files are used at your own responsibility.

Precautions when creating MP3/ WMA file

Usable sampling rates and bit rates

1. MP3: Sampling rate 8 kHz-48 kHz, Bit rate 8 kbps-320 kbps / VBR
2. WMA: Bit rate 8 kbps-320 kbps

File extensions

1. Always add a file extension “.MP3”, “.WMA” to MP3, WMA file by using single byte letters. If you add a file extension other than specified or forget to add the file extension, the file cannot be played.
2. Files without MP3/WMA data will not play.

The files will not play if you attempt to play files without MP3/WMA data.

* When VBR files are played, the play time display may differ the play location.

* When MP3/WMA files are played, a little no sound part is caused between tunes.

Logical format (File system)

1. When writing MP3/WMA file on a CD-R disc or CD-RW disc, please select "ISO9660 level 1, 2 or Joliet" or Apple ISO as the writing software format. Normal play may not be possible if the disc is recorded on another format.
2. The folder name and file name can be displayed as the title during MP3/WMA play but the title must be within 32 single byte alphabetical letters and numerals (including an extension).
3. Do not affix a name to a file inside a folder having the same name.

Folder structure

A disc with a folder having more than 8 hierarchical levels will be impossible.

Number of files or folders

1. Up to 999 files can be recognized per folder.
Up to 3000 files can be played.
2. Tracks are played in the order that they were recorded onto a disc. (Tracks may not always be played in the order displayed on the PC.)
3. Some noise may occur depending on the type of encoder software used while recording.

Eject function

Just pressing the [] button, ejects the disc.

Notes:

- If you force a CD into before auto reloading, this can damage the CD.
- If a CD (12 cm) is left ejected for 15 seconds, the CD is automatically reloaded (Auto reload).

Listening to a disc already loaded in the unit



Press the [ / SRC] button to select the CD/ MP3/WMA mode. When the unit enters the CD/MP3/WMA mode, play starts automatically.

Loading a CD



Insert a CD into the center of the CD SLOT with label facing up. The CD plays automatically after loading.

Notes:

- Never insert foreign objects into the CD SLOT.
- If the CD is not inserted easily, there may be another CD in the mechanism or the unit may require service.

- Discs without the  or  TEXT mark and CD-ROMs cannot be played by this unit.
- Some CD-R/CD-RW discs may not be usable.

Pausing play

1. Press the [] button to pause play. "PAUSE" appears in the display.
2. To resume CD play, press the [] button again.

Displaying CD titles

This unit can display title data for MP3/WMA disc.

When SCROLL is OFF, each time you press the [DISP] button to change the title display.

MP3/WMA disc

TRACK->FILE->FOLDER->TITLE->ARTIST->ALBUM->TRACK->...

Notes:



- If MP3/WMA disc has no ID3 TAG, "NO TITLE" appears in the display.
- Only ASCII characters can be displayed in Tags.

Selecting a track

Track-up

1. Press the [] button to move ahead to the beginning of the next track.
2. Each time you press the [] button, the track advances ahead to the beginning of the next track.
3. For MP3/WMA disc, press and hold the [6] button (1 sec.) to move ahead to +10 tracks.

Track-down

1. Press the [] button to move back to the beginning of the current track.
2. Press the [] button twice to move back to the beginning of the previous track.
3. For MP3/WMA disc, press and hold the [5] button (1 sec.) to move back to -10tracks.

Fast-forward/Fast-reverse

Fast-forward

Press and hold the [] button .

Fast-reverse

Press and hold the [] button .

* For MP3/WMA discs, it takes some time until the start of searching and between tracks. In addition, some errors may occur in the play time.

Folder Select

This function allows you to select a folder containing MP3/WMA files and start playing from the first track in the folder.

1. Press the [5] or [6] button. Press the [6] button to move the next folder. Press the [5] button to move the previous folder.

2. To select a track, press the [] or [] button.

Search Function

1. Press the [MENU] button to enter FOLD SCH mode. Press the [VOLUME] button to enter the folder list search mode.
2. Turn the [VOLUME] knob to select a folder.
3. Press the [VOLUME] button to enter the file list search mode. And then the track list appears in the display.
4. Turn the [VOLUME] knob to select a track.
5. Press the [VOLUME] knob to play.

* When play back MP3 / WMA file, this function is performed in the current folder.

CD/MP3/WMA Operations

Top function

The top function resets the CD player to the first track of the disc. Press [4] button to play the first track (track No. 1) on the disc.

* In case of MP3/WMA, the first track of the current folder will be played.

Other various play functions

Scan play

This function allows you to locate and play the first 10 seconds of all the tracks recorded on a disc. Press the [1] button to perform scan play.

Repeat play

This function allows you to play the current track repeatedly or play a track currently being played in the MP3/WMA folder repeatedly.

CD:

1. Press the [2] button once or more until "RPT ON" appears on the LCD to perform repeat play.
2. Press [2] button again to cancel repeat playback, "RPT OFF" appears on the LCD.

MP3/WMA:

1. Press the [2] button once or more until "TRACK RPT" appears on the display to perform repeat play, and "RPT" segment lights on.
2. For MP3/WMA files, press [2] button repeatedly until "FOLD RPT" appears on the display for folder repeat play.
3. Press [2] button repeatedly until "RPT OFF" appears on the display to cancel repeat playback, and "RPT" segment goes off .

Random play

This function allows you to play all tracks recorded on a disc in a random order. Press the [3] button to perform random play.

USB Operations


1. Open the cover of the USB connector to the right. Insert a USB cable (optional CCA-755) into the USB connector. Insert a USB device into the USB cable.

When connecting a USB device, the unit will read the files automatically.

2. To remove the USB device, you should first select another source or turn off the power, in order to avoid

damaging the USB device. Then remove the USB device. Close the cover.

3. Operation is the same as MP3/WMA operation.

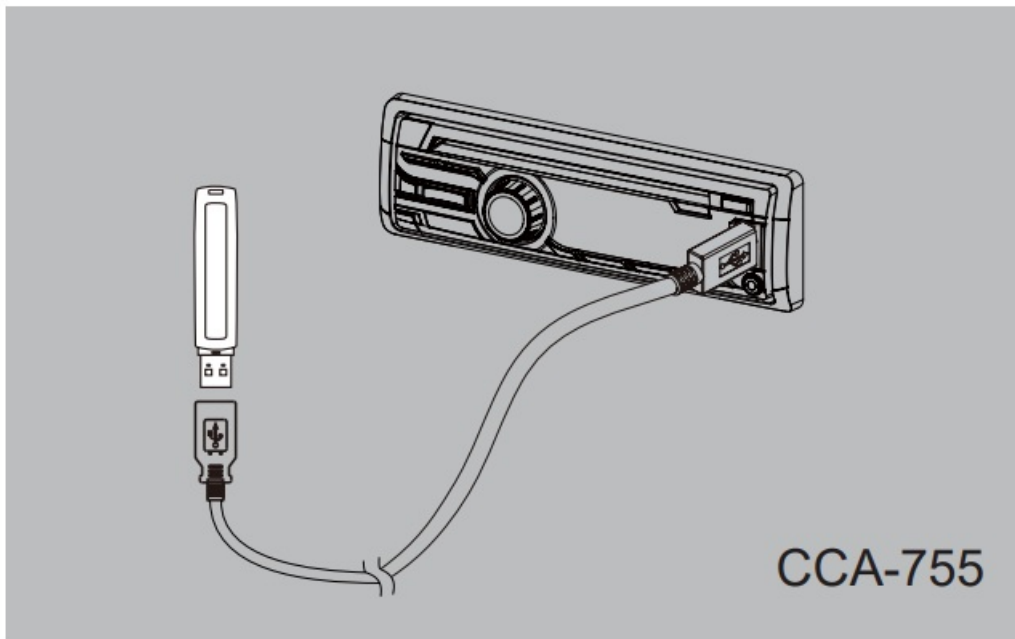

iPod & iPhone Operations

Connect

Connect an iPod or iPhone to the USB connector via accessory cable for iPod/ iPhone.

When connecting a device, the unit will read the files automatically. The track information displays on the screen once playback start.

MENU

In the S-CTRL OFF mode, press [MENU] button.

Then press the [VOLUME] knob after appear the " MUSIC ", then rotate the [VOLUME] knob to select PLAYLISTS / ARTISTS / ALBUMS / SONGS / GENRES / COMPOSERS, and press the [VOLUME] knob to confirm.

Repeat play

This function allows you to play the current track repeatedly or play all tracks in your iPod/iPhone repeatedly.

1. Press the [2] button once or more until "RPT ON" appears on the LCD to perform repeat play.
2. Press [2] button repeatedly until "RPT OFF" appears on the LCD to cancel repeat playback.


Random play

This function allows you to play all tracks recorded on your iPod/iPhone in a random order.

1. Press [3] button repeatedly until "RDM ALBUM" appears on the LCD for album random play.
2. Press the [3] button once or more until "RDM SONG" appears on the LCD to perform random play.
3. Press [3] button repeatedly until "RDM OFF" appears on the LCD to cancel random playback.

Setting iPod simple control mode

Use this function if you wish to operate through your iPod connected to this unit via the USB cable.

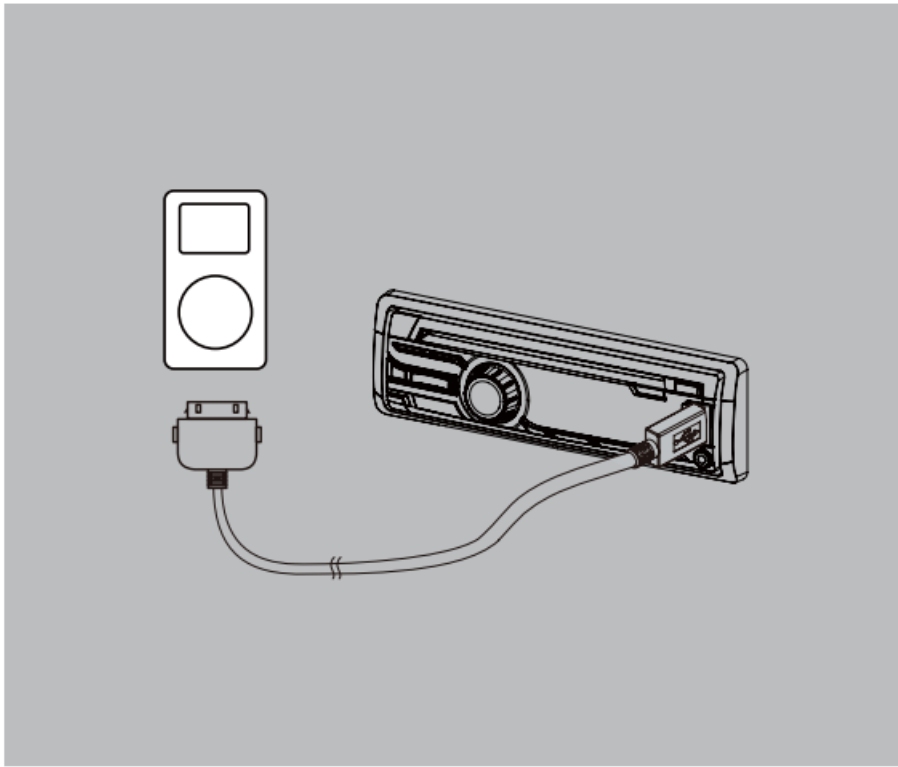

* The factory default setting is “ OFF ”.

1. Press and hold [DISP] button to enter system setup.
2. Press [] or [] button to select “ S-CTRL”.
3. Rotate the [VOLUME] knob to select “ ON ” or “ OFF ” .

When using iPhone 5s with iOS 8.1 and S-CTRL OFF, operations can still be made through the iPod.

Notes:

- When performing iPod operations using simple control mode, make the operations slowly. If repetitive operations are performed too quickly, unforeseen errors may occur.
- When performing iPod operations using simple control mode, please do not operate the iPod and the unit at the same time, otherwise there may be unexpected event happened.
- Some iPod models do not support this function. Consult your nearest Clarion dealer or website to confirm which models do not support this function.

iPod menu alphabet search

This function searches the subfolders for desired alphabetical letters.

1. Press the [MENU] button to select the iPod menu mode.
2. Press the [VOLUME] knob to switch between categories.
MUSIC: PLAYLISTS, ARTISTS, ALBUMS, SONGS, GENRES, COMPOSERS VIDEO: MOVIES, MUSIC VIDEOS, TV SHOWS, VIDEO PADCASTS, RENTALS
3. Press the [VOLUME] knob. (The contents of the category are displayed.
4. Press and hold the [DISP] button (1 sec.).
5. Rotate the [VOLUME] knob to select the desired letter to search.

6. Press the [DISP] button again to next perform search.
7. Press the [VOLUME] knob to confirm.

Listening to Pandora®

You can stream Pandora internet radio by connecting an iPhone/iPod that has the Pandora mobile application already installed.

To start streaming, connect the iPod/iPhone with Pandora already launched.

When the unit displays "PLEASE LAUNCH Pandora APPLICATION ON MOBILE DEVICE" in Pandora mode, please launch the Pandora Application by operating the iPod/iPhone connected.

1. Press the [/ SRC] button to enter the Pandora mode.

Selecting a station from list

Press the [MENU] button and select "BY DATE" or "A-Z" by rotating the [VOLUME] knob and press the [VOLUME] knob.

- BY DATE: List in an created date order
- A-Z: List in an alphabetical order

Go to next station or previous station(an alphabetical order)

Press the [5] button on the panel to go to previous station.

Press the [6] button on the panel or the [BAND/TOP] button on the remote control to go to next station.

Thumbs up/down

Thumbs up:

press the [2] button on the panel or the [RPT] button on the remote control for thumbs up.

Giving a track the thumbs up will tell Pandora to play more tracks like that one.

Thumbs down:

press the [1] button on the panel or the [SCN] button on the remote control for thumbs down.

Giving a track the thumbs down will skip to the next track (subject to skip limit), and Pandora will remember not to play that track on the station again.

Notes:

- You can personalize your stations by "thumbs up" or "thumbs down".
- If you give a track the thumbs down after the skip limit has been exceeded, your feedback will be saved but the current track will continue to play

BOOKMARK track

Short-press the [VOLUME] knob or the [RDM] button on the remote control to Bookmark current track.

Creating new stations

Short-press the [3] button on the panel to create a new station from the current artist.


Long-press the [3] button on the panel to create a new track.

Note:

If the name of the station you wish to create for a track title or an artist name is the same as the station name currently playing, "NOW PLAY" appears on the display and the station will not be created.

Skip




Press the [] button on the panel or on the remote control for the next tracks in station.

Note:

- Pandora limits the number of skips allowed on their service. If you attempt to skip tracks beyond the limit, “SKIP LIMIT” is displayed.

Play/Pause




Press the [] button on the panel or on the remote control for play / pause.

AUX Operations

The front AUX terminals of this system is provided to allow playback of sounds and music from external devices connected to this unit.



Press [ / SRC] button on the panel to select “AUX”.

AUX Input sensitivity setting

1. Press and hold the [DISP] button (1 sec.).
2. Turn the [VOLUME] knob to select “AUX SENS”.
3. If the output level of connected external audio player is “HIGH”, rotate [VOLUME] knob and choose “MID” or “LOW”. And if the output level is “LOW”, choose “MID” or “HIGH”.

TROUBLE SHOOTING

GENERAL

Problem	Cause	Measure
Unit can not power on .	Unit fuse blown.	Replace with new fuse of correct rating.
	Car battery fuse blown.	Replace with new fuse of correct rating.
Unit can not power on . Nothing happens when buttons are pressed. Display is not accurate.	The microprocessor has malfunctioned due to noise, etc.	<p>Turn off the power and remove the DCP. Press the [RESET] button with a thin rod.</p> <p>Note:</p> <p>When the [RESET] button is pressed, turn off the ACC power.*</p> <p>* When the [RESET] button is pressed, frequencies of radio stations, audio setting, etc. stored in memory are cleared.</p>
No/low audio output.	Improper audio output connection.	Check wiring and correct.
	Volume set too low.	Increase volume level.
	Speakers damaged.	Replace speakers.
	Heavily biased volume balance.	Adjust the channel balance to center position.
	Speaker wiring is in contact with metal part of car.	Insulate all speaker wiring connections.
Poor sound quality or distortion.	Non-standard disc used.	Use a standard disc.
	Speaker power rating does not match unit.	Replace speakers.
	Wrong connections.	Check wiring and correct.
	Speaker is shorted.	Check wiring and correct.
Unit resets itself when engine is off.	Incorrect connection between ACC and Battery.	Check wiring and correct.

DISC Player

Problem	Cause	Measure
Disc cannot be loaded.	Another disc is already loaded.	Eject the disc before loading the new one.
	There is a foreign object stuck inside the unit.	Remove the object inside the unit.
Sound skips or is noisy.	Compact disc is dirty.	Clean the compact disc with a soft cloth.
	Compact disc is heavily scratched or warped.	Replace with a compact disc with no scratches.
Sound is bad when power is first turned on.	Condensation may form on the internal lens when the car is parked in a humid place.	Let dry for about 1 hour with power on.

USB device

Problem	Cause	Measure
USB device cannot be inserted.	The USB device has been inserted with wrong direction.	Reversing the connection direction of the USB device, try it again.
	The USB connector is broken.	Replace with a new USB device.
USB device is not recognized.	The USB device is damaged.	Disconnect the USB device and reconnect. If the device is still not recognized, try replacing with a different USB device.
	Connectors are loose.	
No sound heard with the display “No File” shown.	No MP3/WMA file is stored in the USB device.	Store these files properly in the USB device.
Sound skips or is noisy.	MP3/WMA files are not encoded properly.	Use MP3/WMA files encoded properly.

ERROR DISPLAYS

If an error occurs, one of the following displays is displayed. Take the measures described below to solve the problem.

Display	Cause	Measure
ERROR 3	Disc is inserted incorrectly.	Eject the disc then reload it properly.
	The disc format is not supported.	Try another disc.
ERROR 5	This is a failure of deck's mechanism.	Consult your store of purchase.

If an error display other than the ones described above appears, press the [RESET] button. If the problem persists, turn off the power and consult your store of purchase.

* When the [RESET] button is pressed, frequencies of radio stations, audio setting, etc. stored in memory are cleared.

SPECIFICATIONS

FM Tuner

Frequency range: 87.5 – 108.0MHz Usable sensitivity: 12dBf Frequency response: 30Hz-15kHz Stereo separation: 30dB(1kHz) Signal/noise ratio: >55dB

AM Tuner

Frequency range: 531 – 1629KHz Usable sensitivity (S/N=20dB): 30dB μ

CD Player

System: Disc digital audio system Frequency response: 20Hz-20kHz Signal/noise ratio: >94dB Total harmonic distortion: Less than 0.1% (1kHz) Channel separation: >60dB

MP3/WMA mode

MP3 sampling rate: 8 kHz to 48 kHz MP3 bit rate: 8 kbps to 320 kbps / VBR WMA bit rate: 8 kbps to 320 kbps Logical format: ISO9660 level 1,2 Joliet file system

USB

Specification: USB 1.0/2.0 Playable audio format:

MP3(.mp3): MPEG 1/2/Audio Layer-3 WMA(.wma): Ver 7/8/9.1/9.2

Audio Amplifier

Maximum power output:

180W (45W x 4) Speaker impedance: 4 (4 to 8 allowable)

Input

Audio input sensitivity:

High: 320mV (at 1V output) Mid: 650mV (at 1V output) Low: 1.3V (at 1V output) (input impedance 10 k or greater)

Aux-in level: \leq 2V

General

Power supply voltage:


14.4VDC (10.8 to 15.6V allowable), negative ground

Pre-Amp output voltage:

2.0V (CD play mode: 1kHz, 0dB, 10k load) Fuse: 15A

Dimensions of the Main Unit:

188mm Width x 58mm Height x 179mm Depth Weight of the Main Unit: 1.20kg

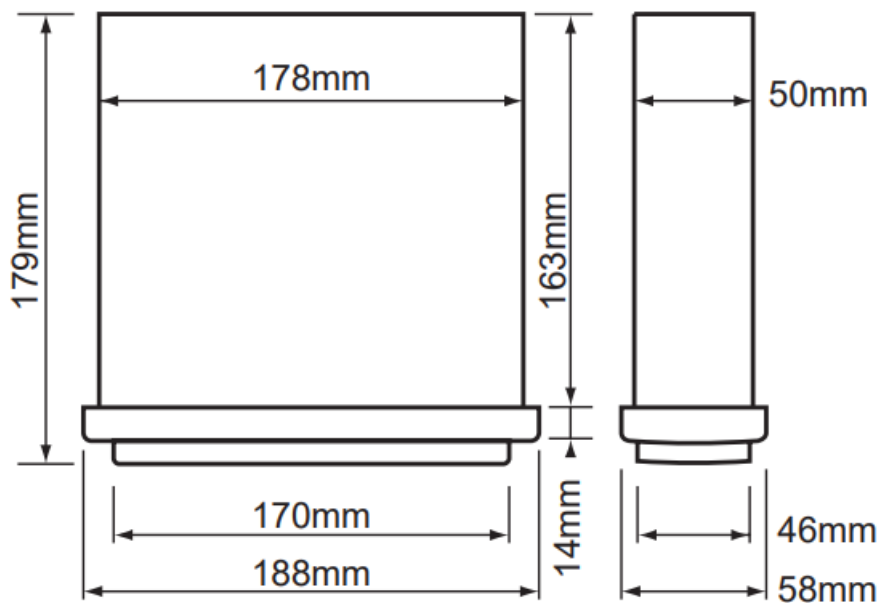

Note:

- Specifications and design are subject to change without notice for further improvement.

INSTALLATION / WIRE CONNECTION GUIDE

Before Starting

1. This set is exclusively for use with a negative ground 12 V power supply.
2. Read these instructions carefully.
3. Be sure to disconnect the battery "terminal" before starting. This is to prevent short circuits during installation.

(Figure 1)

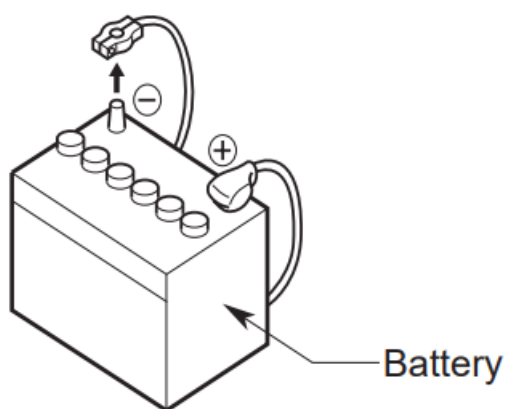


Figure 1

Package Contents

Source unit	1
Front panel	1
Trim ring	1
Mounting bracket	1

L-key 2

Power supply cable 1

Owner's manual..... 1

Special screw (M2*5mm,front panel lock) 1

Screws M5x6 mm Double Sems 4

General Cautions

1. Do not open the case.

There are no user serviceable parts inside. If you drop anything into the unit during installation, consult your dealer or an authorized Clarion service center.

2. Use a soft, dry cloth to clean the case.

Never use a rough cloth, thinner, benzine, or alcohol etc. For tough dirt, apply a little cold or warm water to a soft cloth and wipe off the dirt gently.

Cautions on Installation

1. Prepare all articles necessary for installing the source unit before starting.
2. Install the unit within 30° of the horizontal plane. (Figure 2)
3. If you have to do any work on the car body, such as drilling holes, consult your car dealer beforehand.

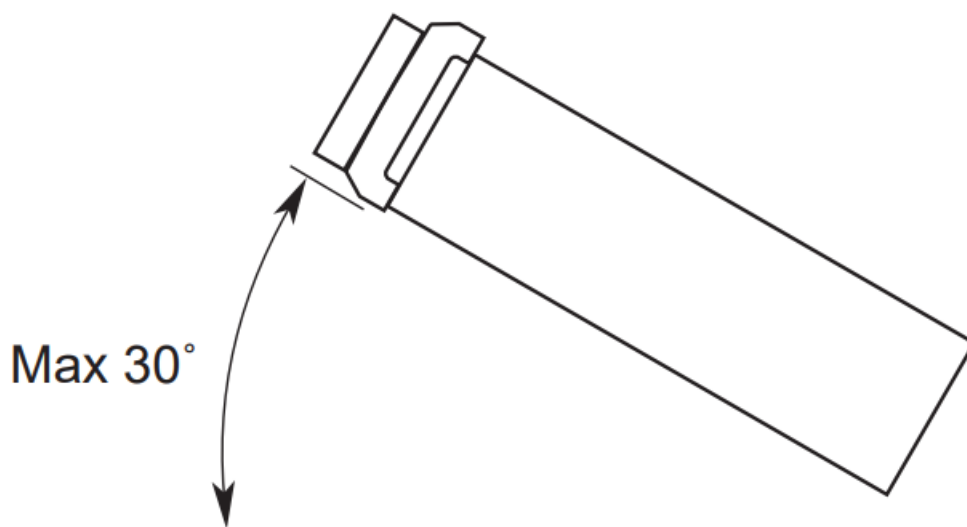


Figure 2

4. Use the enclosed screws for installation.
Using other screws can cause damage. (Figure 3)

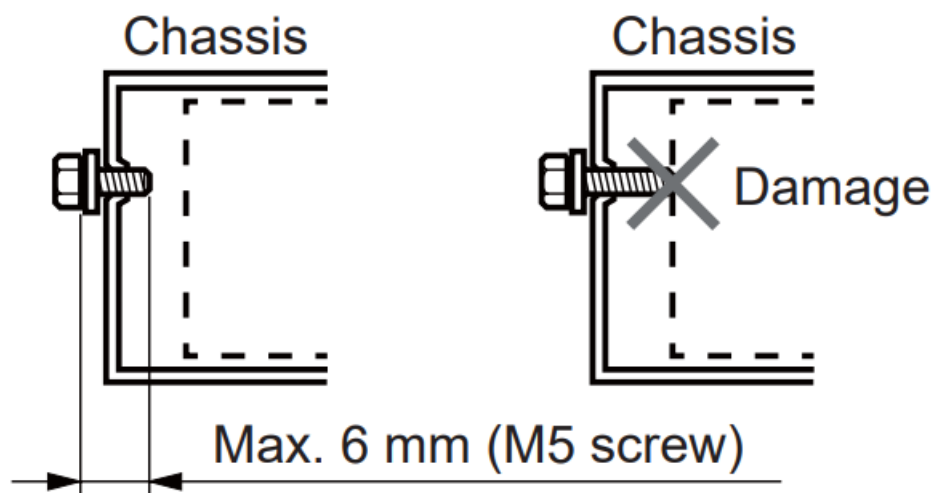


Figure 3


Installing the Source Unit

1. Place the mounting bracket into the instrument panel, use a screwdriver to bend each stopper of the mounting bracket inward, then secure the stopper.
2. Wire as shown in Section 7) .
3. Insert the source unit into the mounting bracket until it locks.
4. Take care of the top and bottom of the trim ring and mount it so that all the hooks are locked.

Notes:


1. Some car models require special mounting kits for proper installation.
Consult your Clarion dealer for details.
2. Fasten the front stopper securely to prevent the source unit from coming loose.

- Console opening dimensions

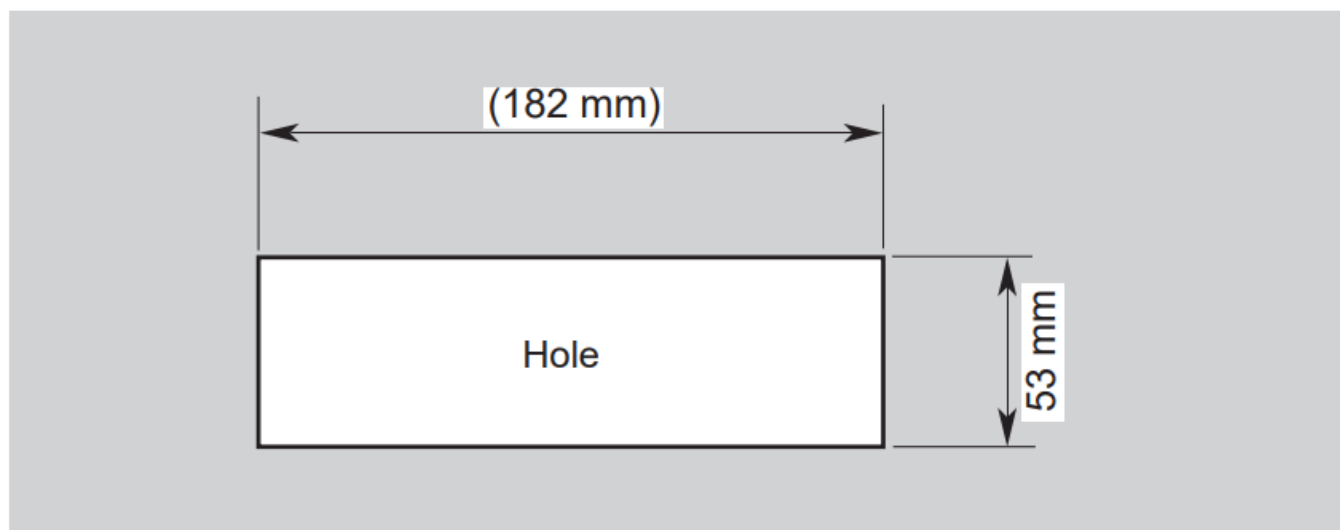

Notes of installation

1. Before installation, please make sure proper connections are conducted and the unit operates normally.
Improper connection may result in damage to the unit.
2. Use only accessories designed and manufactured for this unit and other unauthorized accessories may result in damage to the unit.
3. Before installation, please fasten all power cables.
4. DO NOT install the unit in the place where close to hot area to prevent damage to electrical components such as the laser head.
5. Install the unit horizontally. Installing the unit more than 30 degree vertically may result in worse performance.
6. To prevent electric spark, connect the positive pole first and then the negative pole.


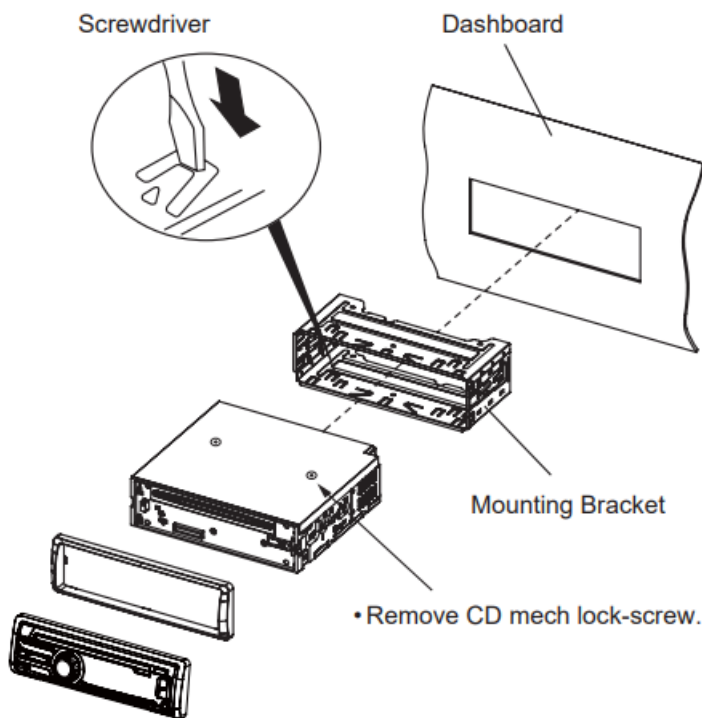


Unit Installation

Method A

1. Insert mounting bracket into dash board, choose appropriate mounting tab according to the gap width, bending the mounting tab outwards with a screwdriver to fix the mounting bracket in place.
2. Slide the unit into the bracket until you hear a click sound.

Method B

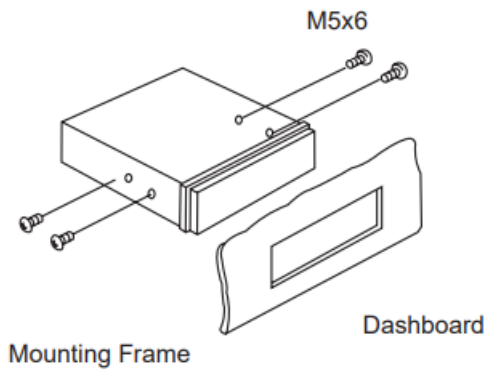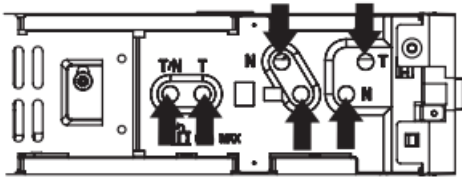


1. Insert this unit directly to the opening of the dashboard.
2. Place M5x6 cylindrical screw through the holes of the mounting frame located inside the opening to holes of the unit and fasten the screws to left & right.

Trim ring installation

Attach the trim ring around the front panel.


Take care of the top and bottom of the trim ring and mount it so that all the hooks are locked.

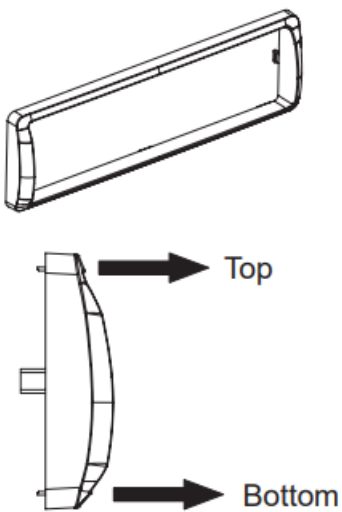


Removing the Source Unit

Disassemble trim ring

1. Push the trim ring to right and pull out the right part.

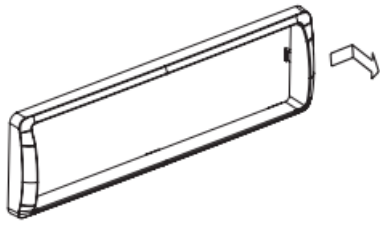


2. Push the trim ring to left and pull out the left part.

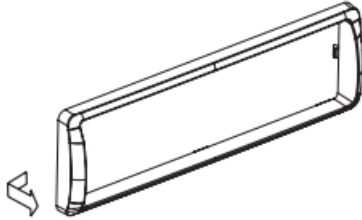


Disassemble the unit


1. Turn off the power.
2. Remove the panel.
3. Remove the trim ring.
4. Insert the removal keys straight back until they lock, then pull the unit out.

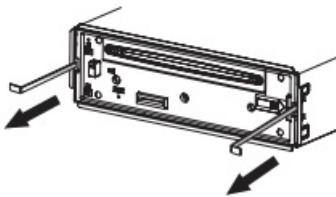

5. Disconnect all the wires.

Wiring and Connections

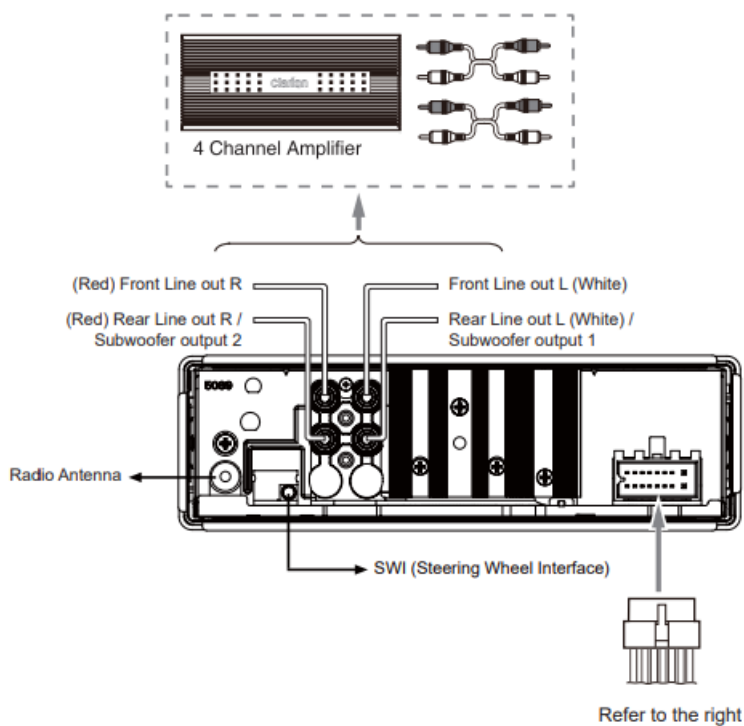

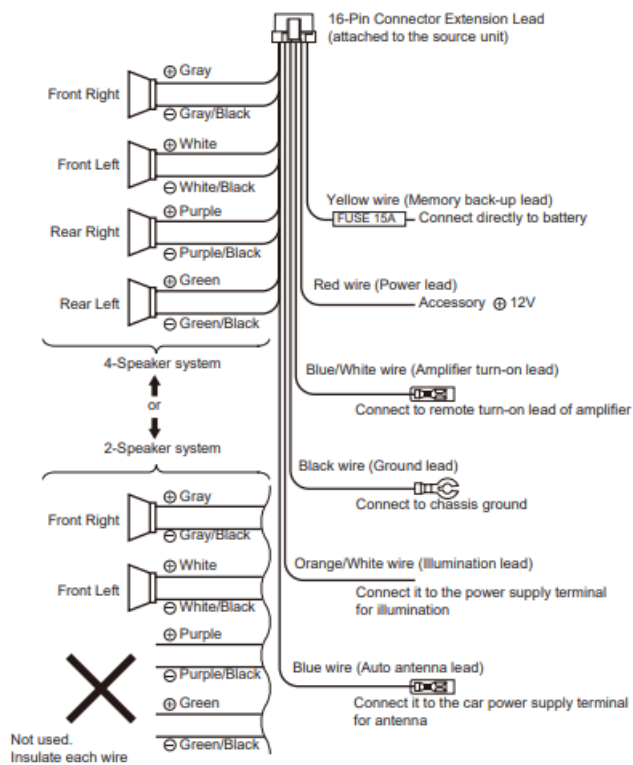

Wiring and Connections

- **Connecting to the external amplifier**

External amplifiers can be connected to the 4 channel RCA output connections. Ensure that the connectors are not grounded or shorted to prevent damage to the unit.



Documents / Resources

	clarion CZ205AU CD and USB Receiver [pdf] Owner's Manual CZ205AU, CZ205AU CD and USB Receiver, CD and USB Receiver, USB Receiver, Receiver
--	---

References

- ^{MH} [Search - Manual-Hub.com](#)