



Clarke Tech REMCON755 Remote Control Instructions

[Home](#) » [Clarke Tech](#) » Clarke Tech REMCON755 Remote Control Instructions 

Contents

- [1 Clarke Tech REMCON755 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Clarke Tech REMCON755 Remote Control



Product Information

Specifications

- **Model:** Clarke Tech REMCON755
- **Product Type:** Remote Control
- **Compatibility:** Original and Replacement
- **Buttons:** Power, Mute, Number Keys (1-9), TV/Radio, Program Display, Media Guide, EPG, Info, Angle, Menu, Home, Exit, Volume Control (Up/Down), Channel Control (Up/Down), Group, Page, Pause, Color, Page+, Page+, Cancel, Clear, Left, Right, OK, Smart, List, Shift, Preset+, Freeze, Picture, Format

Product Usage Instructions

Original Remote Control Usage

The original remote control for Clarke Tech REMCON755 has the following buttons:

- **Power:** Press to turn the device on or off.
- **Mute:** Press to mute or unmute the audio.
- **Number Keys (1-9):** Press to input numbers or select channels.
- **TV/Radio:** Press to switch between TV and Radio modes.
- **0:** Press to input the number 0.

- **TV/Sat:** Press to switch between TV and Satellite modes.
- **EPG:** Press to access the Electronic Program Guide.
- **Info:** Press to display additional information.
- **Menu:** Press to open the menu interface.

Replacement Remote Control Usage

The replacement remote control for Clarke Tech REMCON755 has the following buttons:

- **Power:** Press to turn the device on or off.
- **Mute/Dimmer:** Press to mute or unmute the audio, or adjust the screen brightness.
- **Number Keys (1-9):** Press to input numbers or select channels.
- **TV/Radio:** Press to switch between TV and Radio modes.
- **Program Display:** Press to display the program information.
- **Media Guide:** Press to access the media guide.
- **EPG:** Press to access the Electronic Program Guide.
- **-/Info:** Press to display additional information.
- **Angle:** Press to adjust the viewing angle.
- **Menu:** Press to open the menu interface.
- **Home:** Press to return to the home screen.

Frequently Asked Questions (FAQ)

Q: How do I turn on the device using the remote control?

- **A:** To turn on the device, press the Power button on the remote control.

Q: How do I adjust the audio volume?

- **A:** Use the Volume Up and Volume Down buttons on the remote control to adjust the audio volume.

Q: How do I switch between TV and Radio modes?

- **A:** Press the TV/Radio button on the remote control to switch between TV and Radio modes.

Q: How do I access the Electronic Program Guide (EPG)?

- **A:** Press the EPG button on the remote control to access the Electronic Program Guide.

Q: How do I navigate through the menu interface?

- **A:** Use the Up, Down, Left, and Right buttons on the remote control to navigate through the menu interface.

Q: How do I mute the audio?

- ## OVERVIEW

[illegible]

Documents / Resources



[Clarke Tech REMCON755 Remote Control](#) [pdf] Instructions
REMCON755 Remote Control, REMCON755, Remote Control, Control

References

- [M Replacement remote control for CLARKE TECH REMCON755](#)
- [User Manual](#)