

classbach C-MBS4019 Profi Electro De knife block set **Instruction Manual**

Home » classbach » classbach C-MBS4019 Profi Electro De knife block set Instruction Manual



Contents

- 1 classbach C-MBS4019 Profi Electro De Knife Block Set Instruction
 - 1.1 Cleaning and Care
 - 1.2 Sharpening
- 2 Documents / Resources
 - 2.1 References
- **3 Related Posts**

classbach C-MBS4019 Profi Electro De Knife Block Set Instruction Manual



CE

Thank you for choosing our product. In order for you to enjoy the knives for a long time, please observe the following instructions:



WARNING: Risk of Injury!

- The blades of the knives and scissors are sharp! Handle the knives and scissors with due care!
- Never test the sharpness of a knife by running your finger along the blade.
- Keep the knife block with the knives and scissors out of the reach of children.



CAUTION:

- Cutting on glass or granite surfaces will make the knife dull more quickly.
- Do not clean the knives, knife block and scissors in the dishwasher.
- Do not use any harsh or abrasive cleaners.

Cleaning and Care

- Clean the knives before the first and after each use in hot water, while adding detergent. Always keep the sharp end of the knife away from you and hold the knife by the handle. Then, dry the knife with a towel before placing it back into the knife block.
- Clean the knife block with a moist towel. If the knife block is made of wood, do not immerse it in water.
- You can wipe the scissors with a damp cloth.

Sharpening

If a knife or scissors no longer has the desired sharpness, you can regain it with the sharpening steel supplied.



Internet: www.classbach.de

Made in P.R.C.

Stand 11/2022

Documents / Resources



<u>classbach C-MBS4019 Profi Electro De knife block set</u> [pdf] Instruction Manual C-MBS4019 Profi Electro De knife block set, C-MBS4019, Profi Electro De knife block set, knife block set

References

• <a>Classbach Onlineshop – Lifestyle-Produkte im Trend

Manuals+,