



## classbach C-SMS 4001 Stabmixer Hand Blender Set Instruction Manual

[Home](#) » [classbach](#) » classbach C-SMS 4001 Stabmixer Hand Blender Set Instruction Manual 

# classbach®

C-SMS 4001 Stabmixer Hand Blender Set  
Instruction Manual




CE

## Contents

- 1 Overview of the Components
- 2 Instruction Manual
- 3 Intended Use
- 4 Unpacking the Appliance
- 5 Overview of the Components / Scope of Delivery
- 6 Important Notes for the Use of the Appliance
- 7 Operation
- 8 Cleaning
- 9 Storage
- 10 Technical Data
- 11 Disposal
- 12 Documents / Resources
- 13 Related Posts

## Overview of the Components

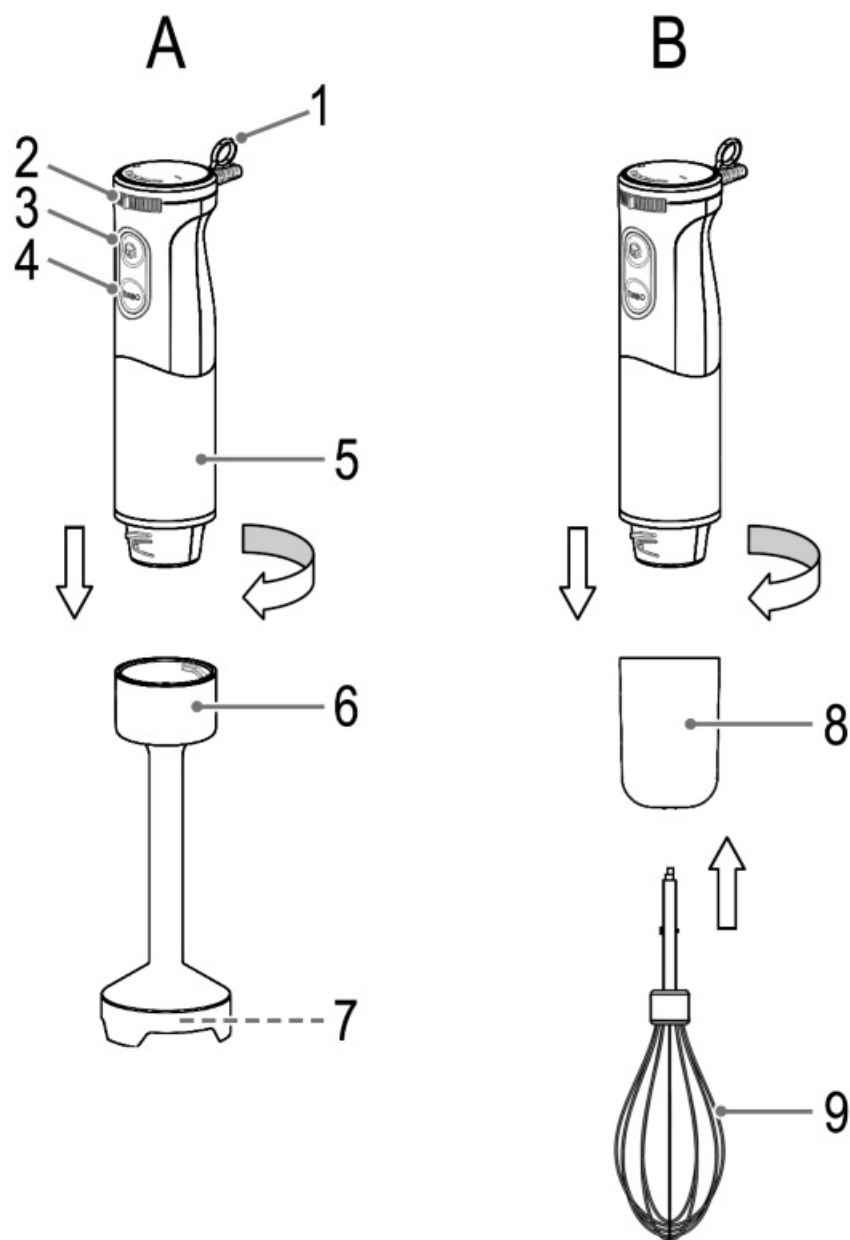

**IMPORTANT:** Be sure to read the separately enclosed safety instructions first.

## Instruction Manual

Thank you for choosing our product. We hope you will enjoy using the appliance.

Read the instruction manual and the separately enclosed safety instructions very carefully before using this appliance.

Keep these documents, including the warranty certificate, receipt and, if possible, the box with the inner packaging in a safe place. If you pass the appliance on to a third party, always include all the relevant documents.

### Symbols in this Instruction Manual

Important information for your safety is specially marked.

It is essential to comply with these instructions in order to avoid accidents and prevent damage to the appliance:



#### **WARNING:**

This warns you of dangers to your health and indicates possible injury risks.



#### **CAUTION:**

This refers to possible hazards to the appliance or other objects.

## Intended Use

This appliance is designed for mixing, whipping, puréeing, or chopping food. For example, it is very suitable for preparing mayonnaise, dips, sauces, soups, baby food and milkshakes.

It can also be used in hot dishes.

The appliance is intended for processing household quantities.

The appliance is intended for use in households and similar applications. It may only be used in the manner described in these operating instructions. You must not use the appliance for commercial purposes.


Any other use is considered improper and may result in damage to property or even personal injury.

The manufacturer accepts no liability for damage caused by improper use.

## Unpacking the Appliance

1. Remove the appliance from the package.
2. Remove all packaging material such as films, filler, cable ties, and cardboard.
3. Check the delivery contents for completeness.
4. Should the package contents be incomplete or damages are found, do not take the appliance into operation.  
Take it immediately back to the dealer.
5. Dust or production residues can be located on the appliance. We recommend cleaning the appliance as described under "Cleaning".

## Overview of the Components / Scope of Delivery

1. Hanging loop
2. Speed controller
3.  Push button
4. TURBO button
5. Motor housing
6. Blending rod
7. Blades

8. Adapter for whisk/gear unit of whisk
9. Whisk

## Important Notes for the Use of the Appliance



### WARNING:

If you use the appliance in hot food, there is a risk of burns from hot splashes.

- Immerse the blending rod or whisk in the food before switching on the appliance. This will prevent splashing.



### CAUTION:

- Make sure that the mains cable does not come into contact with hot surfaces (e. g. hot pots).
- Do not use this appliance to chop hard foods such as ice cubes, nutmeg, or large pieces of block chocolate. This may destroy the blades!
- Chop large pieces of solid food before puréeing (max Ø 1.5 cm) and add some liquid.
- For best results with the whisk, use high-walled and not too large containers.
- If the maximum speed is too slow, stop the process.  
Reduce the amount of food being blended. Loosen up solid food.
- Short-time operation: Observe the maximum operating time of the accessories in the table below. Let the appliance cool down for about 1 minute before using it again.  
Select the accessories according to the table below.

**Table**


Accessories	Function	Speed		Operating time
		9 button	TURBO button	
Blending rod (6)	For mixing and stirring shakes, drinks, and sauces; for pureeing soups and sauces; for chopping pre-cut, solid foods, dips, and baby food.	Steplessly selectable	Maximum speed. It is not adjustable.	Maximum 1 minute
Whisk (9)	For whipping cream, beaten egg whites, puddings; for whipping sauces, sponge cake dough and other fluffy, foamy foods, omelet dough, mayonnaise.	Steplessly selectable	Maximum speed. It is not adjustable.	Maximum 4 minutes

## Assembly / Disassembly

For assembly, also refer to the figures on page 3.

### Attach the Blending Rod (Fig. A)

1. Place the motor housing (5) on the blending rod (6).


2. Turn the motor housing clockwise as far as it will go. The symbols ▼ and  must be on top of each other. Check that they are firmly seated.

### Remove Blending Rod

Remove the blending rod from the motor housing by briefly turning it anticlockwise.

#### Whisk (Fig. B)

If you want to use the whisk (9), replace the blending rod with the adapter (8).

1. Engage the whisk in the drive shaft of the adapter by applying moderate pressure.
2. Place the motor housing (5) on the adapter (8).
3. Turn the motor housing clockwise as far as it will go. The symbols ▼ and  must be on top of each other. Check that they are firmly seated.

### Electrical Connection

1. Check that the mains voltage you want to use matches that of the appliance. You will find the information on the type plate.
2. Insert the mains plug into a properly installed protective contact socket.

### Operation

1. Immerse the entire blender head in the foodstuff or beverage. Hold the appliance vertically. This way you avoid splashes.
2. Hold the handle with one hand in such a way that you can press the push button (3). On the other hand, you can adjust the speed with the controller (2).
  - You achieve a pulse mode by pressing and releasing the push button in intervals.
  - Press the TURBO button to reach the highest speed.

### End Operation

- The appliance switches off when you release the push button.



#### **WARNING: Risk of Injury!**

The motor continues to run briefly. Wait for the mounting accessory to come to a standstill.

- Pull out the mains plug from the socket after use.

### Cleaning



#### **WARNING:**

- Always disconnect the mains plug from the socket before cleaning.
- Never immerse the motor housing in water for cleaning. It could cause an electric shock or fire.
- The blades of the blending rod are very sharp. Be especially careful.



## CAUTION:

- Do not use a wire brush or other abrasive objects.
- Do not use sharp or abrasive cleaning agents.
- Do not immerse the gear unit of the whisk (8) in the water! Only wipe it with a damp cloth.
- To pre-clean, the accessories, fill a container with hot water and operate the whisk and/or blending rod in it as described under "Operation".
- For thorough cleaning, separate the assembled accessories from the motor housing as described under "Assembly / Disassembly".
- The housing can be wiped with a slightly damp cloth.

### Cleaning in Rinsing Water

You can clean the blending rod (6) and the whisk (9) in warm rinse water with a little hand dishwashing liquid. Dry the accessories well afterward.

### Cleaning in the Dishwasher

The blending rod (6) and whisk (9) are dishwashers safe.

Make sure that the detergents (detergent, salt and rinse aid) do not overdose.

### Storage

- Clean the appliance as described and allow it to dry completely.
- You can hang the appliance on the hanging loop (1) after cleaning.
- We recommend storing the appliance in its original packaging if you do not intend to use it for a long period of time.
- Always store the appliance out of the reach of children in a well-ventilated and dry place.

### Technical Data

Model:.....C-SMS 4001

Power supply:..... 220 – 240 V~, 50 – 60 Hz

Power consumption: ..... 700 – 1000 W

Protection class: .....II

Net weight: ..... approx. 0.78 kg

The right to make technical and design modifications in the course of continuous product development remains reserved.

This appliance has been tested according to all applicable, current CE directives and built according to the latest safety regulations.

### Disposal

#### Meaning of the "Dustbin" Symbol



Protect our environment: do not dispose of electrical equipment in the domestic waste.

Please return any electrical equipment that you will no longer use to the collection points provided for their disposal.



This helps avoid the potential effects of incorrect disposal on the environment and human health.

This will contribute to the recycling and other forms of re-utilization of electrical and electronic equipment.

Information concerning where the equipment can be disposed of can be obtained from your local authority.

Your dealer and contractual partner are also obliged to take back the old appliance free of charge.

## GARANTIEKARTE

warranty card

C-SMS 4001

24 Monate Garantie gemäß Garantieerklärung

- 24 months warranty according to warranty declaration
- date of purchase, dealer stamp, signature

# classbach®


Internet: [www.classbach.de](http://www.classbach.de)

Made in P.R.C.

Stand 12 / 2021

C-SMS4001\_IM

## Documents / Resources

 <p>classbach</p> <p>CE</p>	<p><a href="#">classbach C-SMS 4001 Stabmixer Hand Blender Set</a> [pdf] Instruction Manual</p> <p>C-SMS 4001, Stabmixer Hand Blender Set, C-SMS 4001 Stabmixer Hand Blender Set</p>
---	--