



CLAYTEK WS Series Server Racks and Server Cabinets Instruction Manual

[Home](#) » [CLAYTEK](#) » CLAYTEK WS Series Server Racks and Server Cabinets Instruction Manual 




WS Series

Contents


- [1 How to open side panel:](#)
- [2 How to close side panel:](#)
- [3 How to adjust mounting rails:](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

How to open side panel:

STEP 1: find the side with 4 screws secured the mounting posts. Unscrew two screws in the middle to release the side panel

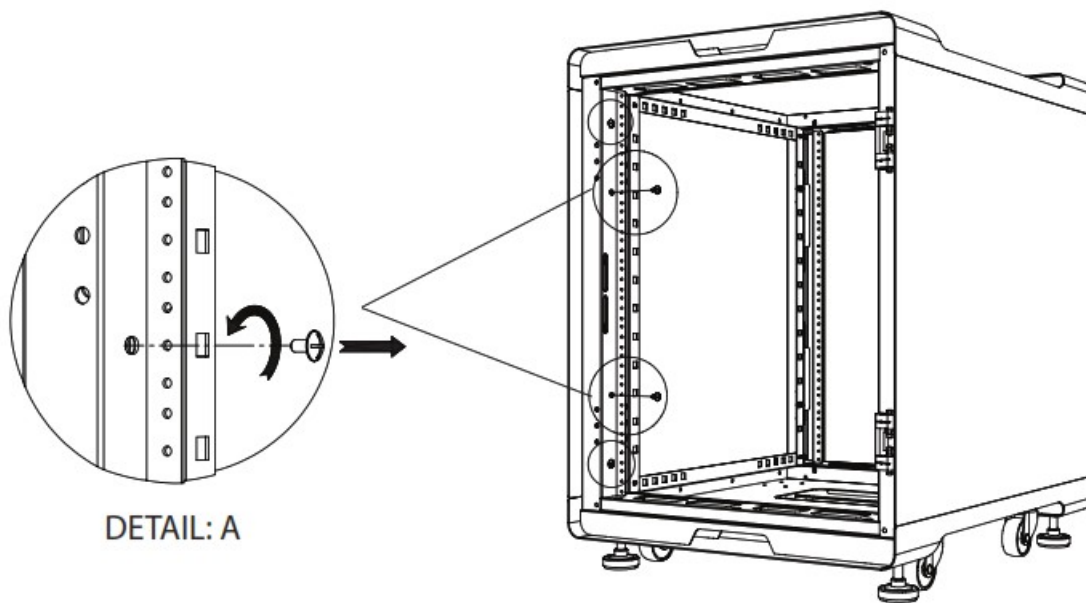


STEP 2: Swing out the side panel from the front and pull forward to completely remove it.

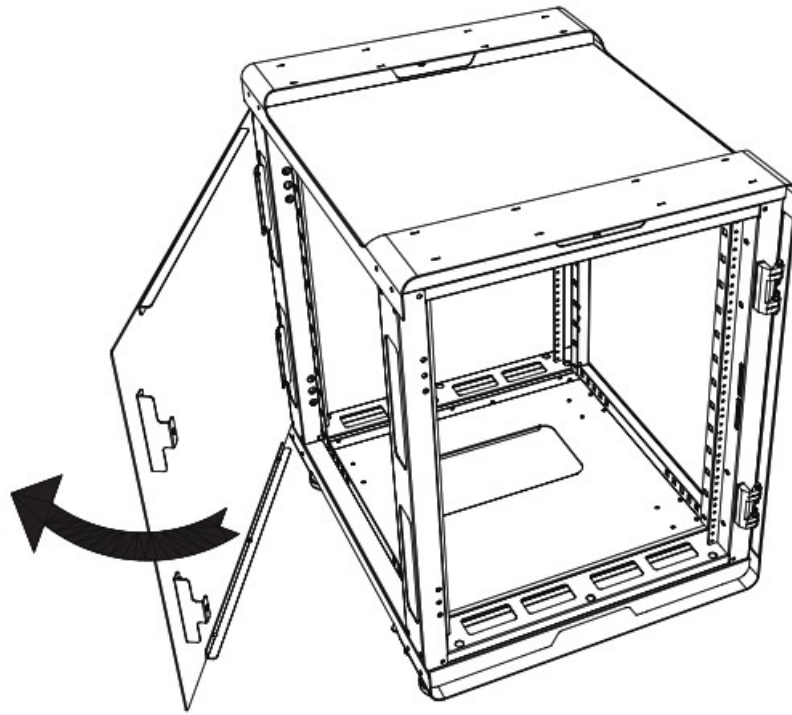


How to close side panel:

STEP 1: Align the side panel to the side of the chassis then swing back to close

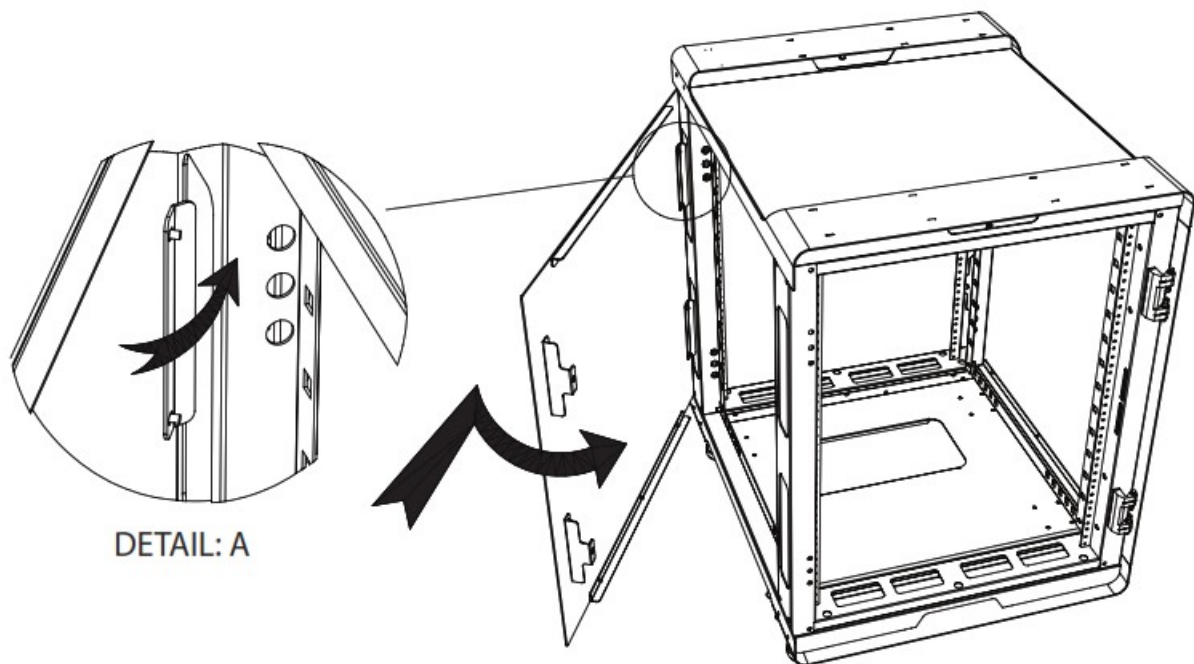

STEP 2: Swing out the side panel from the front and pull forward to completely remove it.

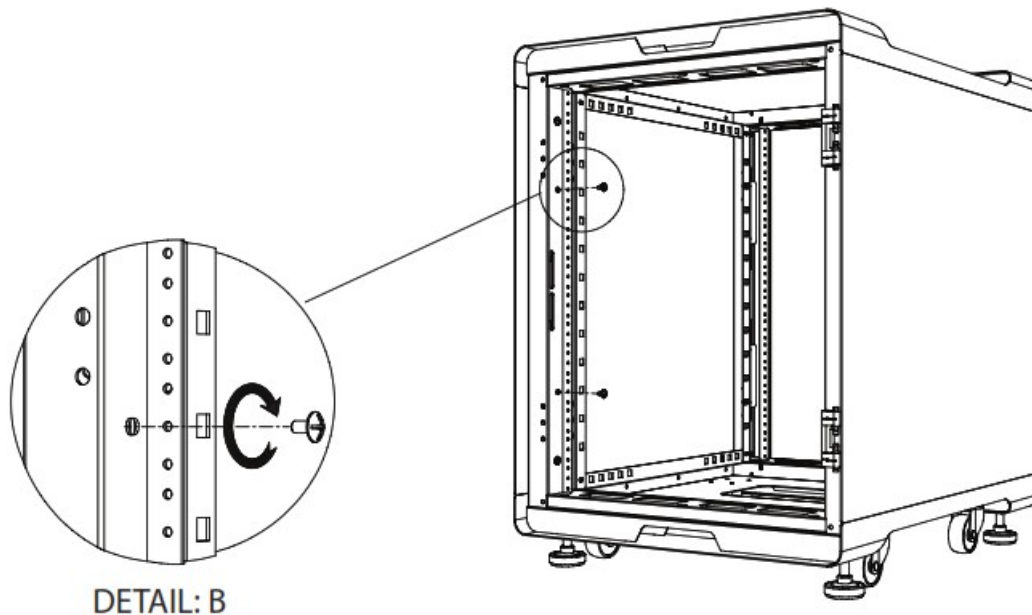


How to adjust mounting rails:


STEP 1: Unscrew four screws to loosen the vertical post (repeat for all four posts)

STEP 2: Relocate the M5 cage nuts. Snap the cage nut from outside of the chassis to the horizontal post where you desire.

STEP 3: Repeat step 2 for all 8 corners.


STEP 4: Flip and align the vertical post from step 1 behind the M5 cage nut then screws tight to secure the vertical post(repeat for all four posts)

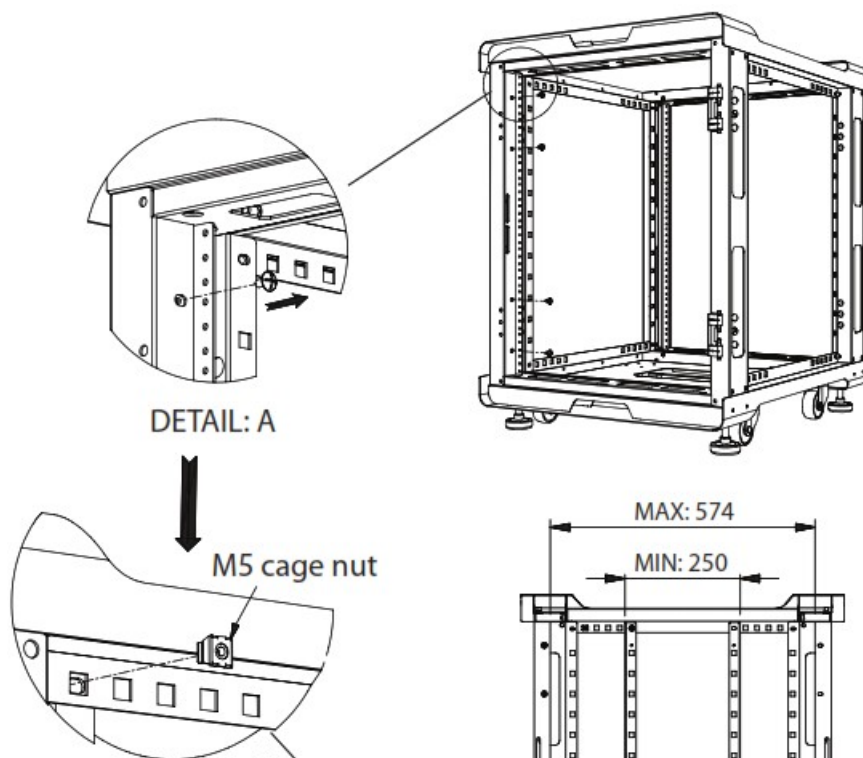

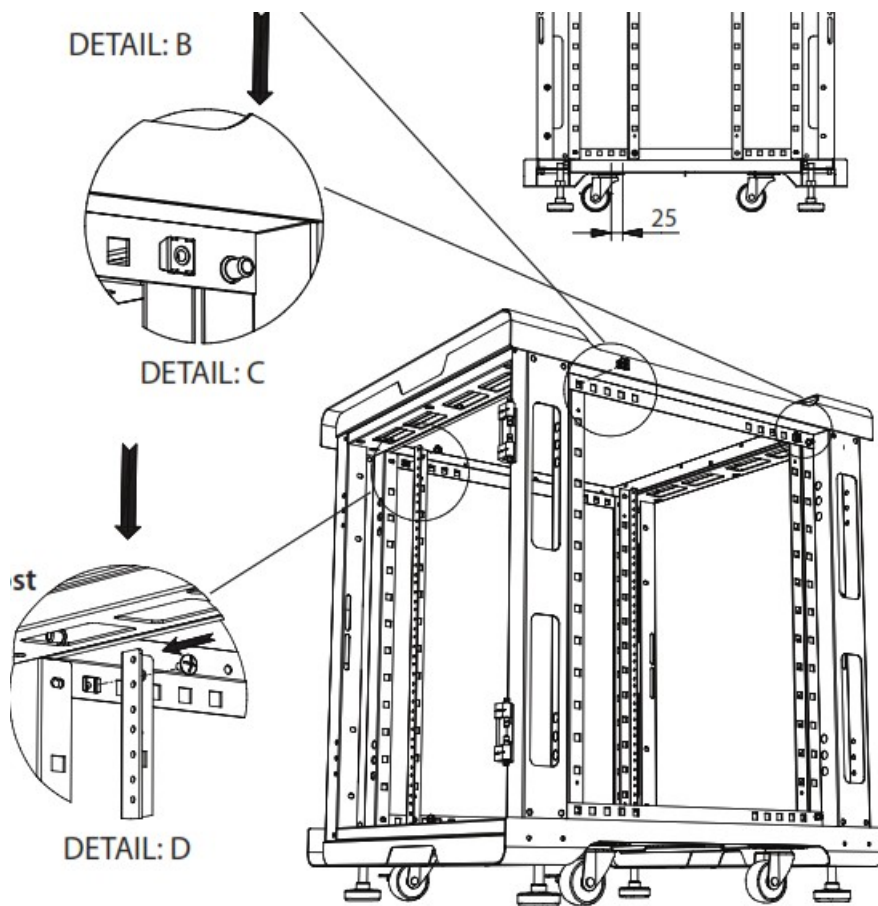

Tel: 1-888-989-1189
Fax: 1-626-301-0588
www.istarusa.com

Documents / Resources

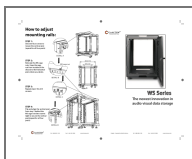

[CLAYTEK WS Series Server Racks and Server Cabinets](#) [pdf] Instruction Manual
WS Series, Server Racks and Server Cabinets, WS Series Server Racks and Server Cabinets,
Racks and Server Cabinets, Server Cabinets, Cabinets