



## CLEAN REMOTE CR3BCB Remote Control Instructions

[Home](#) » [CLEAN REMOTE](#) » CLEAN REMOTE CR3BCB Remote Control Instructions 



### Contents

- [1 BATTERY INSTALLATION](#)
- [2 TROUBLESHOOTING TV CODE SETTINGS](#)
- [3 CABLE BOX SETUP](#)
- [4 Documents / Resources](#)

### BATTERY INSTALLATION

1. Looking at the keypad, slide the dark lens cover away from you (STEP 1) and lift the lid from the back (STEP 2).



2. Install 2 AAA batteries.

Make sure the + and – symbols on the metal hinge of the battery compartment correspond with the + and – end of each battery.



3. With the keypad facing away from you, close the cover by gently pressing it down (STEP 1) and sliding it until it aligns with the front (keypad) of the device (STEP 2).



4. Test The Remote by pressing the power button.

The LED should light up, indicating the batteries are in correctly. If the LED fails to light up, the batteries are either incorrectly inserted or dead.

**Notice:**

The optional screw for the battery compartment is taped to the box lid. Take care not to discard with packaging.

**No Setup required for ANY Samsung, LG or RCA\* TV's**  
**FOR ALL OTHER TV BRANDS, FOLLOW THE ONE-TOUCH SETUP INSTRUCTIONS BELOW**

\*RCA Commercial TVs Only

With the TV ON, point the remote at the TV's front panel. (Note: For best results, stand at least 5 feet from the TV) Press and firmly hold down the SETUP button. Do not release. The LED on the remote will blink once and then after 7 seconds begin searching for your TV's code. The LED on the remote will blink every few seconds as it searches. The moment your TV shuts OFF, release the SETUP button to lock in the code.

#### TESTING THE REMOTE:

TV Only	Test power, volume, and channel functions. If all work correctly, setup is complete. If not, you may not have an exact code match for your TV model. Repeat the search process (above) to advance to the next code for your TV brand and retest the remote.
TV + Cable Box	Test power and volume functions, DO NOT CHANGE CHANNELS. If these functions operate correctly, please turn to Page 2.

#### TROUBLESHOOTING TV CODE SETTINGS

Important: If you accidentally passed the code for your TV model or intend to use the remote on a different TV brand, RESET the remote and then follow the one-touch setup instructions above.

RESET: Press and hold the SETUP and CC buttons down simultaneously until the LED on the remote blinks 3 times, then release both buttons. Your remote is now reset.



You must complete the TV setup before proceeding (see page 1).

#### CABLE BOX SETUP

1. Start with the cable box ON. Press and Hold Down the SETUP and ENTER buttons on the remote at the same time until the LED light remains ON.
2. Enter the three-digit direct access number for your brand from the list below. The LED light will then turn off, confirming the entry.

#### Now Test The Remote

Point the remote toward the Cable Box and TV. Try the CH+ and CH- buttons as well as the channel numbers. If the channels change correctly, make sure VOL+, VOL-, and TV power (ON and OFF) work. If they do, you are done. If not, repeat these steps with all the access numbers listed for your brand before trying the numbers listed as Other.

**NOTE:** If your cable box has a power button, use the CBL button on your Clean Remote to power it ON or OFF.

Comcast / Mediacom / Xfinity	300				Cisco / Scientific Atlantic	347	302	300	
COX / Evolution / Midcontinent (MIDCO)	325	305	356		Guest-Tek	334	352		
BrightHouse / Spectrum / Charter / Time Warner / Premier	302	305			nStream	327			
Cable One	323				Echostar / Hughes / Humax / Samsung	335	337		
Amino	324	340	345	346	NXTV	338			
Verizon / Frontier	301				Exterity	348			
Pace	337	345	301	302	Entone	350	346		
Aceso	330				Roomlinx	351			
ADB / Arris / Motorola	345	346	301	300	Digitech	331			
					Innvue	332			
					PBTV	328			
					Moviebeam	326	353		
<b>Other:</b>	303	304	306	307	308	309	310	311	
	312	313	314	315	316	317	318	319	
	320	321	322	339	340	341	349	354	

**Hint: If your cable provider is not listed, please search by the manufacturer of your cable box**

Cable Box Code Search: If you could not find the correct direct access number for your cable box, please try this: Press and firmly hold down the \* button while pointing the remote at the cable box (not the TV). The LED will blink once and then, after 10 seconds, will start the code search. The remote's LED will continue to blink every few seconds. When the cable box turns off, immediately release the button, and the code automatically locks in. Now, turn the CABLE box on by pressing the CBL button on the remote once (Not the TV power button or the \* button). Next, test the channel up and down and the channel numbers. If the channels change correctly, make sure volume and TV power on and off operate. If they do, you're done. If not, repeat this step.

**Reset remote to work TV only, without a cable box**

If you've already set up the remote to work both a TV and a Cable Box and now wish to only operate the TV: Hold down the remote's \* button and SETUP button together until the remote's LED blinks 3 times. The remote will now only operate your TV.

**Important:** If you think you missed the code or you wish to use the remote on a different brand of TV, see TROUBLESHOOTING at the bottom of page 1.



Copyright© 2022, Starlight Electronics LLC, Command In Hand Inc.  
rev.08-09-2022



## [CLEAN REMOTE CR3BCB Remote Control](#) [pdf] Instructions

CR1R, CR3BCB, CR3BCB Remote Control, CR3BCB, Remote Control, Control, Remote