



CLEAN REMOTE CR4-2 Remote Control Instructions

[Home](#) » [CLEAN REMOTE](#) » CLEAN REMOTE CR4-2 Remote Control Instructions 

Contents

- [1 CLEAN REMOTE CR4-2 Remote Control](#)
- [2 Product Information](#)
- [3 Battery Installation](#)
- [4 Product Usage Instructions](#)
- [5 Battery Installation](#)
- [6 Philips TV Tips](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



CLEAN REMOTE CR4-2 Remote Control



Product Information

The CR4-2 and CR4B-2 are remote controls designed for use with Philips, LG, Samsung, and RCA TV models. These remote controls require 2 AAA batteries for operation.

Battery Installation

1. With the keypad facing away from you, slide the dark lens cover away from you (STEP 1) and lift the lid from the back (STEP 2).
2. Install 2 AAA batteries. Ensure that the + and – symbols on the metal hinge of the battery compartment correspond with the + and – end of each battery.
3. Close the cover by gently pressing it down (STEP 1) and sliding it until it aligns with the front (keypad) of the device (STEP 2).

Note: The optional screw for the battery compartment is taped to the (blue) box's lid.

Product Usage Instructions

Testing Battery Installation:

1. Press the power button on the remote control.
2. The LED should light up, indicating correct battery installation.
3. If the LED fails to light up, check if the batteries are incorrectly inserted or dead.

Operating Your Philips Commercial TV:

Using the Clean Remote CR4-2 and CR4B-2, operating your Philips Commercial TV is effortless. No setup is required; simply install batteries.

Did You Know?

Your Philips TV can power on to a TV Channel or the Home Screen.

Note: The CR4-2 and CR4B-2 have a dedicated

- INPUT button, unlike the original Philips remote. When pressed, the
- INPUT button will take you to the home screen, where you can access the TV's inputs via the Channel Listing function.

INSTRUCTIONS FOR CR4-2 and CR4B-2

***Philips, LG, Samsung and *RCA TV Remote Control**

Battery Installation



1. Looking at the keypad, slide the dark lens cover away from you (STEP 1) and lift the lid from the back (STEP 2).



2. Install 2 AAA batteries. Make sure the + and – symbols on the metal hinge of the battery compartment correspond with the + and – end of each battery.



3. With the keypad facing away from you, close the cover by gently pressing it down (STEP 1) and sliding it until it aligns with the front (keypad) of the device (STEP 2).
4. Test the remote by pressing the power button. The LED should light up, indicating the batteries are in correctly. If the LED fails to light up, the batteries are either incorrectly inserted or dead.

Important:

The optional screw for the battery compartment is taped to the (blue) boxes lid.


The Remote Is Now Ready To Operate ANY *Philips, LG, Samsung or *RCA TV
*RCA & *Philips Hospitality TVs

Philips TV Tips

Operating your Philips Commercial TV with the Clean Remote CR4-2 and CR4B-2 is effortless. All of the TV's functions can be accessed instantly without any setup required; simply install batteries.

Did you know your Philips TV can power on to a TV Channel or the Home Screen?
The following options may be helpful but are not required: Your TV's home screen serves as the central hub for many TV features. By default, the Philips TV powers ON to this screen, providing guests with easy access to popular streaming apps like NETFLIX and YouTube, as well as casting. However, if your property does not offer these smart features, you can adjust the "Switch On Settings" so that the TV turns ON and displays regular TV channels instead. For more information on changing your TV's "Switch On Settings" contact your Philips Dealer or visit the FAQ page on cleanremote.com. Regardless of the setting you choose, launching TV, streaming, and casting options can be done from the home screen. Note: The CR4-2 and CR4B-2 feature a dedicated INPUT button, unlike the original Philips remote. When pressed, the INPUT button will take you to the home screen, where you can access the TV's INPUTS via the Channel Listing function.
Copyright © 2023, Starlight Electronics LLC, Command In Hand Inc. rev.3-23-2023

Documents / Resources



[CLEAN REMOTE CR4-2 Remote Control](#) [pdf] Instructions
CR4-2, CR4B-2, CR4-2 Remote Control, Remote Control

References

-  [Clean Remote](#)