



CLEAN REMOTE CRKC1 Replacement for LG Keychain Remote Instructions

[Home](#) » [CLEAN REMOTE](#) » CLEAN REMOTE CRKC1 Replacement for LG Keychain Remote Instructions 

Contents

- [1 CLEAN REMOTE CRKC1 Replacement for LG Keychain Remote](#)
- [2 Clean Re1note](#)
- [3 OVERVIEW](#)
- [4 Documents / Resources](#)



CLEAN REMOTE CRKC1 Replacement for LG Keychain Remote



Clean Re1note

CRKCI Instructions Compatible with LG TVs with BED 1, 2, 3, and 4 functions

Important:

- Refer to your TV's owner's manual for setting the BED Number on your TV
- The CRKCI remote control is preset for BED 2 code

Install 2 AAA batteries, see battery compartment for proper battery alignment.

How to change the BED Number code on the CRKCI remote control:

The BED selector Switch is located inside the battery compartment, at the bottom of the remote.

Note: Tilting the remote slightly will make it easier to access the Switch.

Using a paperclip or similar device gently slide the Switch to the TV's BED Number setting (BED 1, 2, 3 or 4). The remote will then transmit the selected BED Number code.

Replaces: LG 124-213-10, AKB73055503, AKB73075301 and 1919290191

OVERVIEW



Copyright©2020, Stsr1Qht Electronics UC. Commsncl In Hsincl Inc.

Documents / Resources



[CLEAN REMOTE CRKC1 Replacement for LG Keychain Remote](#) [pdf] Instructions
CRKC1 Replacement for LG Keychain Remote, CRKC1, Replacement for LG Keychain Remote
, LG Keychain Remote, Keychain Remote, Remote