

CLEANFIX 214578 Timer Instructions

[Home](#) » [CLEANFIX](#) » CLEANFIX 214578 Timer Instructions



Contents [[hide](#)

[1 Work instructions:](#)

[2 Documents /
Resources](#)

[2.1 References](#)

[3 Related Posts](#)






Work instructions:




Replace timer on Cleanfix control unit

In addition to this manual you will find a video tutorial on our website at:

<https://cleanfix.org/en/service/instructions-replace-timer>

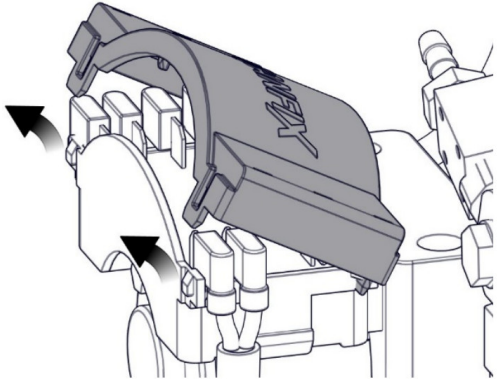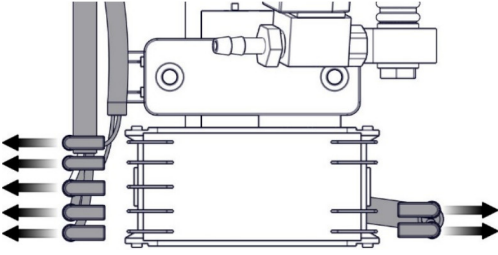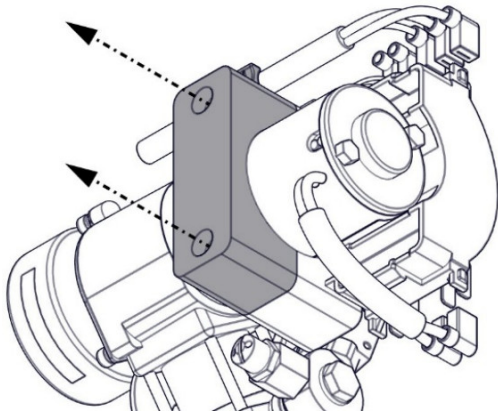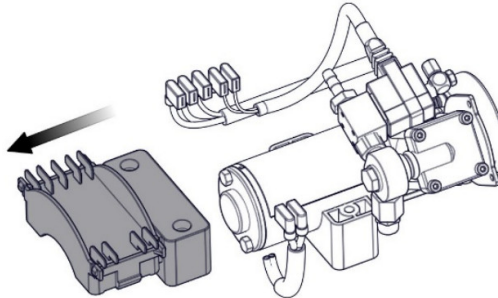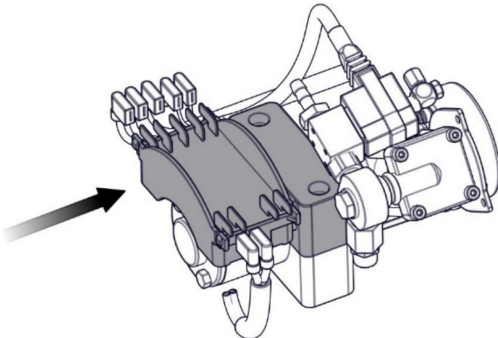

| | |
|---|--|
|  | <p>1. Remove the Cleanfix cover.</p> |
|  | <p>2. Remove the terminals from the plugs with a clamping pliers. 3. Cut off the cable tie with a side cutter.</p> |
|  | <p>4. Unscrew nut and screws of the rear timer housing.</p> |
|  | <p>5. Remove and dispose the front timer housing.</p> |
|  | <p>6. Replace the new timer front housing.</p> |
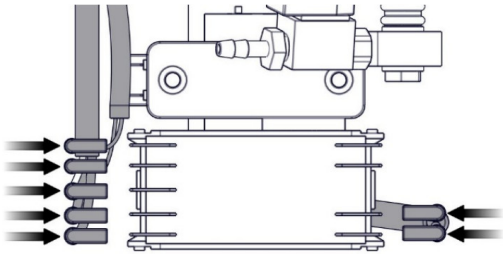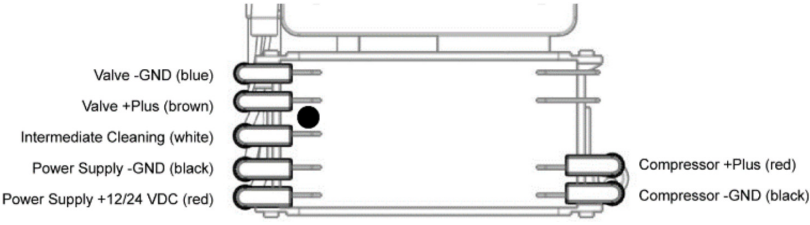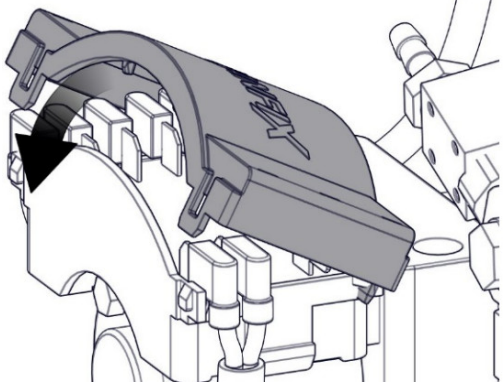
| | |
|---|--|
|  | <p>7. Connect the terminals to the new plugs again.</p>  <p>Valve -GND (blue) Valve +Plus (brown) Intermediate Cleaning (white) Power Supply -GND (black) Power Supply +12/24 VDC (red)</p> <p>Compressor +Plus (red) Compressor -GND (black)</p> <p>8. Tie the electronic cables with cable ties 9. Shorten excess lengths of cable ties.</p> |
|  | <p>10. Clip the Cleanfix cover back on.</p> |

CLEANFIX®

Creator: TW


Document: 214578

Version: 3

Release date: 15.10.2020

Article: Replace timer on Cleanfix control unit

Documents / Resources
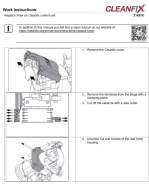
| | |
|---|---|
|  | <p>CLEANFIX 214578 Timer [pdf] Instructions 214578 Timer, 214578, Timer</p> |
|---|---|

References

- [X instructions-replace-timer](#)