



cleanmaxx 00519 Ironing and Drying Kit Instruction Manual

[Home](#) » [Cleanmaxx](#) » cleanmaxx 00519 Ironing and Drying Kit Instruction Manual 

cleanmaxx 00519 Ironing and Drying Kit Instruction Manual



Contents

- 1 Explanation of the Symbols
- 2 Safety Instructions
- 3 Items Supplied
- 4 Device Overview
- 5 Before Initial Use
 - 5.1 Assembly
- 6 Use
- 7 Cleaning and Storage
- 8 Troubleshooting
- 9 Technical Data
- 10 Disposal
- 11 Customer Service /
Importer
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts

Explanation of the Symbols

Danger symbols: These symbols indicate risks of injury (e.g. from electricity or fire). Read through the associated safety instructions carefully and follow them.



Caution: hot surfaces!



Protection class II



Read the instructions before use!



Supplementary information



DANGER Warns of serious injuries and danger to life.



WARNING

Warns of possible serious injuries and danger to life.



CAUTION Warns of slight to moderate injuries.

NOTICE Warns of damage to property.

Dear Customer,

We are delighted that you have chosen this presser.

Before using the device for the first time, please read the instructions carefully and keep them for future reference. If the device is given to someone else, these instructions should also be handed over with it. They form an integral part of the device.

The manufacturer and importer do not accept any liability if the information in these instructions is not complied with.

If you have any questions about the device and about spare parts/accessories, contact the customer service department via our website:

Intended Use

- This device is intended to be used to dry and press textiles, for example blouses, shirts and trousers. Delicate textiles such as wool or similar fabrics must not be pressed on the presser. Always follow the care labels for the textiles!

WARNING: This device is intended only for drying textiles washed in water.

- The device is for personal domestic use only and is not intended for commercial applications.
- The device should only be used as described in these instructions. Any other use is deemed to be improper.
- The following are excluded from the warranty: all defects caused by improper handling, damage or unauthorized attempts at repair. This also applies to normal wear and tear.

Safety Instructions



WARNING: Read all safety notices, instructions, illustrations and technical data provided with this device. Failure to follow the safety notices and instructions may result in electric shock, fire and / or injuries.

- This device can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental abilities or lack of experience and / or knowledge if they have been given supervision or instruction concerning use of the device in a safe way and understand the hazards involved.
- Children must not play with the device.
- Cleaning and user maintenance may not be carried out by children without supervision.
- Children younger than 8 years of age and animals must be kept away from the device and the connecting cable.



CAUTION: hot surfaces! The motor unit / telescopic rod will become hot during use. You should therefore not touch it during or shortly after use.

- The device must always be switched off and disconnected from the mains power when it is not being used and before assembling, disassembling or cleaning the device.
- Do not make any modifications to the device. If the mains cable of this device is damaged, it must be replaced by the manufacturer, its customer service department or a similarly qualified person (e.g. specialist workshop) in order to avoid any hazards.
- Allow the device to cool down completely before it is cleaned and stored away.



DANGER – Danger of Electric Shock

- Use the device only in closed rooms.
- Do not use the device in rooms with high humidity.
- Never immerse the device, mains cable or mains plug in water or other liquids and ensure that they cannot fall into water or become wet.
- Should the device fall into water, switch off the power supply immediately. Do not attempt to pull it out of the

water while it is still connected to the mains power!

- Never touch the device, mains cable or mains plug with wet hands when these components are connected to the mains power.
- It is only allowed to use the device when the drip protection is attached!
- Steam may rise up during operation. For this reason, do not place the device under other electronic devices.



WARNING – Danger of Injury

- Danger of Suffocation! Keep children and animals away from the packaging material.
- Danger of tripping! Make sure that the connected mains cable does not present a trip hazard.
- The device must not be moved during use.



WARNING – Danger of Fire

- Do not use the device in rooms containing easily ignitable dust or poisonous and explosive fumes.
- Do not operate the device in the vicinity of combustible material.
- Do not connect the device along with other consumers (with a high wattage) to a multiple socket in order to prevent overloading and a possible short circuit (fire).
- In the event of a fire: Do not extinguish with water! Smother the flames with a fireproof blanket or a suitable fire extinguisher.

NOTICE – Risk of Damage to Material and Property

- Only connect the device to a socket with safety contacts that is properly installed and matches the technical data of the device. The socket must also be readily accessible after connection so that the connection to the mains can quickly be isolated.
- Always switch off the device first before the mains plug is pulled out of the plug socket.
- Do not use the device in conjunction with extension cables.
- Never cover up the ventilation slots and do not insert any objects into them.
- Lay the mains cable in such a way that it does not become squashed or bent and does not come into contact with hot surfaces (also applies to the hot surfaces of the device!).
- Switch off the device and pull the mains plug out of the plug socket if an error occurs during operation, when there is a power cut or before a thunderstorm.
- Never pull or carry the device by the mains cable. When you pull it out of the plug socket, always pull on the mains plug and never the mains cable!
- Protect the device from other heat sources, naked flames, sub-zero temperatures, persistent moisture, wet conditions and impacts.
- Use only original spare parts from the manufacturer.

Items Supplied


- 1 x motor unit
- 1 x telescopic rod with drip protection (long)

- 1 x rod with drip protection (short)
- 2 x rods
- 1 x hanger
- 1 x Y tube
- 1 x nylon balloon (for shirts, blouses)
- 1 x nylon balloon (for trousers)
- 5 x clamps with integrated weight
- 1 x manual

Check the items supplied for completeness (see the “Items Supplied and Device Overview” chapter) and possible transport damage. If the device, the mains plug or the mains cable does have damage, do not use the device(!), but contact our customer service department.

Device Overview

1. Hanger
2. Telescopic rod
3. Drip protection (premounted on the telescopic rod)
4. Fan
5. Motor unit
6. Ventilation slots
7. Timer (5 – 30 minutes)
8. Mounting flange
9. Clip (for adjusting the height)
10. Collar section

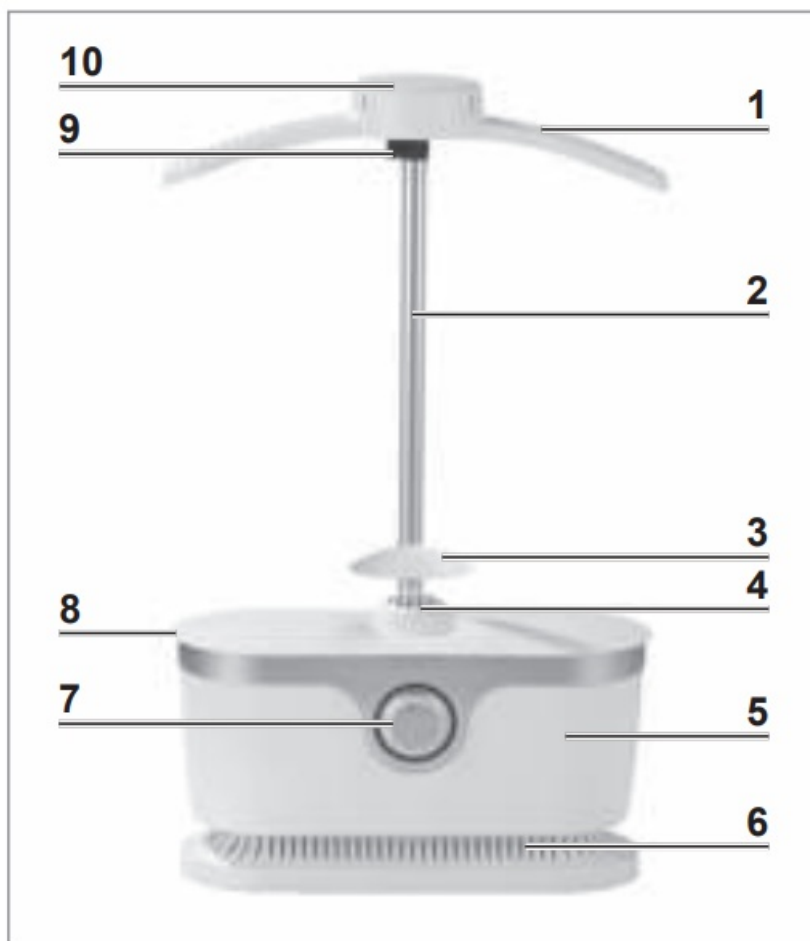

- 11. Y tube
- 12. Nylon balloon
- 13. Rods



Before Initial Use

 **PLEASE NOTE!**

- Never remove the rating plate and any possible warnings!

Before using the device, remove all packaging materials and any labels that may be on the device and are used for protection during transportation or for advertising.

Assembly

Presser for blouses and shirts

1. Plug the telescopic rod (2) into the recess on the top of the motor unit (5).
2. Place the hanger (1) onto the telescopic rod. When you do this, make sure that the slight bend in the hanger points forwards. The hanger must be heard to engage on the telescopic rod.

The drip protection (3) must be located directly above the fan (4). It prevents any water that may drip down from being able to get into the fan.

3. Attach the nylon balloon:

- Pull it over the hanger. When you do this, make sure that the side with the hole line points forwards.
- Pull the small elastic cord at the top over the collar section (10) on the hanger.
- Pull the large elastic cord at the bottom over the mounting flange (8).

The device is disassembled in the reverse order.

Presser for trousers

1. Insert the rod with the drip protection into the recess which is provided for it on the main device.
2. Fit the Y tube (11) on the rod with the drip protection.
3. Insert the two rods (13) into the Y tube.
4. Attach the nylon balloon (12):
 - draw it over the two rods.
 - draw the elastic over the mounting flange on the main device.

The device is disassembled in the reverse order.



Use

PLEASE NOTE!

- Always place the device with clear space above it and on all sides on a dry, flat, solid and heat-resistant surface.
- Be aware that the clamps with integrated weight may likewise become hot during use.
Allow them to cool down suitably before they are detached from the item of clothing.
It is essential that you follow the care labels for the textiles to be dried!

Presser for blouses and shirts

1. Set the height you want. To do this, open the clip (9), pull out the telescopic rod (2) and then close the clip again.



2. If you have not already done so, pull on the nylon balloon (see the “Before Initial Use” chapter, “Assembly” section).



The nylon balloon should sit immediately below the mounting flange (8) so that it can fully inflate.

3. Pull the garment which is to be pressed over the nylon balloon and the hanger (1) and do up the buttons if necessary. Make sure that.
 - the collar is fitted over the collar section (10) on the hanger,
 - any button strip is over the hole line on the nylon balloon,

- the arms of the nylon balloon fit properly in the sleeves of the garment and are not twisted or scrunched up,
- all buttons on the garment (including on the sleeves) are done up.



4. Spread the clamps along the bottom of the garment (at the front and back in each case on the outsides and in the middle on the button strip at the front) so that it is weighed down and will not go out of shape when the nylon balloon is inflated
5. Insert the mains plug into an easily accessible socket.
6. Turn the timer (7) clockwise and set it to the length of time you want. Each LED light represents 5 minutes.
7. Once the nylon balloon has inflated, straighten out the garment and smooth it down again.
8. When the set time elapses, the device switches off automatically. The drying / pressing process can be interrupted at any time by turning the timer to the starting position.
9. Remove the garment from the nylon balloon and hanger (1).
10. Pull the mains plug out of the plug socket and allow the device to cool down completely.

Presser for trousers

1. If you have not yet done so, attach the nylon balloon (2) (see the “Assembly” chapter).



The nylon balloon should sit immediately below the mounting flange so that it can fully inflate.

2. Pull the garment which is to be pressed over the nylon balloon and do up the zip or buttons if necessary. Make sure that
 - the legs of the nylon balloon fit properly into the legs of the trousers and are not twisted or scrunched up,
 - all buttons on the garment (including the legs) are done up.
3. Spread the clamps along the bottom of the garment (at the front and back in each case on the outsides) so that it is weighed down and will not go out of shape when the nylon balloon is inflated.
4. Insert the mains plug into an easily accessible socket.
5. Turn the timer (7) clockwise and set it to the length of time you want. Each LED light represents 5 minutes.
6. Once the nylon balloon has inflated, straighten out the garment and smooth it down again.
7. Remove the garment from the nylon balloon after the completion of the drying/pressing process.
8. Pull the mains plug out of the plug socket and allow the device to cool down completely.

b

- The device is intended primarily for machine-spun laundry! If hand-washed or non machine-spun laundry is to be pressed, first allow it to dry out a little first.
- The drying / pressing process takes around 10 minutes for a spun-dried shirt or trousers. However, the length of time can vary depending on the material and thickness of the material. We recommend that you start with a shorter time and extend it if necessary.
- The nylon balloon for blouses and shirts can be enlarged or reduced in size with the aid of the zip fasteners. For smaller sizes, the zip fasteners should be closed. For larger sizes, the zip fasteners should be opened on both sides.
- Wide-apart buttons may result in the button strip crimping slightly during pressing.
Here it is advisable to smooth down the button strip again by hand immediately after the pressing process.
- In the case of trousers with a very small waist it may not be possible to pull them over the attachment when it

has already been fitted. In this case you proceed as follows:

- push the nylon balloon (12) upwards slightly, to enable access to the rods (13),
 - remove one of the two rods from the Y tube once more (11),
 - draw the trousers over the two rods,
 - now replace the rods in the Y tube and
 - draw the nylon balloon over the mounting flange on the main device again.
- After the drying / pressing process any creases need to be ironed out using a normal iron.

Cleaning and Storage



PLEASE NOTE!

- Do not use any corrosive or abrasive cleaning agents or cleaning pads to clean the device. These can damage the surface.
- Clean the device and the nylon balloons if necessary with a slightly damp cloth and a little mild detergent if required. Then wipe down fully with a dry cloth.
- Allow all parts to dry completely before you put them away.
- Store the device in a clean, dry place that is protected from sunlight and is not accessible to children and animals.

Troubleshooting

If the device does not work properly, check whether you are able to rectify the problem yourself. If the problem cannot be solved with the steps that are listed, contact the customer service department.



Do not attempt to repair a defective electrical device yourself!

Problem	Possible cause / solution
The device does not work. The LEDs do not light up.	<ul style="list-style-type: none"> Is the mains plug inserted in the plug socket correctly? Correct the fit of the mains plug. Is the plug socket defective? Try another plug socket. Check the fuse of the mains connection. Is the device switched on? Set the timer (7) to a time.
Unusual noises	<ul style="list-style-type: none"> Are the ventilation slots (6) covered up or blocked? Free up the ventilation slots.
	<ul style="list-style-type: none"> Are the ventilation slots covered up or blocked? Free up the ventilation slots.
The device switches off suddenly.	<ul style="list-style-type: none"> The device has an automatic safety switch-off function. It switches off automatically if it overheats. Allow the device to cool down and switch it on again. Has the device fallen over? The device has a protective switch that is activated if the device falls over. Set the device up again and switch it back on.
	<ul style="list-style-type: none"> Has the set time elapsed? Set the timer to the time you want again.
Odour produced	<ul style="list-style-type: none"> You might notice a slight odour caused by production residues the first time you use the device. However, this is harmless and will cease as you use the device.

Technical Data

- **Article numbers:** 00519 (silver-white) 07252 (light blue)
- **Model number:** EL17001-00100
- **Voltage supply:** 220 – 240 V ~ 50 Hz
- **Power:** 1800 W
- **Protection class:** II
- **Manual ID:** Z 00519_07252 M DS V3 1218



Disposal



The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and take it to a recycling centre.




The device is governed by the European Directive 2012/19/EU on waste electrical and electronic equipment (WEEE). Do not dispose of the device as normal domestic waste, but rather in an environmentally friendly manner via an officially approved waste disposal company.

Customer Service / Importer

DS Produkte GmbH
Am Heisterbusch 1, 19258 Gallin, Germany
Tel.: +49 38851 314650
(Calls to German landlines are subject to charges. The cost varies depending on the service provider.)

All rights reserved.

Documents / Resources

 <small>00519, 07252</small> <small>Gebrauchsanleitung</small> <small>Instruction manual</small> <small>Mode d'emploi</small> <small>Handboka</small>	cleanmaxx 00519 Ironing and Drying Kit [pdf] Instruction Manual 00519, 07252, Ironing and Drying Kit
---	---

References

- [ds DS Group - Kundenservice, Kontakt, Produktinformationen](#)