



CLEVAST CL-EH01 Smart Space Heater Instruction Manual

 
 
[Home](#) » [CLEVAST](#) » CLEVAST CL-EH01 Smart Space Heater Instruction Manual 

Contents

- [1 CLEVAST CL-EH01 Smart Space Heater](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)



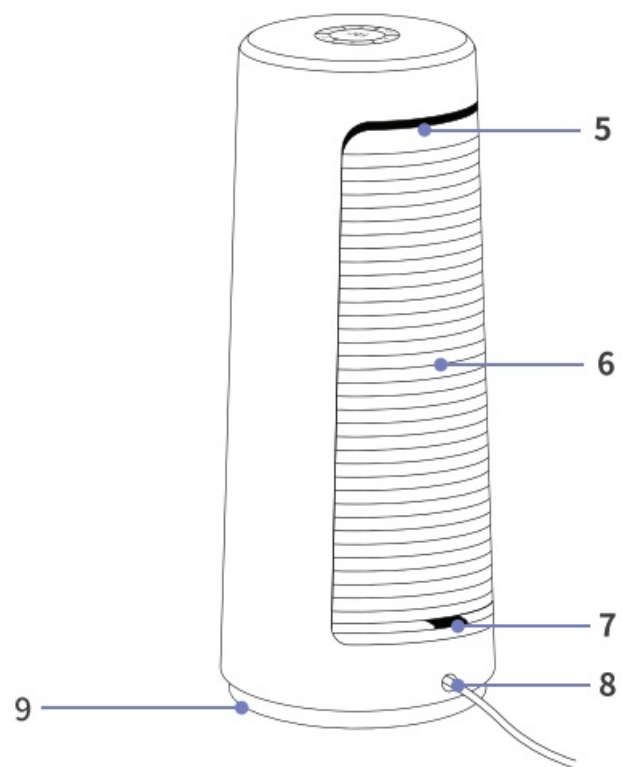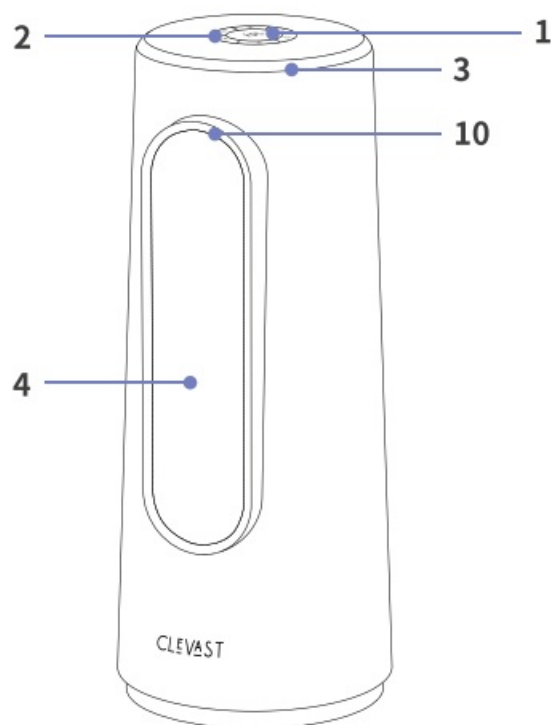

CLEVAST


CLEVAST CL-EH01 Smart Space Heater






<p>⏻</p>	<p>On/Standby key</p>	<ul style="list-style-type: none"> • The power indicator lights up (red light) when the heater is switched on. • Press (⏻) to turn the heater on, the heater on with default settings: Power indicator on red, atmosphere lamp is on, default temperature "95 ° F" & high heat level "03" on LED display. • Press (⏻) once again to turn the heater off. If the heater is operating, the fan will continue working for 20 seconds after powering off to clear any residual heat. • When the heater is on, long press (⏻) for 3-5 seconds to enter wireless pairing mode.
<p>M</p>	<p>Mode/Heat Level Settings</p>	<ul style="list-style-type: none"> • When the unit is on, press (M) on the heater to cycle through Nature (00) -Low (01) -Medium (02) -High (03) -ECO (04) modes. • When ECO Mode is turned on, the heater will adjust the working mode (High or low) automatically based on the ambient temperature. The default constant temperature range is 41°F-95°F, and can only be set up via the app. • "ECO" will light up on the display when ECO mode is selected.

	Timer Button	<ul style="list-style-type: none"> Press (🕒) to turn on the timer. Repeatedly press (🕒) to cycle through the following timers: 4H and 8H. The heater will automatically turn off when the time is up. Press (🕒) for 3 seconds on the timer. Repeatedly press (🕒) to cycle through the timer button: off-low-middle-high atmosphere lap-off.
	Temperature Adjustment	<ul style="list-style-type: none"> When the unit is on, press (—) on the heater to adjust the temperature from 95 to 41 ° F in 1 ° decrement.
	Temperature Adjustment	<ul style="list-style-type: none"> When the unit is on, press (+) on the heater to adjust the temperature from 41 to 95 ° in 1 ° increments.
	Oscillation Button	<ul style="list-style-type: none"> When the unit is on, press (↻) on the heater control to start oscillating. To stop oscillating, press (↻) again. When the unit is on, long press (↻) for 3 seconds to turn on Lock Mode. When the lock is active, buttons on the panel will not respond to presses. Long press (↻) again for 3 seconds to turn off the Lock Mode.

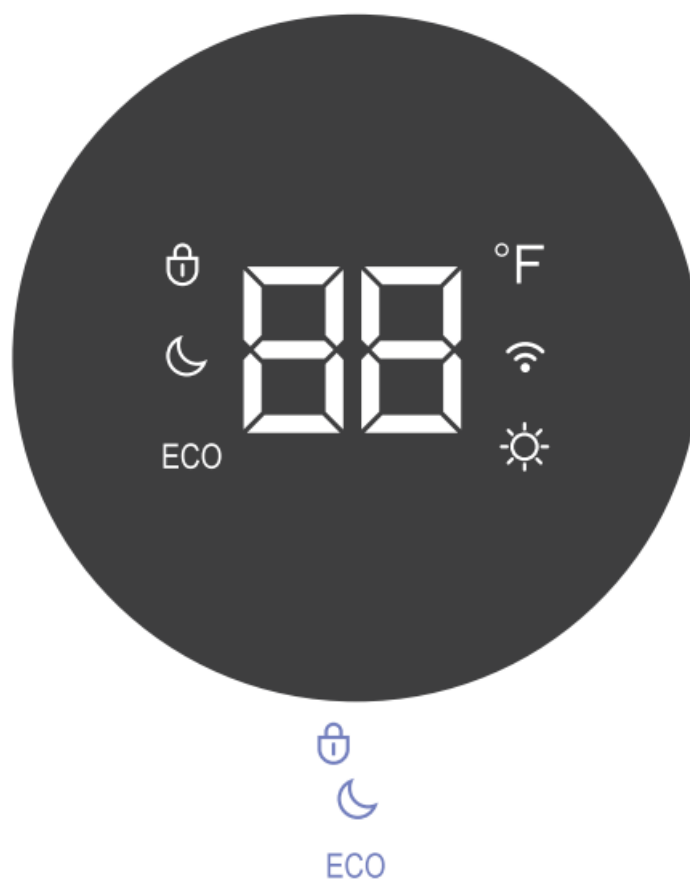 

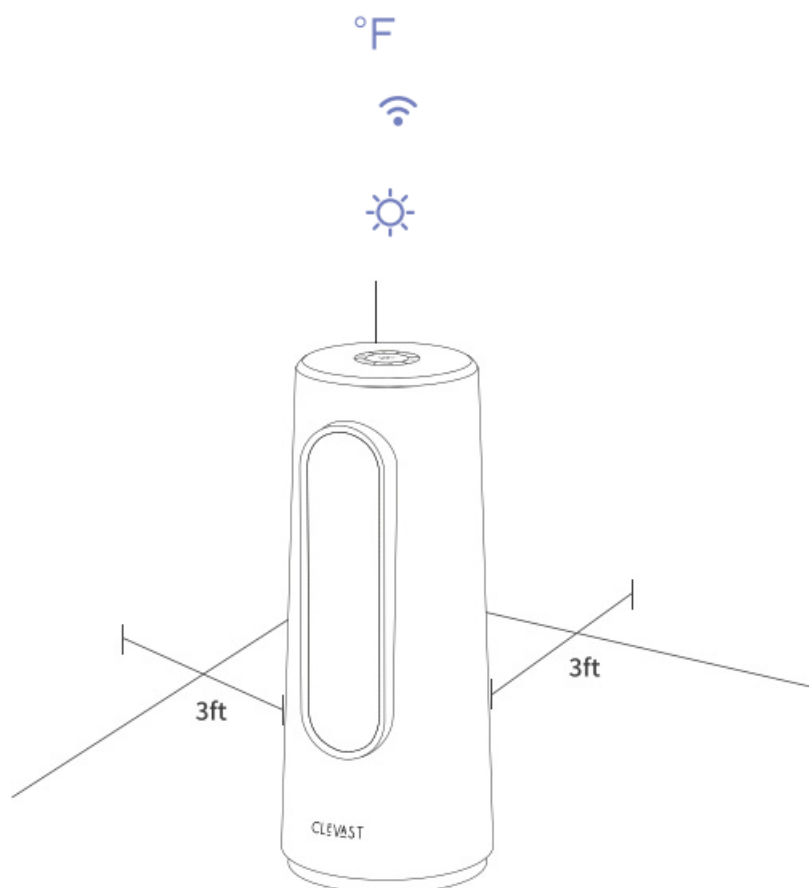 

Clevast APP



9:27



Press and hold the on/off button for 7 seconds until the wireless control indicator starts blinking.

Note: The timeliness of device distribution network is 2 minutes, overtime will lead to network distribution failure.



Add Device

Can't find your device?



9:27



Wireless Control

Please select a 2.4G wireless control in the list to help the device connect to the network

Used Network

 Yuanrui >

Other Network

 wewow168 >

 CViTec-JF >

 CViTec-JF2 >

 wewowork >

Cancel

[I Can't find my wireless control](#)

9:27



Wireless Control

Please select a 2.4G wireless control in the list to help the device connect to the network

Used Network



Yuanrui5G



 
Yuanrui

Nekteck



My wireless control does not require a password

Connect

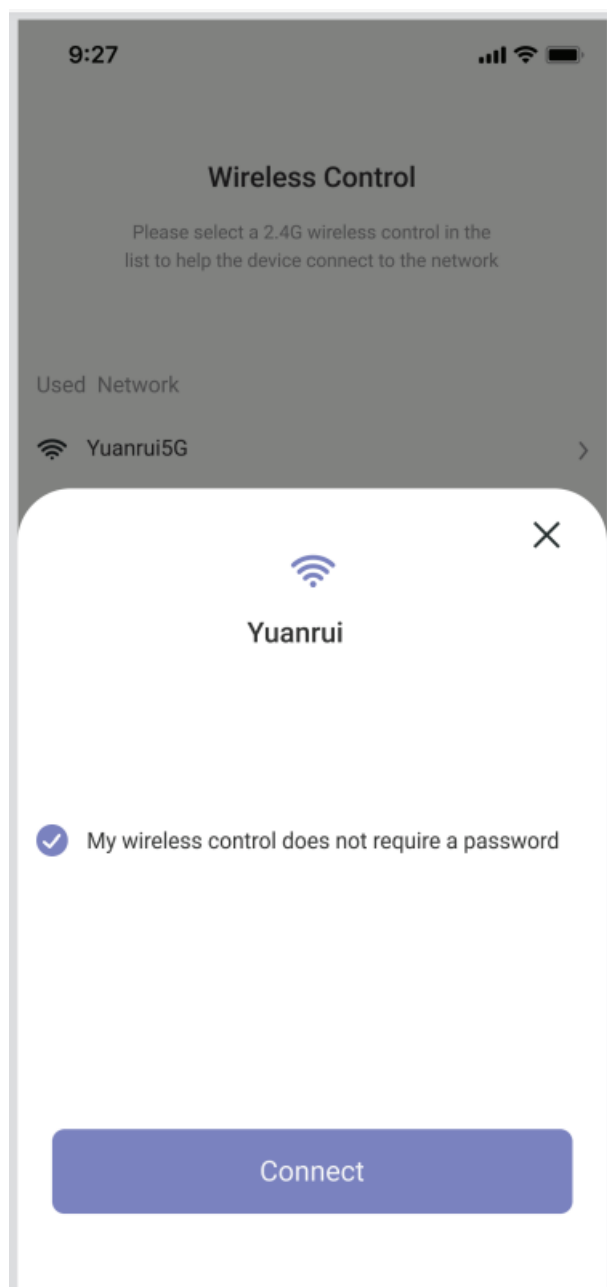

Connecting

Please do not move the device away too far, it should be as close as possible to your phone.

Connecting

Please do not move the device away too far, it should be as close as possible to your phone.

Connecting

Please do not move the device away too far, it should be as close as possible to your phone.





Connection successful

Done








Device Name

Give your device a unique name you will remember.

Device name

Save

Setting Later

	ON/OFF	<ul style="list-style-type: none"> On/Off the heater
	Oscillation Button	<ul style="list-style-type: none"> On/Off Oscillation
	Sleep Mode	<ul style="list-style-type: none"> On/Off Sleep Mode When on sleep mode, the light and the beep sound will be turned off
	Lock Mode	<ul style="list-style-type: none"> On/Off Lock Mode When the lock is active, buttons on the panel will not respond to presses
	Customs Temperature	<ul style="list-style-type: none"> Set temperature When the set temperature is reached, the heater will stop working
	Constant Temperature	<ul style="list-style-type: none"> Set constant temperature range The heater will adjust the working mode (high or low) automatically when it's over the constant temperature range you set
Light	Light Settings	<ul style="list-style-type: none"> On/Off Light Settings The level of light settings
	Timer Settings	<ul style="list-style-type: none"> Timer setting: 00-12H
Mode	Mode/Heat Level Settings	<ul style="list-style-type: none"> Set the mode on the heater: Nature(00)/Low(01)/Medium (02)/High(03)/ECO(04) modes



Documents / Resources

	<p>CLEAVAST CL-EH01 Smart Space Heater [pdf] Instruction Manual CL-EH01 Smart Space Heater, CL-EH01, Smart Space Heater, Space Heater, Heater</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)