

 
cleverio SA01 Wireless Chime User Guide

Contents

- [1 cleverio SA01 Wireless Chime](#)
- [2 Use](#)
- [3 Chime settings](#)
- [4 Safety information](#)
- [5 Specifications](#)
- [6 Troubleshooting](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

cleverio

cleverio SA01 Wireless Chime

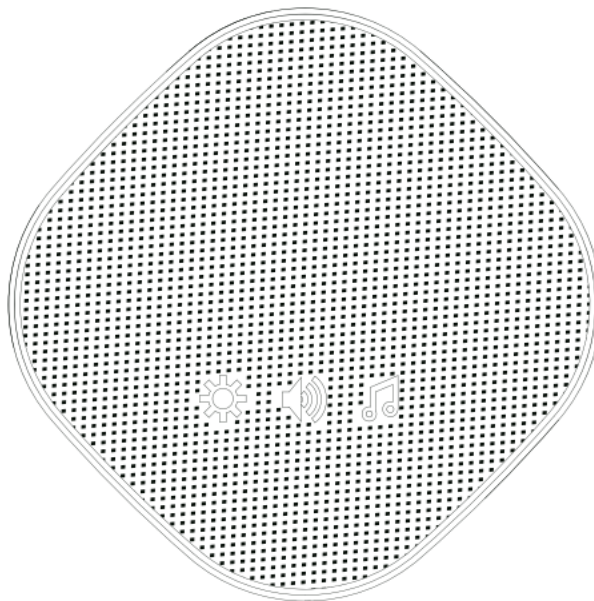


Use

Chime

1. Open the battery compartment on the back of the chime. Insert the batteries (3x AA-batteries, not incl.) into the chime, mind the polarity.
2. The chime emits a sound to indicate it's ready for pairing.
3. Install, or remove and re-install the battery into the push button (sold separately)

4. Press the push button within 2 minutes of installing the batteries into the chime to pair the units together. The chime emits a sound to confirm the pairing was successful.

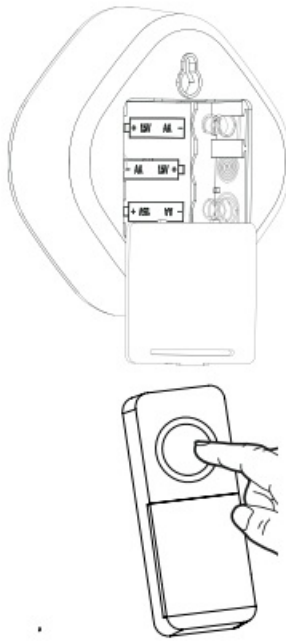


To pair multiple chimes to the same button, repeat the steps above. To pair multiple buttons to the same chime, remove the batteries from the chime each time you pair a new button. If the chime does not emit a sound during stage 2, press any button on the chime when the batteries are disconnected to remove any residual battery power, wait a short moment, and attempt to pair again.

Note! A chime can be paired to multiple push buttons, as each chime supports up to 8 memory slots. If an additional push button is paired the earliest paired button is automatically disconnected. A push button to 50 chimes total.

The chime emits a sound to indicate when the battery power is low. The chime does not need to be re-paired again after replacing the batteries.

Chime settings

- a Press the button on the front of the chime to enable/ disable sound and/or the flashing light when the push button is pressed in the following order: flash, sound, flash + sound.
- b. Press multiple times to set the volume.
- c. Press multiple times to change the preferred melody (36 melodies).

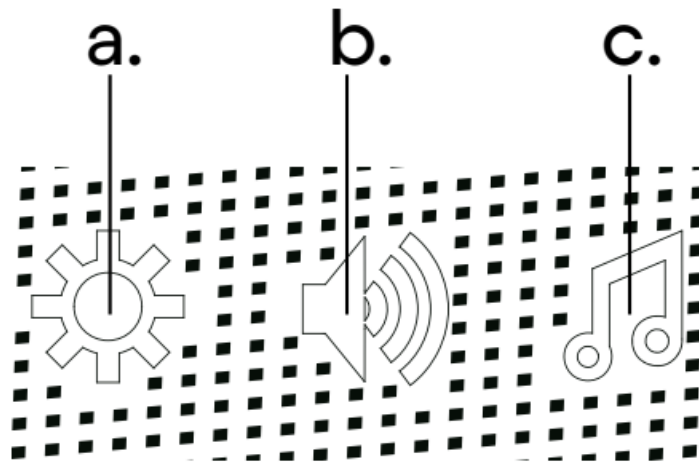

Resetting

Press and hold the melody selection button (c) on the chime for 20 seconds until a sound is emitted to remove the pairing between the chime and button.

Safety information

- The chime is intended for use in temperatures from 0-35 °C and not for outdoor use. Only for use in dry areas.
- Do not open or modify the devices in any way, this should only be carried out by a qualified technician .
- The range of 100 meters can vary due to concrete walls, electrical or electromagnetic sources that can interfere with the signal.
- Keep the batteries away and out of reach from children. A swallowed battery can result in severe injuries and a deadly outcome. Immediately consult a doctor if you suspect that a battery has been swallowed or entered the body in any other way.

Simplified EU Declaration of Conformity

Kjell & Company hereby declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. Full text of the EU declaration of conformity is available at www.kjell.com/66286

Specifications

- Frequency: 433.92 MHz
- Power: 3x AA batteries (sold separately)
- Range: Up to 100 meters
- Size: 90x90x43 mm
- Included: Chime (receiver), bracket, adhesive tape, manual
- Wireless frequency: 433.050–434.790 MHz
- Effective Radiated Power: <20 mW

Troubleshooting

I'm having trouble pairing the chime to the push button.


1. Make sure the push button and chime has enough battery power.

2. Make sure the push button and chime are not too far apart (up to 100 m) and have no obstacles in the signal path. Place the chime close to the push button and try again.
3. Avoid installing the push button on a metal door frame.
4. Re-initiate the pairing procedure, make sure to follow the instructions in the same order they are described in the manual.

www.cleverio.se

Box 50435 Malmö Sweden 2024-07-16

Documents / Resources

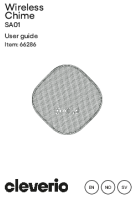	<p>cleverio SA01 Wireless Chime [pdf] User Guide 66286, SA01 Wireless Chime, SA01, Wireless Chime, Chime</p>
---	--

References

-  [Cleverio Extra dörrklocka \(batteridrivnen\) - Smarta dörrklockor | Kjell & Company](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.