



CLEVERIQ Temperature Sensor User Manual

[Home](#) » [CLEVERIQ](#) » CLEVERIQ Temperature Sensor User Manual 



Contents

- [1 CLEVERIQ Temperature Sensor User Manual](#)
- [2 Specifications](#)
- [3 Device Add for Inclusion](#)
- [4 Device Remove for Exclusion](#)
- [5 Device Remove for Exclusion](#)
- [6 Device Factory Reset](#)
- [7 Association & Association Group Information](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

CLEVERIQ Temperature Sensor User Manual



www.cleverio.se

Box 50435, Malmö, Sweden
2019-03-20

Specifications

Battery	1x CR2450
Protocol	Z-Wave Plus
Working temperature	-10 °C to 60 °C
Temp. measurement	-10 °C to 60 °C
Humidity measurement	Max 95%
Size	65x60x20.8 mm

Device Add for Inclusion

- Press the Net_Button 3 times within 1.5s, Green LED is Blinking 3 times within 1 second.
- If Inclusion Process is successful, Green LED will turn off.

Device Remove for Exclusion

- Press the Net_Button 3 times within 1.5s.
- If Exclusion Process is successful, Green LED is Blinking 6 times, then turn off.

Device Remove for Exclusion

- Press the Net_Button 3 times within 1.5s.
- If Exclusion Process is successful, Green LED is Blinking 6 times, then turn off.

Device Factory Reset

- Long press Net_Button at least 10 seconds in the product.
- Device Reset Locally notification is Transmitted.
- Please use this procedure only when the network primary controller is missing or otherwise inoperable.

Association & Association Group Information

- Lifeline between controller and the product
- Supported command classes
Battery Report, Multilevel Sensor Report, and Device Reset Locally notification.
- Association Group description
- Association group 1: Lifeline association group
Maximum supported node is 5
Include command classes: Battery report, multilevel sensor report, and Device Reset Locally

Read More About This Manual & Download PDF:

Documents / Resources

	<p>CLEVERIQ Temperature Sensor [pdf] User Manual CLEVERIQ, 51112, Temperature Sensor</p>
---	--