



CLI-MATE CLI-AH300 Ultrasonic Humidification System Instruction Manual

[Home](#) » [CLI MATE](#) » CLI-MATE CLI-AH300 Ultrasonic Humidification System Instruction Manual 

CLI-MATE CLI-AH300 Ultrasonic Humidification System Instruction Manual

Contents

- 1 [Tayyeb Incomplete Post](#)
 - 1.1 [CONGRATULATIONS](#)
 - 1.2 [SAFETY PRECAUTIONS](#)
 - 1.3 [PARTS IDENTIFICATION](#)
 - 1.4 [LCD DISPLAY PANEL](#)
 - 1.5 [REMOTE CONTROL](#)
 - 1.6 [OPERATION](#)
 - [INSTRUCTIONS](#)
 - 1.7 [TROUBLE SHOOTING](#)
 - 1.8 [CUSTOMER SUPPORT](#)
 - 1.9 [Documents / Resources](#)
 - 1.9.1 [References](#)
 - 1.10 [Related Posts](#)

Tayyeb Incomplete Post



CONGRATULATIONS

Congratulations on your purchase of a Cli~Mate Ultrasonic Humidification System

The Cli~Mate Ultrasonic Humidification System effectively humidifies the air in indoor areas, for a more comfortable and healthy environment.

Note: Please read through the instructions carefully before using or installing the product and ensure that the manual is kept in a safe place for future reference.
The system must be properly installed and located in accordance with the installation instructions before it is used.
During the set up of this product if you have any questions / comments / issues **DO NOT RETURN TO STORE.**
FOR SERVICE AND TECHNICAL ADVICE ON THIS PRODUCT, FREE CALL 1300 764 325.



Electrical Requirements:

Australia/ New Zealand 220-240V 50/60Hz Due to manufacturing alterations product may vary slightly from the pictured.

SAFETY PRECAUTIONS

Read all instructions carefully.

 
- All components need to be installed in accordance with the user manual instructions for correct performance of unit.

- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the product.
- Do not operate the unit with a damage cord or plug or after the unit malfunctions or has been damaged in any manner.
- To protect against risk of electric shock and personal injury, do not immerse cord, plugs or product in water or other liquids.
- Switch the unit off and unplug from wall outlet when not in use and before cleaning.
- Operate unit on a stable level flat surface, keep away from moving parts.
- When moving the device, hold the bottom of the device.
- Do not move or shake the device during operation or when the power is on.
- Do not try to remove any parts of the device during operation.
- Do not move or incline the device to prevent overflow of water during operation.
- Do not try to touch the transducer piece which is highly sensitive with bare fingers, or scrape it with metal tools, otherwise it will reduce mist output.
- Dispose of any unused liquid after each use.
- Do not use hot water to prevent damage to the transducer piece.
- Do not use dirty water to prevent clogging and damage to the transducer piece.
- Do not operate the unit without water inside the water reservoir.


Ultrasonic Humidification System	
Model Code	CLI-AH300
Power Supply	220-240V 50/60Hz
Power Consumption	Maximum 30W
Water tank capacity	5 Litres
Evaporation Rate	300ml/h (on level 3)
Noise level	35dB

PARTS IDENTIFICATION

- a.** Mist Nozzle
- b.** Carry Handle
- C.** Water Tank
- d.** Water Inlet
- e.** Conditioning Cartridge C.
- f.** Water Tank Cover

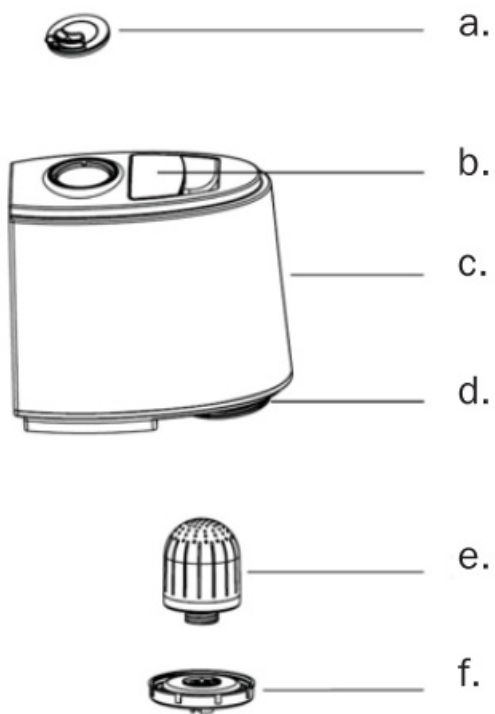


 - g.** Control Panel d.
- h.** Reed Switch
- i.** Transducer I e.
- j.** Air Outlet
- k.** Base
- l.** Indicator Light
- m.** Scent Pad Tray

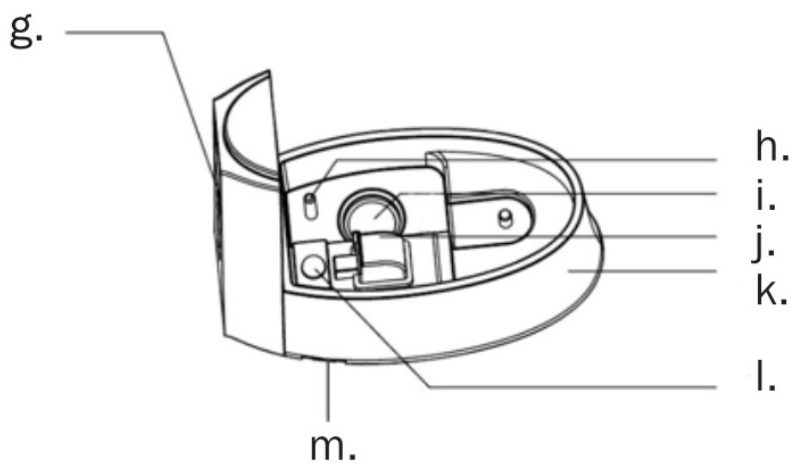


LCD DISPLAY PANEL

 - a.** Mist Level
- b.** Timer (hour/s)
- c.** Current Humidity Level(%)
- d.** Humidity Level Set
- e.** Refill Water
- f.** Anion Function
- g.** On/Off
- h.** Current Room Temperature (Celsius)

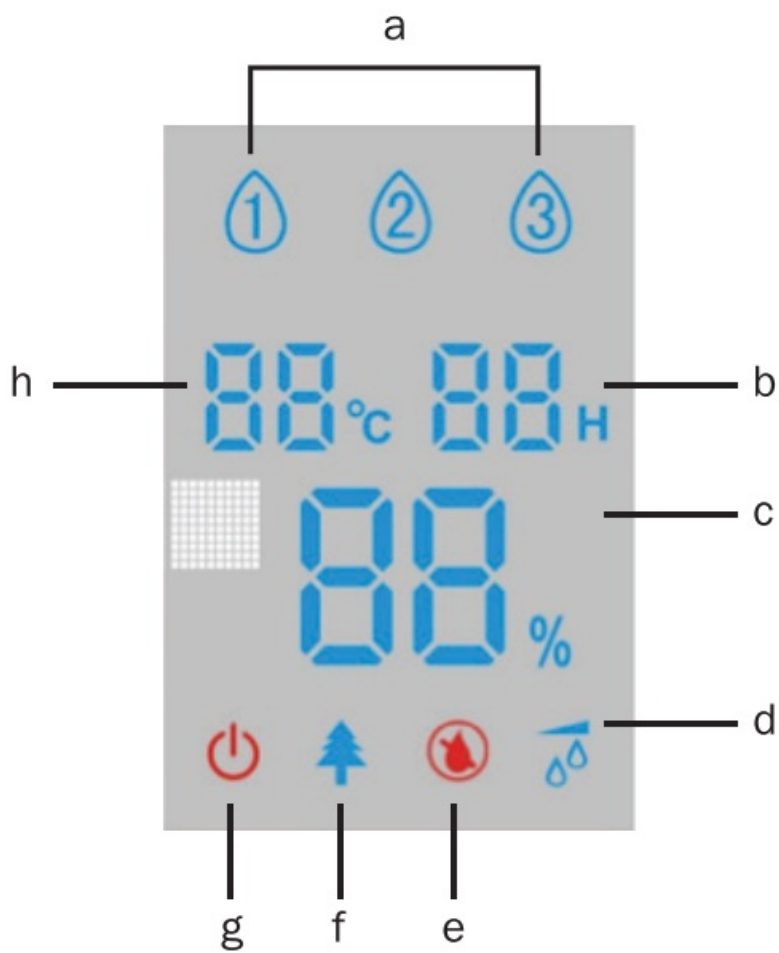


REMOTE CONTROL



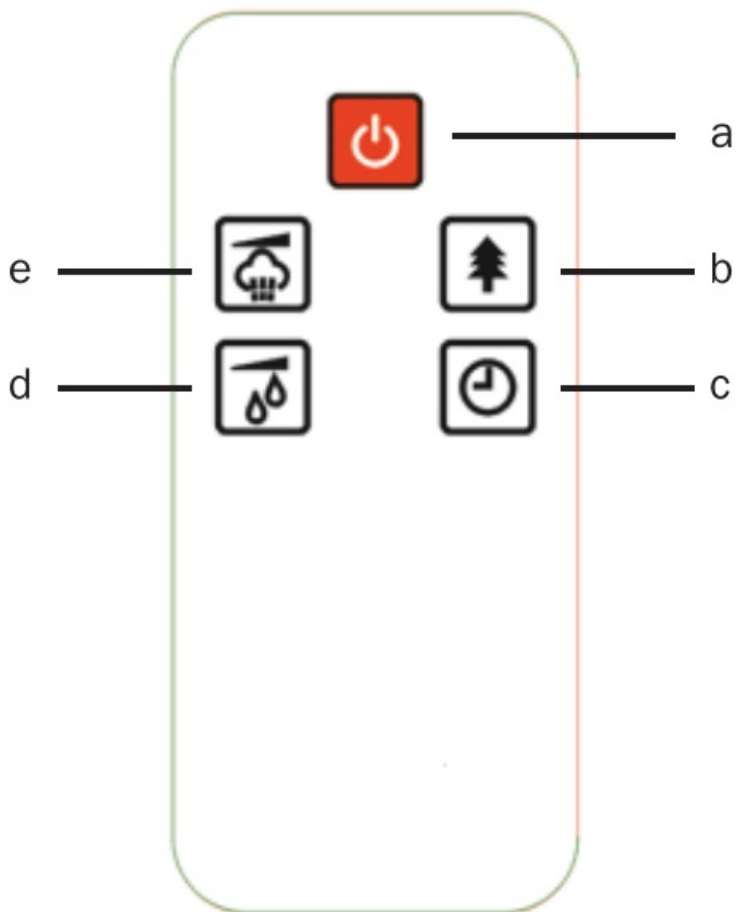 

- a.** Power On/Off
- b.** Anion
- c.** Timer
- d.** Humidity Level
- e.** Mist Level



OPERATION INSTRUCTIONS

1. Locate a flat stable location and plug the power cord into the appropriate electrical outlet.
2. Take off the mist nozzle and remove the water tank from the base and turn water tank upside down.
3. Unscrew the water tank cover and fill water tank with clean water. Important: Temperature of the water should not exceed 40°C.
4. Replace the water tank cover and position the water tank back onto the base.
5. Place the mist nozzle back into place.
6. Switch on the machine by pressing the “ON/OFF”  button. The LED display will illuminate and display current temperature and humidity and begin to work on default setting (Mist Output Level 2).

Settings

7. **To set MIST LEVEL:** Press the **MAX/MIN**  button to adjust the mist level from level 1, level 2 or level 3.
8. **ANION function:** Press the **ANION** button  to turn on the Anion function. The Anion function will begin to generate and send negative ions into the air which helps to purify the air.
9. **To Set HUMIDITY LEVEL:** The LED display shows the current humidity level (%) To set desired humidity, press ‘**HUMIDITY**’ button  once and ‘Co’ will flash on the LCD screen indicating Humidity has not yet been set. Press again to set the desired humidity level from 45% RH to 75% RH, increasing by 5% RH increments with each press. After desired humidity level has been selected the unit will return to showing current humidity and the humidity icon  will flash on the LCD screen. **Note:** If the desired humidity is less than the current humidity, the machine will enter sleep mode.



10. **To Set TIMER:** To set automatic off timer, press TIMER button. Press to select the desired running time – 1 hour to 12 hours. Unit will automatically switch off once selected off time duration has lapsed. The screen will display remaining running time by the hour.
11. When the water levels in the water tank is low, the unit will sound an alarm for 3 seconds and then stop operation. The indicator light in the water tank will illuminate red and display the refill water symbol before displaying the Power Off symbol. Follow steps 2-5 to continue.

Scent Pad

The unit includes a scent pad, which can be used to send light aroma into the air.

To use pull out the scent tray located near the base on the right hand side of the unit. **(See Fig 1.)**

Add a few drops of aroma essential/oils on the pad. Place the pad back into the tray and close.

Note: Aroma/essential oils not included.



Fig. 1

Scale

To reduce the possibility of scale (white mineral deposits) build-up on the surface of the water basins, inner surface of the water tank and transducer, the following is recommended:

- Change the water daily.
- If possible, use distilled or demineralised water.
- Drain, clean and thoroughly dry all parts of the unit before putting it into storage.

Cleaning the transducer

If mineral deposits are evident on the transducer, clean the surface with a soft, clean cloth and a small amount of undiluted white vinegar. To remove mineral deposits, put 5-10 drops of undiluted white vinegar on the surface of the transducer. Leave to soak for 2-5 minutes. Use a cotton swab to gently loosen up the scale of the surface. Rinse the transducer with clean water and wipe clean.

Important: Be careful not to damage the Transducer during cleaning. Do not use any metal to scrape it or touch with bare fingers.

Changing the Conditioning Cartridge

It is advisable to change the conditioning cartridge every 1000L, or every 12 months

To change:

1. Take off the mist nozzle and remove the water tank from the base and turn water tank upside down.
2. Unscrew the water tank cover.
3. Unscrew the water tank cover from the conditioning cartridge and dispose of the old cartridge.
4. Screw the new cartridge onto the water tank cover.
5. Replace the water tank cover with the cartridge attached and position the water tank back onto the base. Re-instate the mist nozzle.

Replacement cartridge code: CLI-AH300-RF

Please call Cli~Mate 1300 764 325



TROUBLE SHOOTING

BEFORE YOU CALL FOR SERVICE PLEASE REVIEW THE TROUBLE SHOOTING TIPS FIRST.

Problem	Possible Causes	What To Do
No Power	Unit is not plugged into wall socket	Check connection to wall socket
Little or no mist is produced	No water in water tank	Fill water tank
	Scale build up on transducer	Clean scale build up as per instructions
	Water is too dirty or kept for too long in the tank	Clean water tank and refill with fresh clean water
Abnormal noise	Very low water levels in water tank	Refill water tank
	Unit is on unstable surface	Reposition the unit to a stable flat surface
White dust accumulation	Hard water used	Follow instructions on page 5.
	Filter needs cleaning	

Your Aquaport 12 Month Repair or Replacement Warranty

Aquaport warrants this appliance to the first purchaser and subject to the stated conditions:

Warranty covers any defects in material or workmanship in the manufactured product within the first twelve months from the date of purchase.

To make a warranty claim you must call Aquaport on toll free number 1300 764 325 for instructions. If a product is found to be faulty there is a 90 day return policy from the date of purchase.

For warranty claims outside of 90 days from date of purchase, product will be repaired or replaced at our discretion. Repair or replacement costs of the product will be covered under warranty by Aquaport.

Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired.

Refurbished parts may be used to repair the goods.

Warranty does not cover filters which are consumable unless proven to have defects in material or workmanship in the manufactured product.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if goods fail to be of acceptable quality and the failure does not amount to a major failure.

Conditions of this Warranty:

1. This product has been fully installed in accordance with the user manual installation instructions.
2. The warranty extends only to repairing or replacing any component that proves to be defective in material or workmanship.
3. The warranty does not cover defects occasioned by misuse, alterations, accidents, or used for other than the intended purpose.
4. The warranty does not cover damage to the product caused by accident, fire, or floods.
5. Proof of purchase is required for warranty claims.

Please keep purchase receipt in a safe place.

To enable us to register your warranty and provide service should a problem occur, we recommend you register your warranty online at: www.cli-mate.eom.au/warranty-and-registration

CUSTOMER SUPPORT

CUSTOMER HOTLINE: 1300 764 325

Aquaport Corporation Pty Ltd

70 Hardys Road, Torrensville SA 5031

Telephone: 08 8354 0711

Facsimile: 08 8354 0722

Email: aquaport@aquaport.com.au

Web: www.cli-mate.com.au

Social:  /climatebrand  @climatebrand



Documents / Resources



[CLI-MATE CLI-AH300 Ultrasonic Humidification System](#) [pdf] Instruction Manual
CLI-AH300 Ultrasonic Humidification System, CLI-AH300, Ultrasonic Humidification System, Humidification System, System

References

-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.