



Clicker klik2c Wireless Keyless User Manual

[Home](#) » [Clicker](#) » Clicker klik2c Wireless Keyless User Manual 

Contents

- [1 Clicker klik2c Wireless Keyless User Manual](#)
- [2 PLEASE DO NOT RETURN TO THE RETAIL STORE](#)
- [3 Programming](#)
- [4 PRODUCT REGISTRATION AND TROUBLESHOOTING](#)
- [5 References](#)

CLICKER

Clicker klik2c Wireless Keyless User Manual



STOP

Thank you for your purchase of a Clicker universal remote control.

PLEASE DO NOT RETURN TO THE RETAIL STORE

If for any reason you have questions or need help with troubleshooting please call: 1-800-442-1255. Read instructions thoroughly BEFORE beginning. Start with the garage door closed. Determine garage door opener type – Smart/Learn button or DIP Switch. The Smart/Learn button or DIP Switches are located on the motor unit or external receiver. Refer to the owner's manual if necessary.

Clicker products are intended to be used only with garage door openers manufactured after 1993 that utilize photo-eyes safety sensors. These are always located on or near the bottom of the door track. If your garage door does not have the sensors attached and working, the opener is not compliant with current federal safety regulations and should be replaced. To prevent possible SERIOUS INJURY or DEATH from a moving gate or garage door:


- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote controls.
- Activate the gate or door ONLY when it can be seen clearly, is properly adjusted and there are no obstructions to door travel.
- ALWAYS keep the gate or garage door in sight until completely closed. NEVER permit anyone to cross the path of a moving gate or door.

Determine Garage Door Opener Types

Proceed with instructions according to your garage door opener type. NOTE: Your motor unit and/or remote control may look different.


TYPE 1

Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic and Do It garage door openers or receivers with 3 position DIP switches.

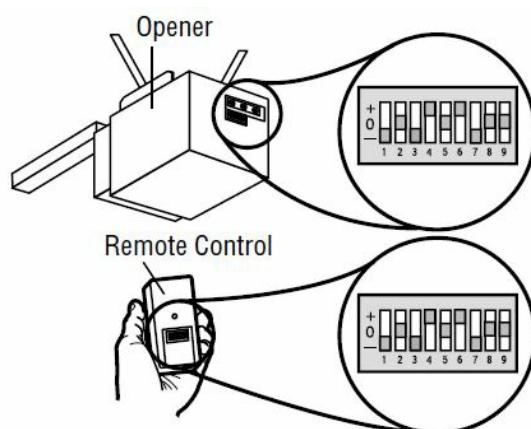


TYPE 2

Genie, Linear and Moore-O-Matic garage door openers or receivers with 2 position DIP switches.

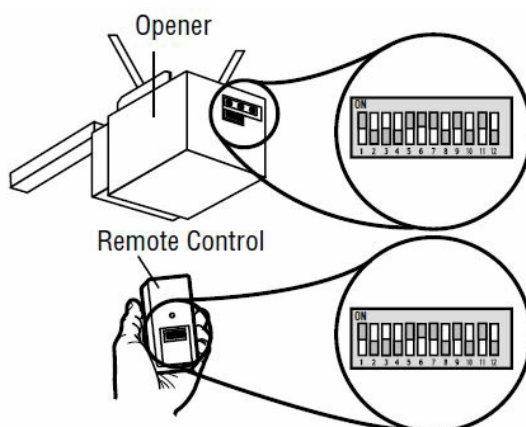


TYPE 3

Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic and Do It garage door openers or receivers with Yellow, white or grey Smart/Learn buttons.

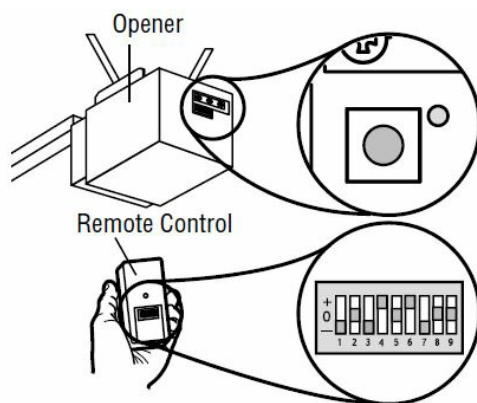

TYPE 4

Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic, Do It, Genie Intellicode**, Overhead Door, Stanley, Wayne Dalton or Linear garage door openers with Smart/Learn button.

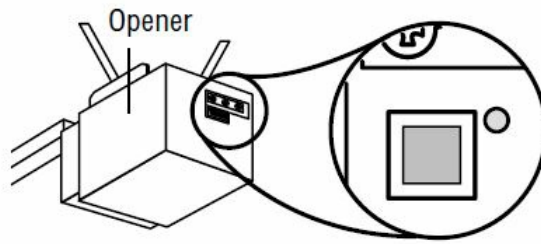

NOTE

Visit www.clickerproducts.com for Genie Intellicode II instructions.

Programming

TYPE 1

1. Select and write a 4-digit PIN:
2. Determine your opener ID using the list below.
 - ID DIP Switch Type
 - 11 = 9 DIP switch garage door openers (U.S.)
 - 12 = 9 DIP switch garage door openers (Canada)
 - 15 = 8 DIP switch garage door openers
 - 19 = 7 DIP switch garage door openers (Write opener ID here: __ __)
3. The first DIP switch must be set to the “-” position on your remote and opener. Record your DIP switch sequence for the remaining DIP switches. If the DIP switch is in the “+” position place a 1, “0” position place a 2, “-” position place a 3 in the corresponding box in the chart below:

DIP Switch Sequence	1	2	3	4	5	6	7	8	9
+									
0									
-	3								

NOTE: Leave any unused switch locations blank. Write your DIP switch sequence below:

4. Press and # keys together until the keypad stops flashing.
5. Enter the PIN from step 1, and press #.
6. Enter the ID from step 2, and press #.
7. Enter the DIP switch sequence from step 3 and press the # key.
8. To test and use, wait until the lights turn off, enter your PIN and press the 0 key. If the opener does not function, repeat programming.

TYPE 2

1. Select and write a 4-digit PIN:
2. Determine your opener ID using the list below.
 - ID DIP Switch Type

- 13 = 12 DIP switch Genie garage door openers
- 14 = 10 DIP switch Linear garage door openers
- 16 = 10 DIP switch Stanley garage door openers
- 17 = 9 DIP switch Genie garage door openers
- 18 = 8 DIP switch Linear, Moore-O Matic garage door openers (Write opener ID here: __ __)

3. Record your DIP switch sequence. If The DIP switch is in the “on” or “up” position place a 1, “off” or “down” position place a 2 in the corresponding box in the chart below:

DIP Switch Sequence	1	2	3	4	5	6	7	8	9	10	11	12
ON												
OFF												

NOTE: Leave any unused switch locations blank. Write your DIP switch sequence below:

4. Press * and # keys together until the keypad stops flashing.
5. Enter the PIN from step 1, press #
6. Enter the ID from step 2, and press #.
7. Enter the DIP switch sequence from step 3 and press # key.
8. To test and use, wait until the lights turn off, enter your PIN and press the 0 key. If the opener does not function, flip DIP switches, so if a switch is “on” or “up” flip it “off” or “down” in step 3.

TYPE 3

1. Select and write a 4-digit PIN:
2. Your opener ID is 11.
3. Record your DIP switch sequence. Set your first DIP switch to “-”, your first DIP switch must be set to the “-” position on your remote and opener. If the DIP switch is in the “+” position place a 1, “0” position place a 2, “-” position place a 3 in the corresponding box in the chart below:

DIP Switch Sequence	1	2	3	4	5	6	7	8	9
+									
0									
-	3								

NOTE: Leave any unused switch locations blank. Write your DIP switch sequence below:

4. Press the * and # keys together until keypad stops flashing.
5. Enter the PIN from step 1, and press #.
6. Enter 11, press #.
7. Enter the DIP switch sequence from step 3, and press #.
8. Press and release the Smart/Learn button on garage door opener.
9. Enter your 4-digit PIN and press the 0 key.

10. To test and use, wait until light turns off, enter your PIN and press the 0 key. If the opener does not function, repeat programming.

TYPE 4

1. Select and write a 4-digit PIN:
2. Determine your opener ID using the list below.
 - ID Garage door opener brand and manufacturing dates
 - 1 = Linear garage door openers manufactured from 1997 to the present.
 - 2 = Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic and Do It garage door openers manufactured from 1997 to 2004 [Orange Button].
 - 3 = Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic and Do It garage door openers manufactured from 2005 to the present [Purple Button].
 - 4 = Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic and Do It garage door openers manufactured from 1993 to 1996 [Green Button].
 - 5 = Genie Intellicode and Overhead Door garage door openers manufactured from 2005 to the present (315 MHz).
 - 6 = Genie Intellicode and Overhead Door, garage door openers manufactured from 1995 to the present (390 MHz).
 - 7 = Stanley garage door openers manufactured from 1998-present.
 - 8 = Chamberlain, Sears Craftsman, and LiftMaster garage door openers manufactured from 2011 to the present [Yellow Button].
 - 9 = Wayne Dalton garage door openers manufactured from 1999-present. (Write opener ID here: __)
 - Press the * and # keys together until the keypad stops flashing.
 - Enter the PIN from step 1, and press #.
 - Enter the ID from step 2, press #.
 - Press and release the Smart/Learn button on the garage door opener.
 - Enter your 4-digit PIN and press the 0 key

NOTE: For Genie and Overhead Door units, press "0" twice.

- To test and use, wait until the light turns off, enter your PIN and press the 0 key. If the opener does not function, repeat programming.

MOUNT THE KEYPAD

Install out of the reach of children at a minimum height of 5 feet (1.5 m). Secure the keypad to a smooth surface. Mount the keypad out of the path of the moving garage door, but within sight of it (4" clearance is needed for the cover.)

1. Remove cover.
2. Remove the battery cover to expose mounting holes.
3. Remove the battery and mount the keypad using the screws provided.
4. Reassemble.

CHANGING YOUR 4-DIGIT PIN

Enter existing PIN, press *, enter new PIN and press *. To test and use, enter your new PIN and press the 0 key.


PRODUCT REGISTRATION AND TROUBLESHOOTING

www.clickerproducts.com 1-800-442-1255

Chamberlain, LiftMaster and Moore-O-Matic are Trademarks of the Chamberlain Group. Genie and Intellicode are Trademarks of GMI Holdings, Inc. Overhead Door is a Trademark of Overhead Door Corporation. Linear is a Trademark of Linear Corporation. Master Mechanic is a Trademark of TruServ. Sears is a Trademark of Sears & Roebuck. Stanley is a Trademark of The Stanley Works. Wayne Dalton is a trademark of Wayne Dalton Corporation. Do It is a trademark of Do It Best Corporation.

BATTERY

To prevent possible SERIOUS INJURY or DEATH:

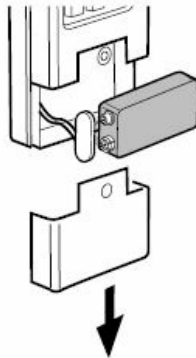

- NEVER allow small children near batteries.
- If the battery is swallowed, immediately notify the doctor.

Replace the 9-Volt battery when the keypad light becomes dim or does not light up. Slide the cover up, remove the battery cover and replace the battery. Re-programming may be necessary.

NOTICE

To comply with FCC and or Industry Canada (IC) rules, adjustments or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER-SERVICEABLE PARTS. Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Download PDF: [Clicker klik2c Wireless Keyless User Manual](#)

References

- [User Manual](#)