



ClimaRad 2.0 Ventilation Unit Instruction Manual

[Home](#) » [climaRAD](#) » ClimaRad 2.0 Ventilation Unit Instruction Manual 

Contents

- 1 ClimaRad 2.0 Ventilation Unit
- 2 User Instructions ClimaRad 2.0
 - 2.1 Operation of the ClimaRad ventilation unit
- 3 Operating the ClimaRad ventilation unit
 - 3.1 Control Panel
- 4 Function Keys
- 5 Documents / Resources
- 6 Related Posts



ClimaRad 2.0 Ventilation Unit



User Instructions ClimaRad 2.0

Operation of the ClimaRad ventilation unit

The ClimaRad ventilation unit optimizes the air quality through ventilation and air filtration. The built-in heat exchanger minimizes heat loss. The ClimaRad 2.0 consists of a ventilation unit with a tilting radiator.



Operating the ClimaRad ventilation unit

You can operate your radiator, as usual, with the radiator button on the side of the radiator. The ClimaRad ventilation unit is operated with the control panel on top of the radiator.






 




Control Panel


The installer will have adjusted the settings of the ClimaRad ventilation unit to the room in which it is installed. That is why we only explain the function keys you will need for daily use.

Function Keys

- **Automatic control.** The ventilation in the room is controlled automatically by your ClimaRad ventilation unit, which will ventilate the room based on CO measurements.
- You can set your desired ventilation speed with the + and – buttons on your control panel. After a period of 4 hours the ClimaRad switches back to automatic control.
- **Pause.** Use this function when you want to temporarily stop the ventilation. After a period of 4 hours the ClimaRad switches back to automatic control.
- **Maximum ventilation.** With this 'boost' function, the ClimaRad increases the ventilation to the maximum level. Use this function to remove unpleasant odours, such as smoke or cooking smells. After a period of 4 hours the ClimaRad switches back to automatic control.
- **Ventilation with cooler outside air.** The ClimaRad ventilates with outside air when the outside temperature is at least 2 degrees colder than the air in the room. After a period of 8 hours the ClimaRad switches back to automatic control. You can set the speed with the + and – buttons. Use this function, for instance, in summer when at night you want to reduce the temperature a few degrees in a warmed-up room.
- **Child lock.** This key combination locks your control panel. Press the indicated buttons simultaneously for 4 seconds. To override this lock you repeat the action.

Messages		Switch off
	<u>Child lock.</u> The child lock is activated.	   Press 4 seconds simultaneously
	<u>Error.</u> A fault has occurred. Please contact your installer or housing corporation.	
	Dirty filter. Replace the air filters or contact your installer or housing corporation After replacing the filters, press the + and - buttons for 6 seconds.	  Press for 6 seconds

Documents / Resources

	<p>ClimaRad 2.0 Ventilation Unit [pdf] Instruction Manual 2.0 Ventilation Unit, 2.0, Ventilation Unit, Unit</p>
---	---

[Manuals+](#).