



ClimaRad S-Fan+ (with Heating Element) Excl. Room Thermostat Instruction Manual

[Home](#) » [climaRAD](#) » ClimaRad S-Fan+ (with Heating Element) Excl. Room Thermostat Instruction Manual 

Contents

- [1 ClimaRad S-Fan+ \(with Heating Element\) Excl. Room Thermostat](#)
- [2 Operation of the ClimaRad S-Fan+](#)
- [3 Operation ClimaRad S-Fan+](#)
- [4 Function keys ventilate](#)
- [5 Function keys heating and ventilation](#)
- [6 Messages](#)
- [7 Switch off](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)


ClimaRad®

ClimaRad S-Fan+ (with Heating Element) Excl. Room Thermostat



Operation of the ClimaRad S-Fan+

The ClimaRad S-Fan+ achieves optimal air quality through ventilation combined with heating. This unit can be used in two different ways: Ventilate Only, and Heat and Ventilate.

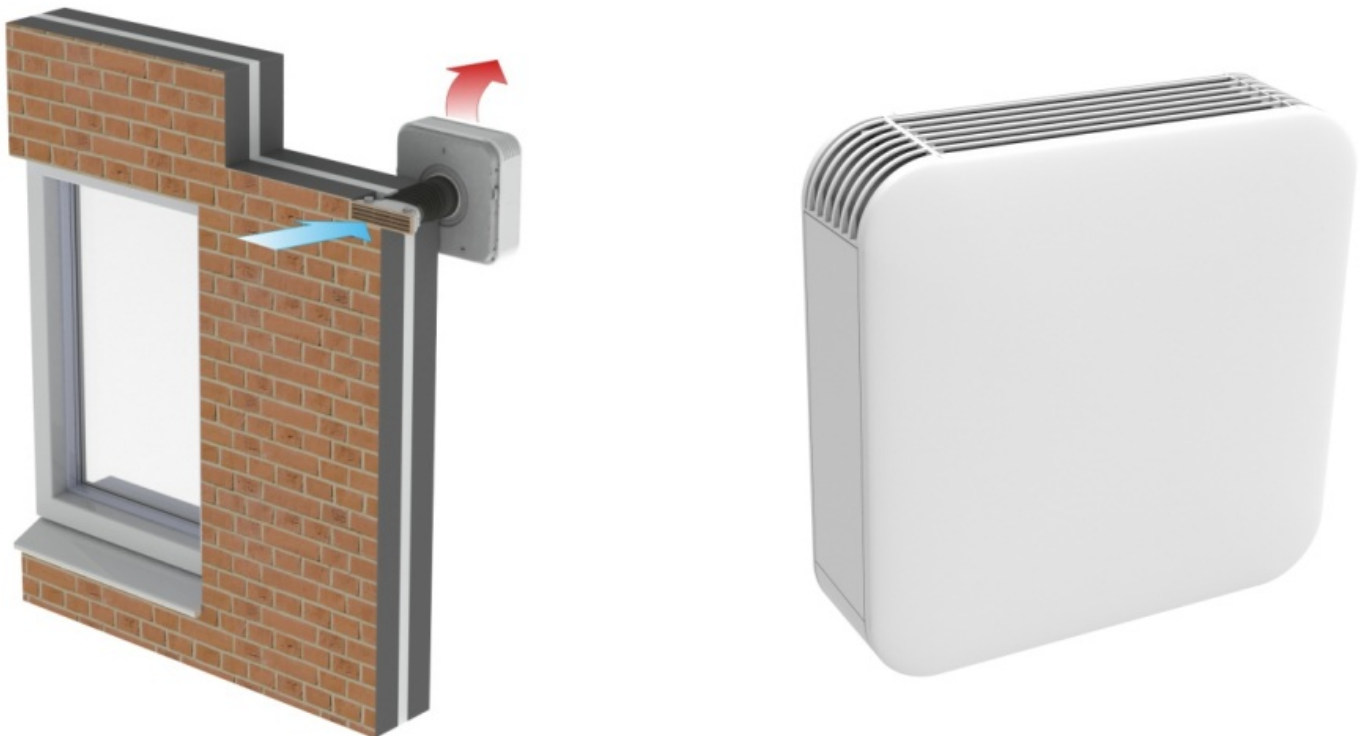

warning: Please note! The air supply opening must always remain open and unimpeded!

Operation ClimaRad S-Fan+

The ClimaRad S-Fan+ can be operated via the control panel on the bottom of the unit in combination with the paired room thermostat.



Function keys ventilate

AUTO



- **Automatic control.** Room ventilation is automatically controlled by your ClimaRad S-Fan+, which ventilates based on CO measurement and RV. Press 2 to switch off the heating function.



- **Manual: manual ventilation with outside air:**

You can set your desired ventilation speed using the + and – buttons on your control panel. After a period of 4 hours, the ClimaRad S-Fan+ switches back to automatic control. Use this function in summer, for example, when you want to lower the temperature in your heated room by a few degrees at night (summer night ventilation).



- **Pause/Off.** Use this function if you (temporarily) do not want to ventilate and/or heat. After a period of 2 hours, the ClimaRad S-Fan+ switches back to automatic ventilation control. Press the button for 5 seconds to switch off the unit. In emergencies, you can use this function to switch off the device.



AUTO



AUTO



Comfort mode. The ClimaRad S-Fan+ preheats the outside air to 12°C for a period of 8 hours.

- **Air quality.** Increase or decrease the desired air quality.

Function keys heating and ventilation



- **Heating.** The ClimaRad S-Fan+ starts heating the room when you activate this function. After a period of 4 hours, the ClimaRad S-Fan+ switches back to automatic ventilation control.





The + and – buttons on your control panel  can be used to select the duration.





- **Heating rate.** Increase or decrease fan speed to heat faster or slower.
- **Child lock.** The child lock is enabled when you press and hold the three buttons for 4 seconds (when the heating mode is on).

Messages

-  • **Child lock.** The child lock is switched on. Press and hold the three buttons for 4 seconds to switch it off.


-  • **Malfunction.** A malfunction has occurred. Contact your technician or housing corporation.

-  • **Dirty filter.** Replace the air filter or contact your technician or housing corporation. After replacement, press and hold the + and – buttons for 6 seconds.

-  • **Pairing.** The ClimaRad S-Fan+ can be linked to other ClimaRad products. Press the buttons briefly and

simultaneously.

Switch off

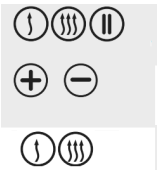

- Press 4 seconds simultaneously
- Press for 6 seconds
- Press briefly and simultaneously

ClimaRad B.V. – Lübeckstraat 25 – 7575 EE – Oldenzaal – NL – info@climarad.com – www.climarad.co.uk – tel. +31 541 358130

Documents / Resources

	<p>climaRAD ClimaRad S-Fan+ (with Heating Element) Excl. Room Thermostat [pdf] Instructi on Manual ClimaRad S-Fan with Heating Element Excl. Room Thermostat</p>
--	--

Manuals+.