




ClimaRad H1C-S Device Creates Instructions

[Home](#) » [climaRAD](#) » ClimaRad H1C-S Device Creates Instructions 

Contents

- [1 ClimaRad H1C-S Device Creates](#)
- [2 Operating principle ClimaRad Care H1C-S](#)
- [3 Operating the ClimaRad Care H1C-S](#)
- [4 Function Keys](#)
- [5 Messages](#)
- [6 Switch off](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



ClimaRad H1C-S Device Creates



Operating principle ClimaRad Care H1C-S

The ClimaRad Care H1C-S device creates the optimum temperature and air quality by heating, cooling, and ventilating with air filtration and heat reclamation. The built-in heat exchanger ensures that hardly any heat is lost during ventilation with outside air



ClimaRad Care H1C-S

Operating the ClimaRad Care H1C-S

The control panel is located on the top of the device.










Control panel



 
The ClimaRad Care H1C-S in your room is adjusted optimally by the installer and works completely automatically.

This is why we will only explain the function buttons that are relevant for you in daily use.

 
Function Keys


-  • Automatic control. The ventilation/heating/cooling in the room is controlled automatically by your ClimaRad ventilation unit, which works based on CO₂ measurement.
-  • Use the AUTO or AUTO button combinations to set the desired default temperature of your room. This will temporarily disable the automatic control. After a period of 4 hours your ClimaRad will switch back to automatic control.
-  • You can adjust the desired speed for heating or cooling with the + and the - on your control panel.
-  • Pause. Use this function when you temporarily do not wish to ventilate/heat/cool. After a period of 4 hours your ClimaRad will switch back to automatic control.
-  • Maximum. Your ClimaRad will function in the maximum setting. For ventilation, this function can be used to expel unpleasant odours such as smoke or cooking smells. After a period of 4 hours your ClimaRad will switch back to automatic control.
-  • Ventilation with cooler outside air. Your ClimaRad ventilates with outside air when it is a minimum of 2 degrees colder than the air in your room. After a period of 8 hours your ClimaRad will switch back to automatic control. You can control the speed with the + and - . For example, use this function in the summer when you want to lower the temperature in your warmed room by several degrees.
-  • Child lock. This button combination locks your control panel. Press the indicated buttons simultaneously for 4 seconds. Repeat this action if you want to unlock the control panel.

Messages

-  • Child lock. The child lock is activated.
-  • Error. A fault has occurred. Please contact your installer or housing corporation
-  • Dirty filter. Replace the air filters or contact your installer or housing corporation After replacing the filters, press the + and - buttons for 6 seconds

Switch off



	<p>ClimaRad H1C-S Device Creates [pdf] Instructions H1C-S Device Creates, H1C-S, Device Creates</p>
---	---