



## ClimaRad H2X Ventilation Unit Instruction Manual

[Home](#) » [climaRAD](#) » ClimaRad H2X Ventilation Unit Instruction Manual 

### Contents

- 1 ClimaRad 2.0 Ventilation Unit
- 2 User instructions ClimaRad Sensa H2X
  - 2.1 Operating principle ClimaRad Sensa H2X
- 3 Operating the ClimaRad Sensa H2X
  - 3.1 Control Panel
- 4 Function Keys
- 5 Documents / Resources
- 6 Related Posts




### ClimaRad 2.0 Ventilation Unit



### User instructions ClimaRad Sensa H2X


#### Operating principle ClimaRad Sensa H2X

The ClimaRad ventilation unit achieves optimal air quality through ventilation and air filtration. The built-in heat exchanger ensures that as little heat as possible is lost. The ClimaRad Sensa H2X is a horizontal ventilation unit with built-in heat exchanger and sensors for CO<sub>2</sub>, relative humidity, indoor temperature and outside temperature.

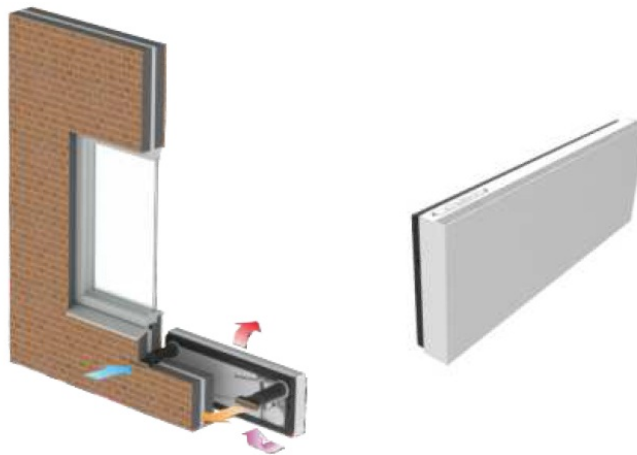

## Operating the ClimaRad Sensa H2X

 The control panel is located on the top of the device.






 




### Control Panel

The ClimaRad Sensa H2X in your room is adjusted optimally by the installer and works completely automatically. This is why we will only explain the function buttons that are relevant for you in daily use.

### Function Keys


- **Automatic control.** The ventilation in the room is controlled automatically by your ClimaRad ventilation unit, which will ventilate the room based on CO measurements.
- You can set your desired ventilation speed with the + and – buttons on your control panel. After a period of 4 hours the ClimaRad switches back to automatic control.
- **Pause.** Use this function when you want to temporarily stop the ventilation. After a period of 4 hours the ClimaRad switches back to automatic control.
- **Maximum ventilation.** With this ‘boost’ function, the ClimaRad increases the ventilation to the maximum level. Use this function to remove unpleasant odors, such as smoke or cooking smells. After a period of 4 hours the ClimaRad switches back to automatic control.
- **Ventilation with cooler outside air.** The ClimaRad ventilates with outside air when the outside temperature is at least 2 degrees colder than the air in the room. After a period of 8 hours the ClimaRad switches back to automatic control. You can set the speed with the + and – buttons. Use this function, for instance, in summer when at night you want to reduce the temperature a few degrees in a warmed-up room.
- **Child lock.** This key combination locks your control panel. Press the indicated buttons simultaneously for 4 seconds. To override this lock you repeat the action.

Messages		Switch off
	<u>Child lock.</u> The child lock is activated.	   Press 4 seconds simultaneously
	<u>Error.</u> A fault has occurred. Please contact your installer or housing corporation.	
	Dirty filter. Replace the air filters or contact your installer or housing corporation After replacing the filters, press the + and - buttons for 6 seconds.	  Press for 6 seconds

ClimaRad B.V. – Lübeckstraat 25 – 7575 EE – Oldenzaal – NL

- [info@climarad.com](mailto:info@climarad.com)
- [www.climarad.co.uk](http://www.climarad.co.uk)
- tel. +31 541 358130

## Documents / Resources

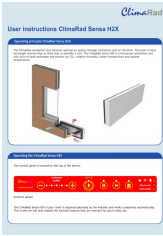	<p><a href="#">ClimaRad H2X Ventilation Unit</a> [pdf] Instruction Manual H2X Ventilation Unit, H2X, Ventilation Unit, Unit</p>
--	---

[Manuals+](#)