

## ClimaRad S-Fan 4-Position Switch Instruction Manual


[Home](#) » [climaRAD](#) » ClimaRad S-Fan 4-Position Switch Instruction Manual 

### Contents

- [1 ClimaRad S-Fan 4-Position Switch](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Description and application](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)



### ClimaRad S-Fan 4-Position Switch

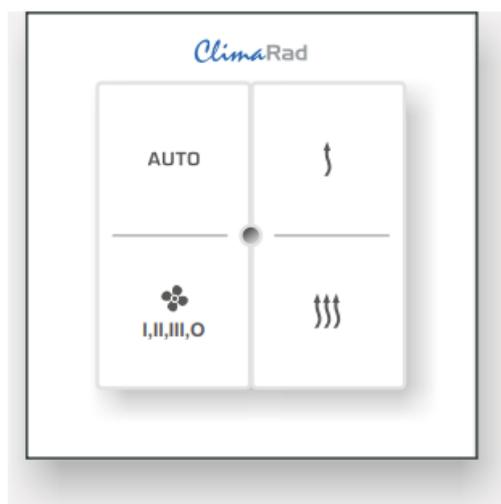

### Product Information

The ClimaRad S-Fan is a wireless RF 4-position switch that allows manual operation of the fan. By default, the fan operates in fully automatic mode (AUTO mode). However, the automatic control can be overridden by manually selecting the I, II, III, or O mode. Please note that the comfort button and heating button have no function and are

only enabled on the S-Fan+ model.

## Product Usage Instructions

To operate the ClimaRad S-Fan, follow these steps:

1. Ensure that the S-Fan is installed and connected properly.
2. Locate the 4-position switch on the S-Fan.
3. Press the button labeled "AUTO" to activate automatic mode. The fan will adjust its speed automatically based on the detected air quality and temperature.
4. If you want to manually control the fan speed, press the button labeled "I" for low speed, "II" for medium speed, "III" for high speed, or "O" for pause.
5. To increase the fan speed, press the corresponding button multiple times. For example, pressing "II" twice will set the fan to medium speed.
6. The duration of each press will depend on your specific model. Please refer to your user manual for more information on the exact timing.

Please note that the comfort button and heating button do not have any function on the standard S-Fan model. These buttons are only enabled on the S-Fan+ model.

## Description and application

Using the wireless RF 4-position switch, your ClimaRad S-Fan can be operated manually.

- By default, the ClimaRad S-Fan operates fully automatically (AUTO mode).
- However, the automatic control can be manually overridden by the  I, II, III, O (low, medium, high and pause) mode.
- The comfort button  and heating button  have no function, only on an S-Fan+ are these buttons enabled.

## Setting options and operation of 4-position switch ClimaRad S-Fan

If a button is pressed longer than indicated, no action is performed and the switch switches to standby to conserve battery power.

Button	number of press	duration	action
AUTO	1	<1s	automatic
❁ I	1	<1s	low setting
❁ II	2	<1s	middle position
❁ III	3	<1s	high setting
❁ 0	4	<1s	pause
↑			no function
↑↑↑			no function
❁ I, II, II, 0 + ↑↑↑	1	3-6 s	connect modus


After using the switch correctly, the LED results are displayed, as described in the table opposite.

LED colour	flashing	description
green	1x	mode changed/normal operation
green	2x	link with S-Fan successful
orange	1x	low battery/start-up
orange	2x	S-Fan displays message 'filter dirty'
red	1x of 2x	Contact corporation/landlord

## ClimaRad B.V.

- **address:** Lübeckstraat 25 – 7575 EE – Oldenzaal –
- **email:** [info@climarad.com](mailto:info@climarad.com)
- **web:** [www.climarad.nl/en](http://www.climarad.nl/en) –
- **tel.** +31 541 358130

## Documents / Resources

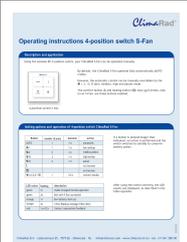	<p><a href="#">ClimaRad S-Fan 4-Position Switch</a> [pdf] Instruction Manual S-Fan 4-Position Switch, S-Fan, 4-Position Switch, Switch</p>
---	--

## References

- [ClimaRad | Solution for the necessary energy transition](#)

Manuals+