



## climaRAD S-Fan+ (with Heating Element) Incl. Room Thermostat Instructions

[Home](#) » [climaRAD](#) » climaRAD S-Fan+ (with Heating Element) Incl. Room Thermostat Instructions 

### Contents

- [1 climaRAD S-Fan+ \(with Heating Element\) Incl. Room Thermostat](#)
- [2 Operation of the ClimaRad S-Fan+](#)
- [3 Operation ClimaRad S-Fan+](#)
- [4 Function keys ventilate](#)
- [5 Function keys heating and ventilation](#)
- [6 Function keys general](#)
- [7 Switch off](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)


**ClimaRad**®

**climaRAD S-Fan+ (with Heating Element) Incl. Room Thermostat**



### Operation of the ClimaRad S-Fan+

The ClimaRad S-Fan+ achieves optimal air quality through ventilation combined with heating. This unit can be used in two different ways: Ventilate Only, and Heat and Ventilate.

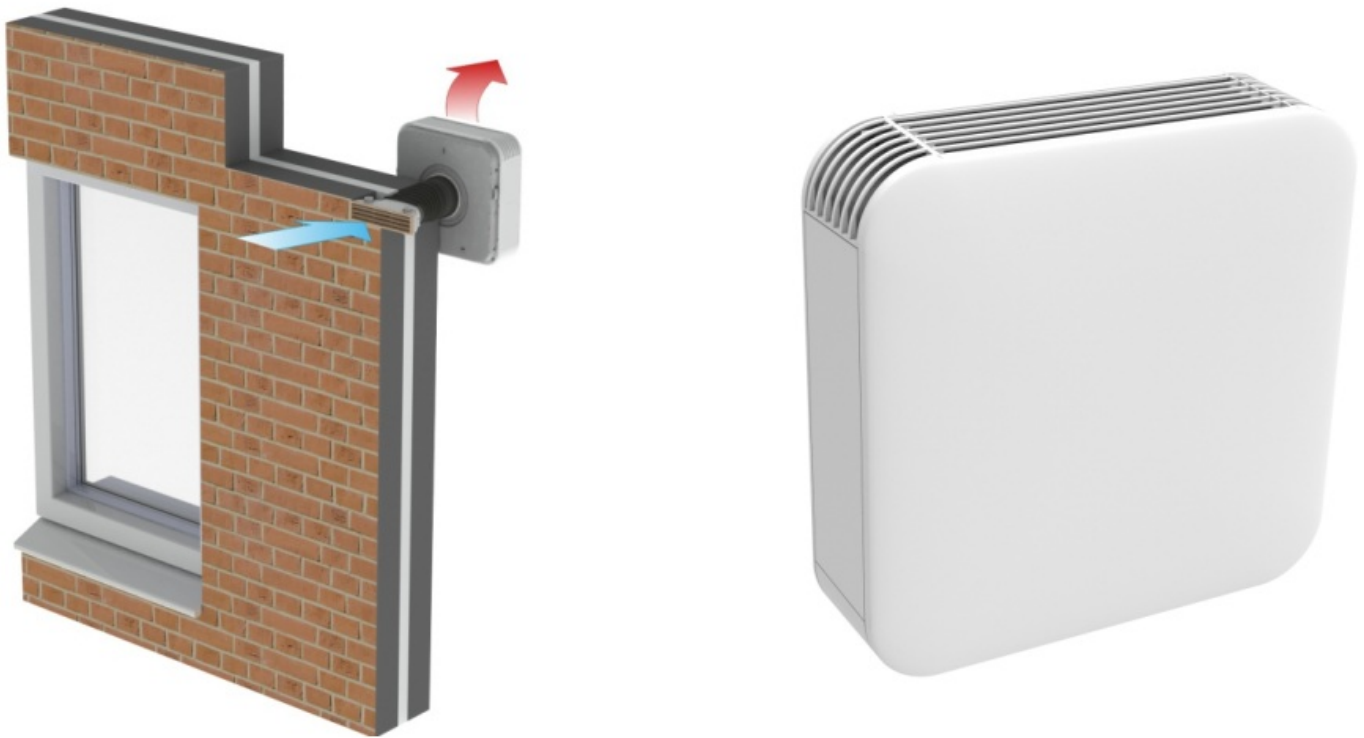

**warning:** Please note! The air supply opening must always remain open and unimpeded!

### Operation ClimaRad S-Fan+

The ClimaRad S-Fan+ can be operated via the control panel on the bottom of the unit in combination with the paired room thermostat.



## Function keys ventilate

AUTO



- **Automatic control.** Room ventilation is automatically controlled by your ClimaRad S-Fan+, which ventilates based on CO measurement and RV. Press 2 to switch off the heating function.
- **Manual:** manual ventilation with outside air:



You can set your desired ventilation speed using the + and – buttons on your control panel. After a period of 4 hours, the ClimaRad S-Fan+ switches back to automatic control. Use this function in summer, for example, when you want to lower the temperature in your heated room by a few degrees at night (summer night ventilation).



- **Comfort mode.** The ClimaRad S-Fan+ preheats the outside air to 12°C for a period of 8 hours.

AUTO



AUTO



- **Air quality.** Increase or decrease the desired air quality.



## Function keys heating and ventilation



**Heating.** The S-Fan+ will heat the room to the temperature set on the room thermostat. The room is ventilated based on CO.



**Heating rate.** Increase or decrease fan speed to heat faster or slower.

## Function keys general



**Pause/Off.** Use this function if you (temporarily) do not want to ventilate. After a period of 4 hours, the ClimaRad S-Fan+ switches back to the automatic setting. When the button is pressed for 5 seconds, the unit switches off. In case of emergencies you can use this function to switch off the device.



**Child lock.** The child lock will be activated when you press and hold the three buttons on the panel for 4 seconds.


- **Child lock.** The child lock is switched on. Press and hold the three buttons for 4 seconds to switch it off.

- **Malfunction.** A malfunction has occurred. Contact your technician or housing corporation.

- **Dirty filter.** Replace the air filter or contact your technician or housing corporation. After replacement, press and hold the + and – buttons for 6 seconds.

- **Pairing.** The ClimaRad S-Fan+ can be linked to other ClimaRad products. Press the buttons briefly and simultaneously.

## Switch off

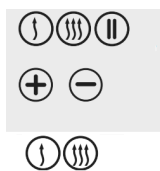

- Press 4 seconds simultaneously
- Press for 6 seconds
- Press briefly and simultaneously

Climarad B.V. – Lübeckstraat 25 – 7575 EE – Oldenzaal – NL – [info@climarad.com](mailto:info@climarad.com) – [www.climarad.co.uk](http://www.climarad.co.uk) – tel. +31 541 358130

## Documents / Resources

	<p><a href="#">climaRAD S-Fan+ (with Heating Element) Incl. Room Thermostat</a> [pdf] Instructions S-Fan, with Heating Element Incl. Room Thermostat</p>
--	--

Manuals+.